



closer_{to}nature®

baby food steamer blender

INSTRUCTIONS FOR USE

IMPORTANT NOTICE FOR CLEANING AND REASSEMBLY

The knife blade, sealing ring and locking ring are not dishwasher safe
If you notice any wear and tear to your unit, discontinue to use and contact

Careline free on


AUSTRALIA: 1800 096 938

NEW ZEALAND: 0800 726 436

 
IMPORTANT WARNINGS!

 
 
 
 
 

 

 
 
 
 
 
 
These instructions can also be found at www.tommeetippee.com.au

Keep this instruction sheet for future reference as it includes important information.

- This appliance is intended for household use only. Do not use outdoors.
- Before plugging in the Steamer Blender for the first time ensure that the voltage is compatible with your electricity supply by checking the label on the base of the unit.
- Ensure water has been added to the unit before switching the unit on.
- Do not immerse in water. To protect against fire, electric shock and injury to persons. Do not immerse cord, plugs or other parts of the unit in water or other liquid.
- Misuse of the product may result in the risk of fire, electric shock and/or personal injury.
- This appliance can be used by children aged from 14 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged 14 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 3 years. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with this appliance.
- User maintenance other than cleaning and descaling is not required for this product. Cleaning and user maintenance shall not be made by children without supervision.
- **The surfaces are liable to get hot during use.** 
- The heating element surface is subject to residual heat after use.
- Do not touch hot surfaces use handles and knobs.
- When in use the steamer blender contains hot water and steam. Keep hands away from steam vents as it can cause burns and scalds. Use in a well ventilated area.
- Ensure that the heating guidelines are followed to ensure that the food is not heated for too long.
- Always check food temperature before feeding. Always stir heated food to ensure even heat distribution and test the temperature before serving.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. If the supply cord is damaged it must be changed by a qualified person in order to avoid a hazard. If the damage is from new the unit must be returned to the manufacturer. If within a retail warranty period this product should be exchanged at place of purchase. The manufacturer will then be made aware. Any questions? Visit our website www.tommeetippee.com.au
- Always use on a flat heat resistant surface.
- Do not move appliance when in use.

- Do not let the cord hang over edge of kitchen work surface or touch hot surfaces. The product has been fitted with a cord wind on the base of the unit to allow you to adjust the length of the cord safely. It is recommended that the cord be kept as short as possible.
- Do not use any accessories other than those supplied with this appliance.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- Handle the knife blade carefully as it is extremely sharp. Care shall be taken when handling the sharp cutting blades, empty the bowl and during cleaning.
- Before first use, before each use and after every use wash the bowl and lid in warm soapy water or use a dishwasher (top shelf only) and dry thoroughly. Wash the knife blade in warm soapy water and dry thoroughly. The knife blade is not dishwasher safe.

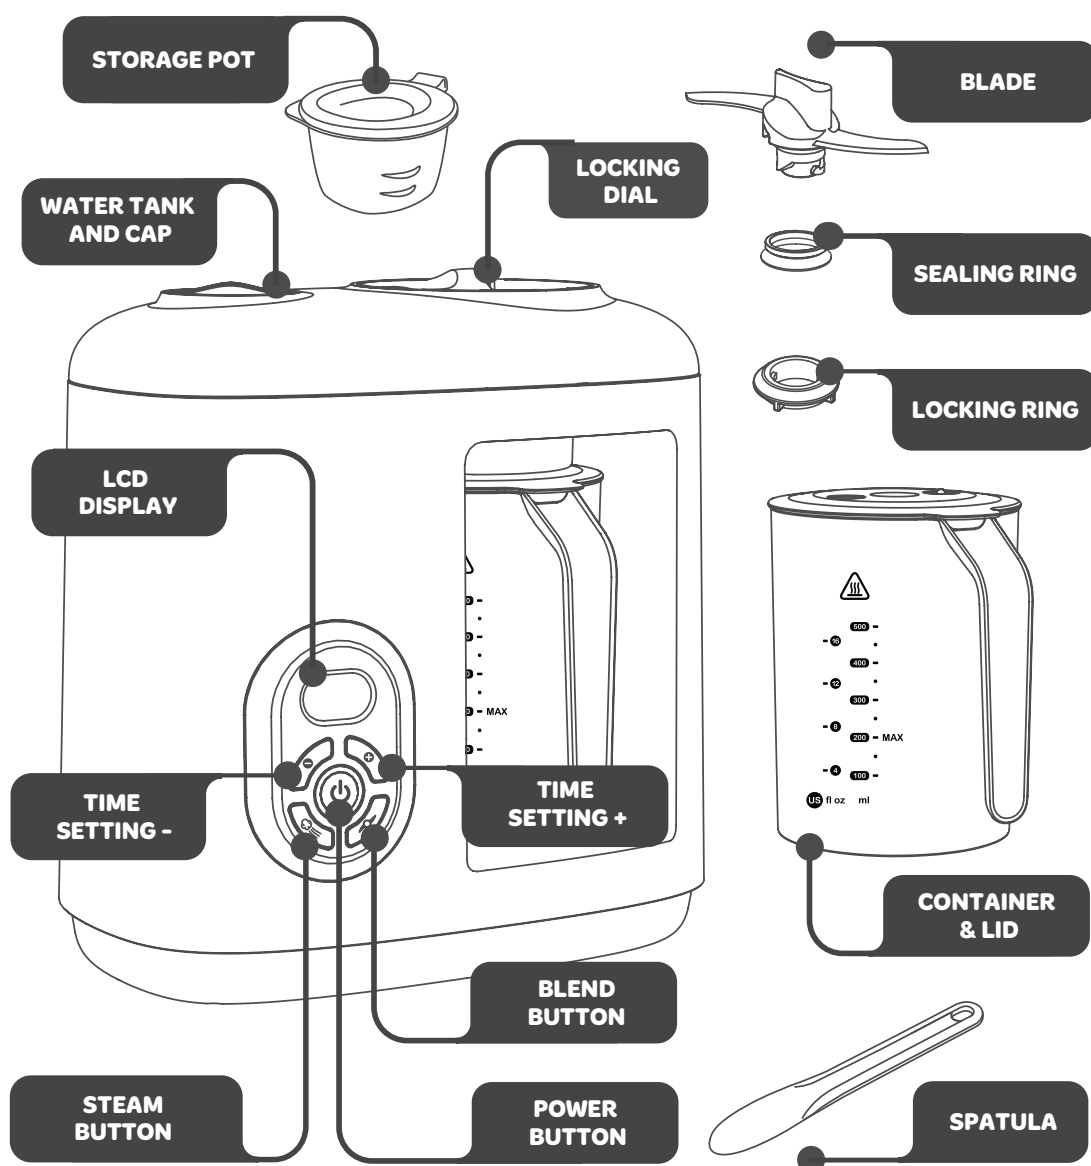

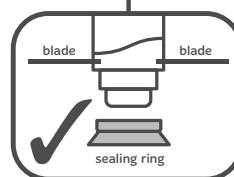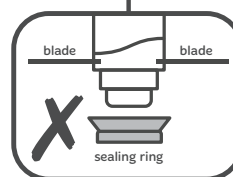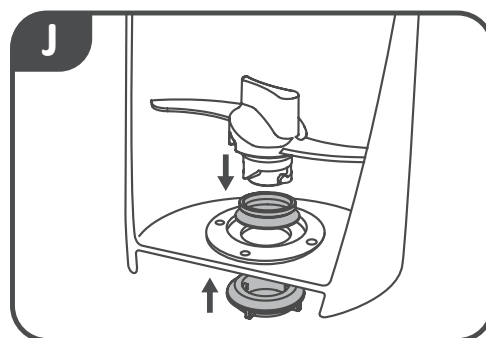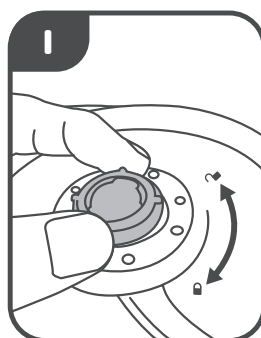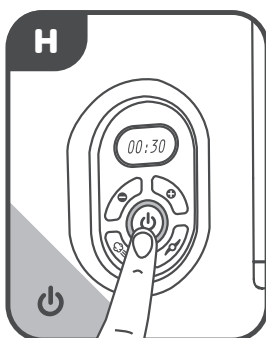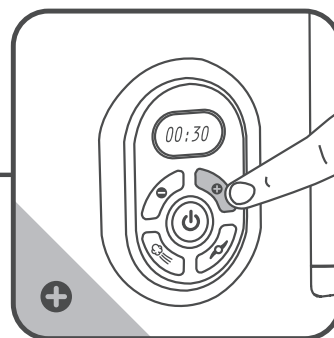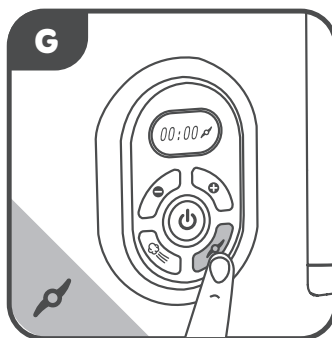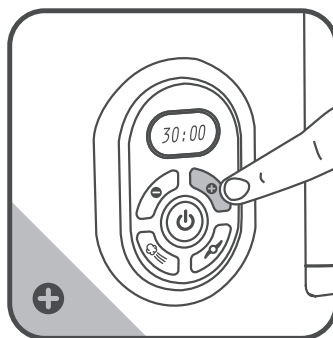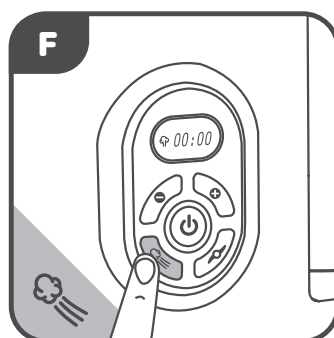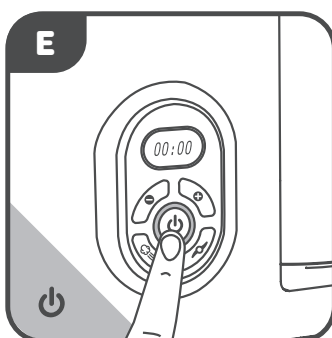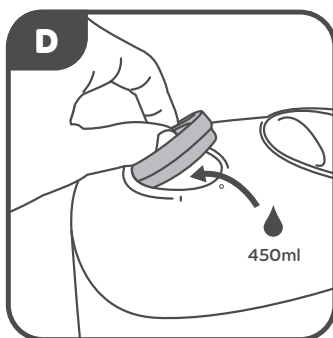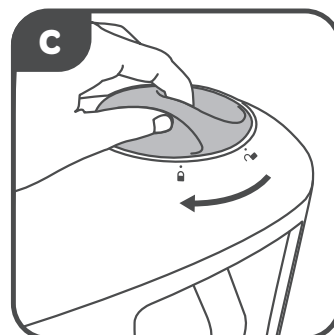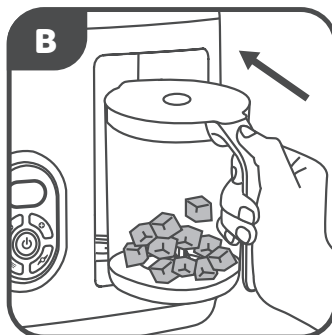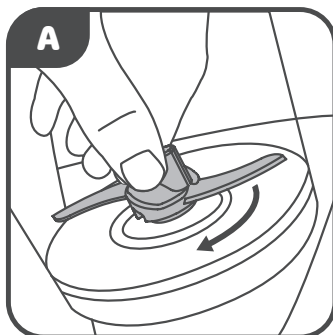

1. SETUP

Please refer to instructions leaflet before use and remember to clean and descale your unit regularly

1. Wash blade, container and lid in soapy water, dry and place unit on a clean, dry kitchen work surface.
To remove blade, hold the blade tab inside the unit while turning the locking ring on the bottom of the container. (I) This will remove the locking ring and the blade will split into two parts. To re-assemble, reverse these steps.

WARNING! Handle the knife blade carefully as it is extremely sharp.

Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

Place container with lid on in unit and lock in place using the locking dial. (B + C)

2. Fill water tank with 450ml of cold water and replace the cap. (D)
3. Plug unit into mains power supply, the power button LED will be flashing. Press the power button to turn on the unit. The power button LED will continue to flash and the LCD display will illuminate. (E)
4. Press the steam button and set the steam time to 30 minutes using the + buttons. (F)
5. Press the blend button and set the blend time to 30 seconds using the + buttons. (G)
6. Press the power button to start. (H)

The unit will now run the steam and blend cycle automatically.
7. When the cycle has finished the unit will beep, the LCD display will turn off and the power button will flash.

Turn off at the power supply, unplug the unit and allow unit to cool completely. Unlock container and remove residual water and clean container following instructions in the cleaning section. Discard any remaining water from the water tank by tipping the unit sideways over a sink.
8. The unit is now ready to use.

2. CLEANING & DESCALING

The descaling process will remove deposits of calcium and other minerals in the system that may affect its performance

CLEANING

Turn off at the power supply, unplug the unit and allow unit to cool down completely before cleaning.

Before first use, before each use and after every use wash the container and lid in warm soapy water or use a dishwasher (top shelf only) and dry thoroughly. Wash the knife blade, sealing ring and locking ring in warm soapy water and dry thoroughly. The knife blade is not dishwasher safe.

WARNING! Handle the knife blade carefully as it is extremely sharp. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

After every use wipe the entire base with a damp cloth but do not submerge in water.

Do not clean with abrasive cleaners or allow to come in to contact with solvents or harsh chemicals, damage could result.

DESCALING

We recommend carrying out the descaling process approximately every 4-weeks. If you notice limescale earlier than 4-weeks, descaling may be required sooner. Living in a hard water area can produce limescale quicker than other areas. You can find out your water quality via your water provider.

You may need to repeat this process if you find that limescale is still present.

If descaling after a steam cycle allow unit to cool down completely before descaling.

1. Discard any remaining water from the water tank by tipping the unit sideways over a sink.
2. Pour in 250ml of white vinegar.
3. Leave for at least 30 minutes, or up to 24-hours depending on the extent of the limescale.
4. Pour the white vinegar liquid down the sink. Rinse the water tank with cool water to remove any build up that came loose as a result of the descaling process and pour liquid down the sink. You may like to repeat this process to remove any residual build up or white vinegar.
5. Follow instructions under 'Set up' to perform a final cleaning cycle.

3. USAGE

For your child's safety always check food temperature before feeding

This unit can steam and blend vegetables, fruits (peeled and cored/pips removed), meats and fish (with bones removed). All food must be diced into approximately 1cm cubes before being placed into the container for cooking. Cooking times can be found in these instructions and for recipes visit tommeetippee.com.au

1. Place unit on dry kitchen work surface.
Place container with diced food in unit (B) and lock in place using the locking dial. (C)
Steam no more than 200gms in one cycle.
Fill water tank with 450ml of cold water and replace the cap. (D)
2. Plug unit into mains power supply, the power button LED will be flashing.
Press the power button to turn on the unit.
The power button LED will continue to flash and the LCD display will illuminate. (E)

3. TO SET AN AUTOMATIC STEAM TO BLEND CYCLE:

- i. Press the steam button and set the steam time using the +/- buttons. Maximum steam time of 30 minutes. (F)
- ii. Press the blend button and set the blend time using the +/- buttons. Maximum blend time of 5 minutes. (G)
- iii. Press the power button to start. The unit will now run the steam and blend cycle automatically.

When setting the automatic cycle, the blend time can be set first, but the unit will always start with the steam cycle first. During the automatic steam and blend cycle, the blades will rotate once every 2 minutes to move food around the container. When cooking meat, it is extremely important to pause the unit every 10 minutes and stir food thoroughly. This is to ensure even cooking.

The blend time can be set for 2, 4, 6, 8 or 10 seconds to control the texture of the food.

TO SET A STEAM ONLY CYCLE:

- i. Press the steam button and set the steam time using the +/- buttons. Maximum steam time of 30 minutes. (F)
 - ii. Press the power button to start. The unit will now run a steam cycle.
- To remove blade, hold the blade tab inside the unit while turning the locking ring on the bottom of the container. (I)
This will remove the locking ring and the blade will split into two parts.

WARNING! Handle the knife blade carefully as it is extremely sharp.

Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

TO SET A BLEND ONLY CYCLE:

- i. Press the blend button and set the blend time using the +/- buttons. Maximum blend time of 5 minutes. (G)
 - ii. Press the power button to start. The unit will now run a blend cycle.
- The blend time can be set for 2, 4, 6, 8 or 10 seconds to control the texture of the food.

4. When the cycle has finished the unit will beep, the LCD display will turn off and the power button will flash.
During steaming, water will collect in the container.
5. Turn unit off at the power supply and unplug the unit.
Disassemble blade from the container and lid and wash all parts in warm soapy water.
To remove blade, hold the blade tab inside the unit while turning the locking ring on the bottom of the container. (I)
This will remove the locking ring and the blade will split into two parts. To re-assemble, reverse these steps. When re-assembling the blade and sealing ring ensure the fan on the lip of the sealing ring is facing downwards. (J)
WARNING! Handle the knife blade carefully as it is extremely sharp.
Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
6. Allow unit to cool down completely before discarding remaining water from the water tank by tipping the unit sideways over a sink. If preparing another batch of food immediately after one cycle, re-fill the water tank with new water.

EXTRA FUNCTIONS

PAUSE

To pause while mid cycle, press and hold the steam button and blend buttons simultaneously for three seconds until the unit beeps. The power button will flash. This will pause the cycle indefinitely. The container can be removed during this time. Press the power button to continue the cycle.

CANCEL

To stop a cycle while mid cycle, press the power button for three seconds until unit turns off.

4. TROUBLESHOOTING

1. Do not use the unit for anything other than the intended use.
This unit is not suitable for:
 - Cooking rice, noodles and pasta
 - Heating liquids, soup or water
 - Chopping hard ingredients such as ice cubes and sugar lumps
 - Cooking frozen foods
 - Defrosting and reheating food or keeping food warm
 - Heating baby food jars
 - Heating bottles
2. Do not use before water tank is filled with water, unless using the blend only cycle.
3. During the automatic steam and blend cycle, the blades will turn to circulate the food.
The unit is designed to do this and is a normal part of cycle.
4. Once a steam and blend, steam only or blend only cycle has been set, if the container has not been assembled correctly and the power button is pressed to start a cycle, a continuous beep will sound.
5. The unit will not start operating if the lid is not placed on the container before locking into place.
6. If the container is loosened or removed from the unit during a cycle, it will automatically stop and a beep will sound for 10 seconds. The cycle will be paused and the appliance will return to standby state until the container is put back and fixed in place, to continue the cycle, press the power button.
7. In the unlikely event that the water tank boils dry during steaming, the unit will beep, stop automatically and display 'E00' on the LDC display. If this occurs, start a new cycle and replace the food. Unplug the unit, allow unit to stand for 2 minutes before filling the water tank with 450ml of cold water. Re-set cycle following the instructions in the usage section.

Model number: 1120. Voltage: 230V - 50Hz 630W.

Mayborn ANZ Pty Ltd.	Newborn Brands (NZ) Ltd.
(ABN 66 154 703 134)	PO Box 47-677
PO Box 475,	Ponsonby Auckland 1144
Mt Waverley VIC 3149	NEW ZEALAND
AUSTRALIA	

Mayborn Group is a business name of Mayborn ANZ Pty Ltd.

Copyright © 2015 Jackel International Limited

5. STEAMING TIMES

All times are approximate per 100gms. Steam no more than 200gms in one cycle.
The **MAX** fill line on the container should not be exceeded when using a blend only cycle.
Always check food is cooked and food temperature before feeding.

VEGETABLES

Potatoes	15min
Carrots	15min
Broccoli	15min
Courgette	15min
Cauliflower	15min
Pumpkin	15min

FRUIT

Apple	10min
Pear	10min
Oranges	10min
Peach	10min
Plum	10min

MEAT

Fish	15min
Chicken	25min
Veal / Beef	25min

When cooking meat, it is extremely important to pause the unit every 10 minutes and stir food thoroughly. This is to ensure even cooking

Every moment you spend with your baby is precious, so hours spent preparing meals and cleaning up may not be high on your list.

To help with your weaning journey

more information about the Tommee Tippee Closer to Nature Baby Food Steamer Blender, and recipes go to www.tommeetippee.com.au or www.tommeetippee.co.nz

Any questions?
Visit our website www.tommeetippee.com.au or www.tommeetippee.co.nz
or call us FREE on
AUSTRALIA: 1800 096 938
NEW ZEALAND: 0800 726 436

tommeetippee.com.au
tommeetippee.co.nz