

# Capella

BP 2620 - COMPACT

## ⚠ WARNING ⚠

Safety guidelines and instructions must always be followed before making use of this product,

please retain these instructions for future reference.

This product complies with product standard **AS/NZS 2088:2000**

**WARNING: TO AVOID INJURY OR DEATH:**

**PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.**

**ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.**

**DO NOT LEAVE CHILDREN UNATTENDED.**

**SECURE THE CHILD IN THE HARNESS AT ALL TIMES.**

**DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.**

**MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.**

**USE THE HARNESS AT ALL TIMES.**

**WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAP AND/OR BUCKLE.**

The harness can form loops which may be a strangulation hazard. Never leave a harness connected when not fitted to a child in the stroller

Care should be taken if the stroller is to be used on stairs or escalators.

**FOLLOW THE MANUFACTURER'S INSTRUCTIONS.**

To avoid serious injury always use the harness provided to secure the child.

(Adjust the straps to suit the body size of your child)

Care should be taken whilst folding and unfolding stroller to prevent fingers being trapped. Ensure your child's fingers, hands and all other body parts are clear from any moving

part when adjusting the seat or handle on your stroller.

This stroller should not be used near an open fire or an exposed flame.


It is unsafe to use accessories other than those supplied or approved by Capella.

THE MAXIMUM WEIGHT FOR THE SEAT UNIT IS 18KG

THE MAXIMUM WEIGHT FOR THE BASKET IS 5KG

THE MAXIMUM TOTAL WEIGHT FOR THE STROLLER IS 23KG

## How to Unfold

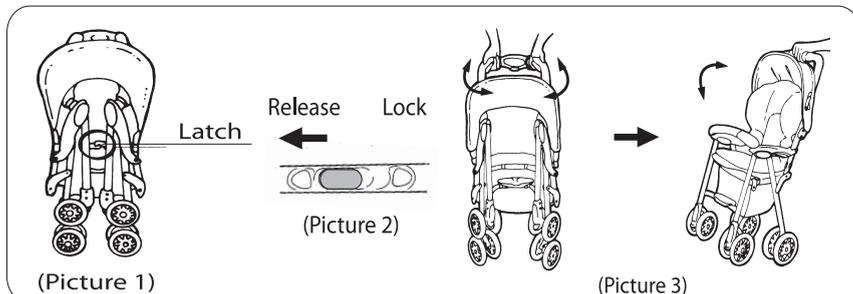

**STEP 1. Release the latch (picture 1)**

**STEP 2. Apply pressure to each side of the handle Bar outwards.**

**STEP 3. Set release on the Handle Bar (unlock) (picture 2)**


**STEP 4. Push the handle upwards as well as pushing backwards whilst pressing the handle button (picture 3)**




### WARNING

\*While in use, always set the handle in the lock position.  
\*Make sure the stroller is fully latched.

\*Make sure that the guide holder is placed under the holder.

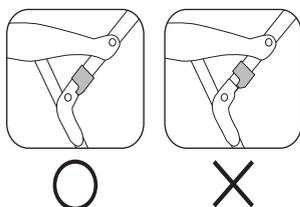


## Adjusting the Armbar

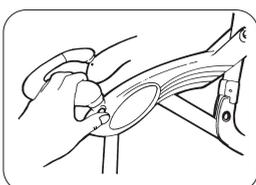


1. **To Assemble** - Push the arm bar into the armrest until it clicks in.  
2. **To disassemble** - Detach the arm bar from the armrest whilst pressing the release buttons at the same time. These are located on both sides of the armrest.

## PARTS

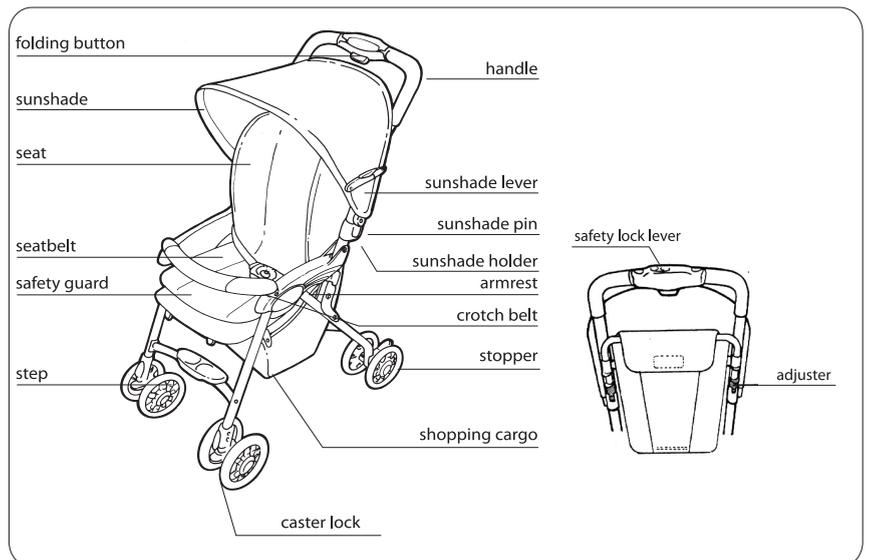


## Adjusting the Backrest

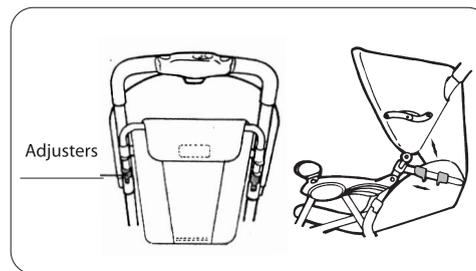


**STEP 1. Squeeze the back adjusters**  
**STEP 2. Adjust the backrest to the desired position.**

## Adjusting the Wheels

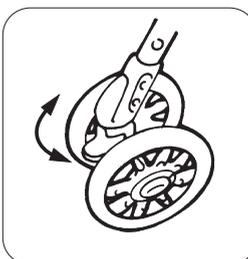

\* The front swivel lock should be used on uneven surfaces such as grass, stone or gravel.  
\* Push Button down be in swivel mode..  
\* Raise the button up to lock the swivels.  
\* Turn the swivel to ensure that it is locked or released.

## How to use the Brakes

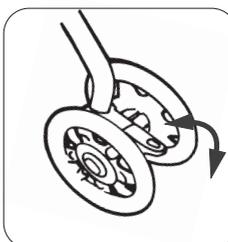


\*To Apply the Brakes - Push the brake lever downwards.  
\* To release the brakes - Lift the brake lever upwards.



### WARNING

\* PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.  
\* ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

## Adjusting the Footrest

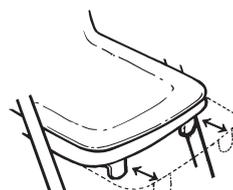


\* The length of the Footrest can be Adjusted by moving the adjuster under the footrest.

# Capella


BP 2620 - COMPACT

## How to use the Canopy

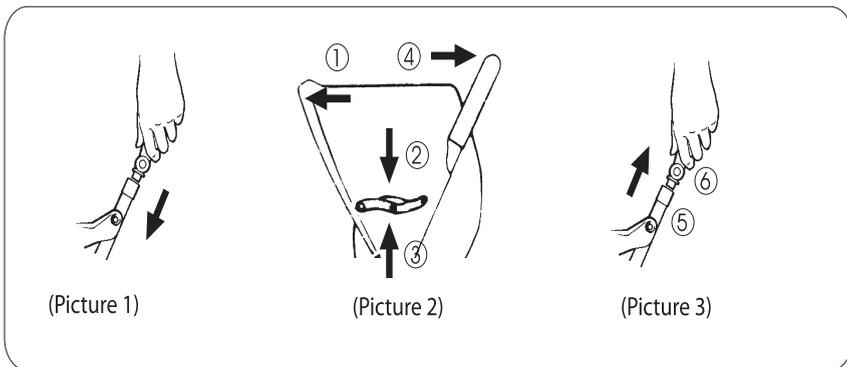


- \* To open the Canopy - Pull it forward (1) and lock the canopy latch (2) As shown in pictures 1 and 2.
- \* To Close the Canopy - Raise the canopy latch upwards (3) and push the canopy backwards As shown in Pictures 2 and 3.
- \* The Canopy is detachable you can remove it by lifting it out of the canopy hanger.

## To Fold the Stroller

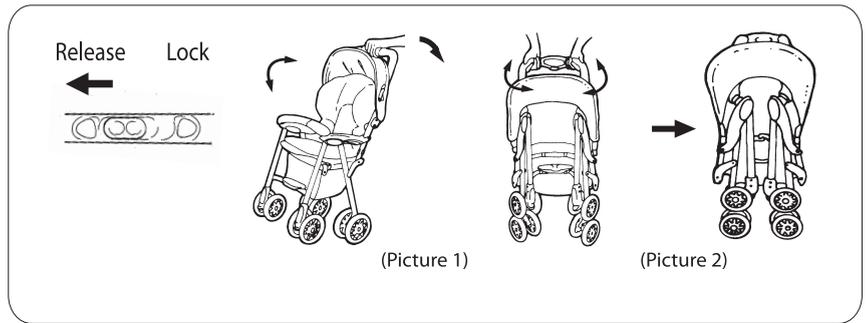

- STEP 1. Lock the Swivel Lock**
- STEP 2. Set the safety Lock on the handle to Release or Unlock.**
- STEP 3. Press the button on the handlebar, Whilst lifting up the safety guard (picture 1) fold the stroller in the forward direction until the automatic hooks lock. (Picture 2)**

## How to use the Basket

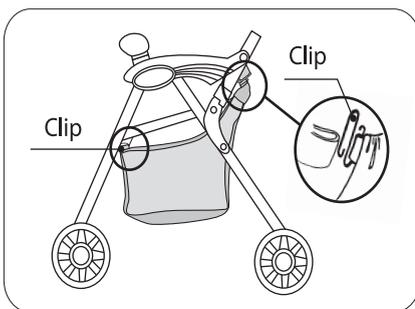


- \* To remove the basket, take off the front and rear clips on both sides.
- \* To attach the basket, reverse the procedure of removing the basket



**WARNING**  
Do not place more than 10lbs in the basket. It may Collapse



## Adjusting the shoulder straps

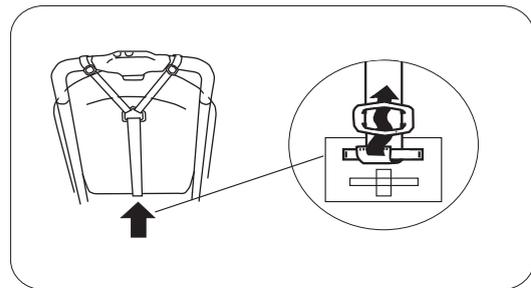

**STEP 1. To Assemble - Use the buckle, connect the shoulder strap under the seat strap. Wind the two upper straps around the handle and insert the straps under the seat strap as shown.**

**STEP 2. To Disassemble - Reverse the assembly instructions**

## 5-point harness

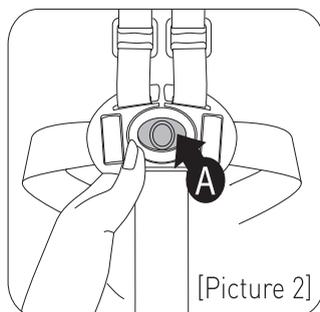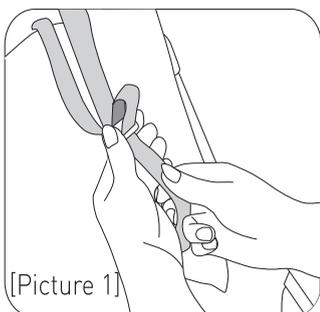

CAREFULLY PLACE YOUR CHILD INTO THE SEAT AND BRING THE SAFETY HARNESS AROUND THE CHILDS WAIST AND OVER THE CHILDS SHOULDERS. PLACE THE CROTCH STRAP BETWEEN YOUR CHILDS LEGS. TIGHTEN THE HARNESS TO BE SNUG AROUND THE CHILDS WAIST AND OVER ITS SHOULDERS. (Picture 1)  
ATTACH EACH OF THE SHOULDER STRAPS TO THE CROTCH STRAP BUCKLE WITH EACH END. REPEAT THIS FOR BOTH SHOULDER STRAPS. ONCE EACH SHOULDER STRAP IS ATTACHED ON THE WAIST BUCKLE INSERT THE WAIST STRAP END TO THE BUCKLE. REPEAT FOR BOTH SIDES. THEY SHOULD SNAP IN. (PULL ON THEM TO TEST)  
TO RELEASE THE HARNESS SQUEEZE THE CENTRE OF THE BUCKLES FOR BOTH WAIST STRAP ENDS. (Button A in Picture 2)

**WARNING**  
USE THIS HARNESS AT ALL TIMES

**WARNING**  
WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAP AND/OR BUCKLE

## Care and Maintenance

ALL CAPELLA PRODUCTS HAVE ONE YEAR WARRANTY FROM THE DATE OF PURCHASE.  
IT IS RECOMMENDED TO REGULARLY INSPECT AND MAINTAIN MOVEMENT OF LOCKING DEVICES AND SECURE OF ESSENTIAL COMPONENTS. REGULARLY CHECK ALL PARTS FOR WEAR AND TEAR. DO NOT USE SPRAY LUBRICANTS, SIMPLY WIPE CLEAN AFTER USE. THE SEAT LINER CAN BE CLEANED BY SPONGING WITH WARM SOAPY WATER AND A MILD DETERGENDISINFECTANT MAY BE USED IF DESIRED. STUBBORN MARKS MAY BE REMOVED WITH A NON ABRASIVE CREAM CLEANER. NEVER CLEAN WITH ABRASIVE, AMMONIA BASED, BLEACH BASED OR SPIRIT TYPE CLEANERS. IF THE WHEELS BECOME DAMAGED OR WORN DISCONTINUE USE AND REPLACE.  
FABRIC CARE -  
- HAND WASH ONLY  
- DO NOT BLEACH  
- DO NOT TUMBLE DRY  
- DO NOT IRON-  
- DO NOT WRING  
- DO NOT DRY CLEAN