


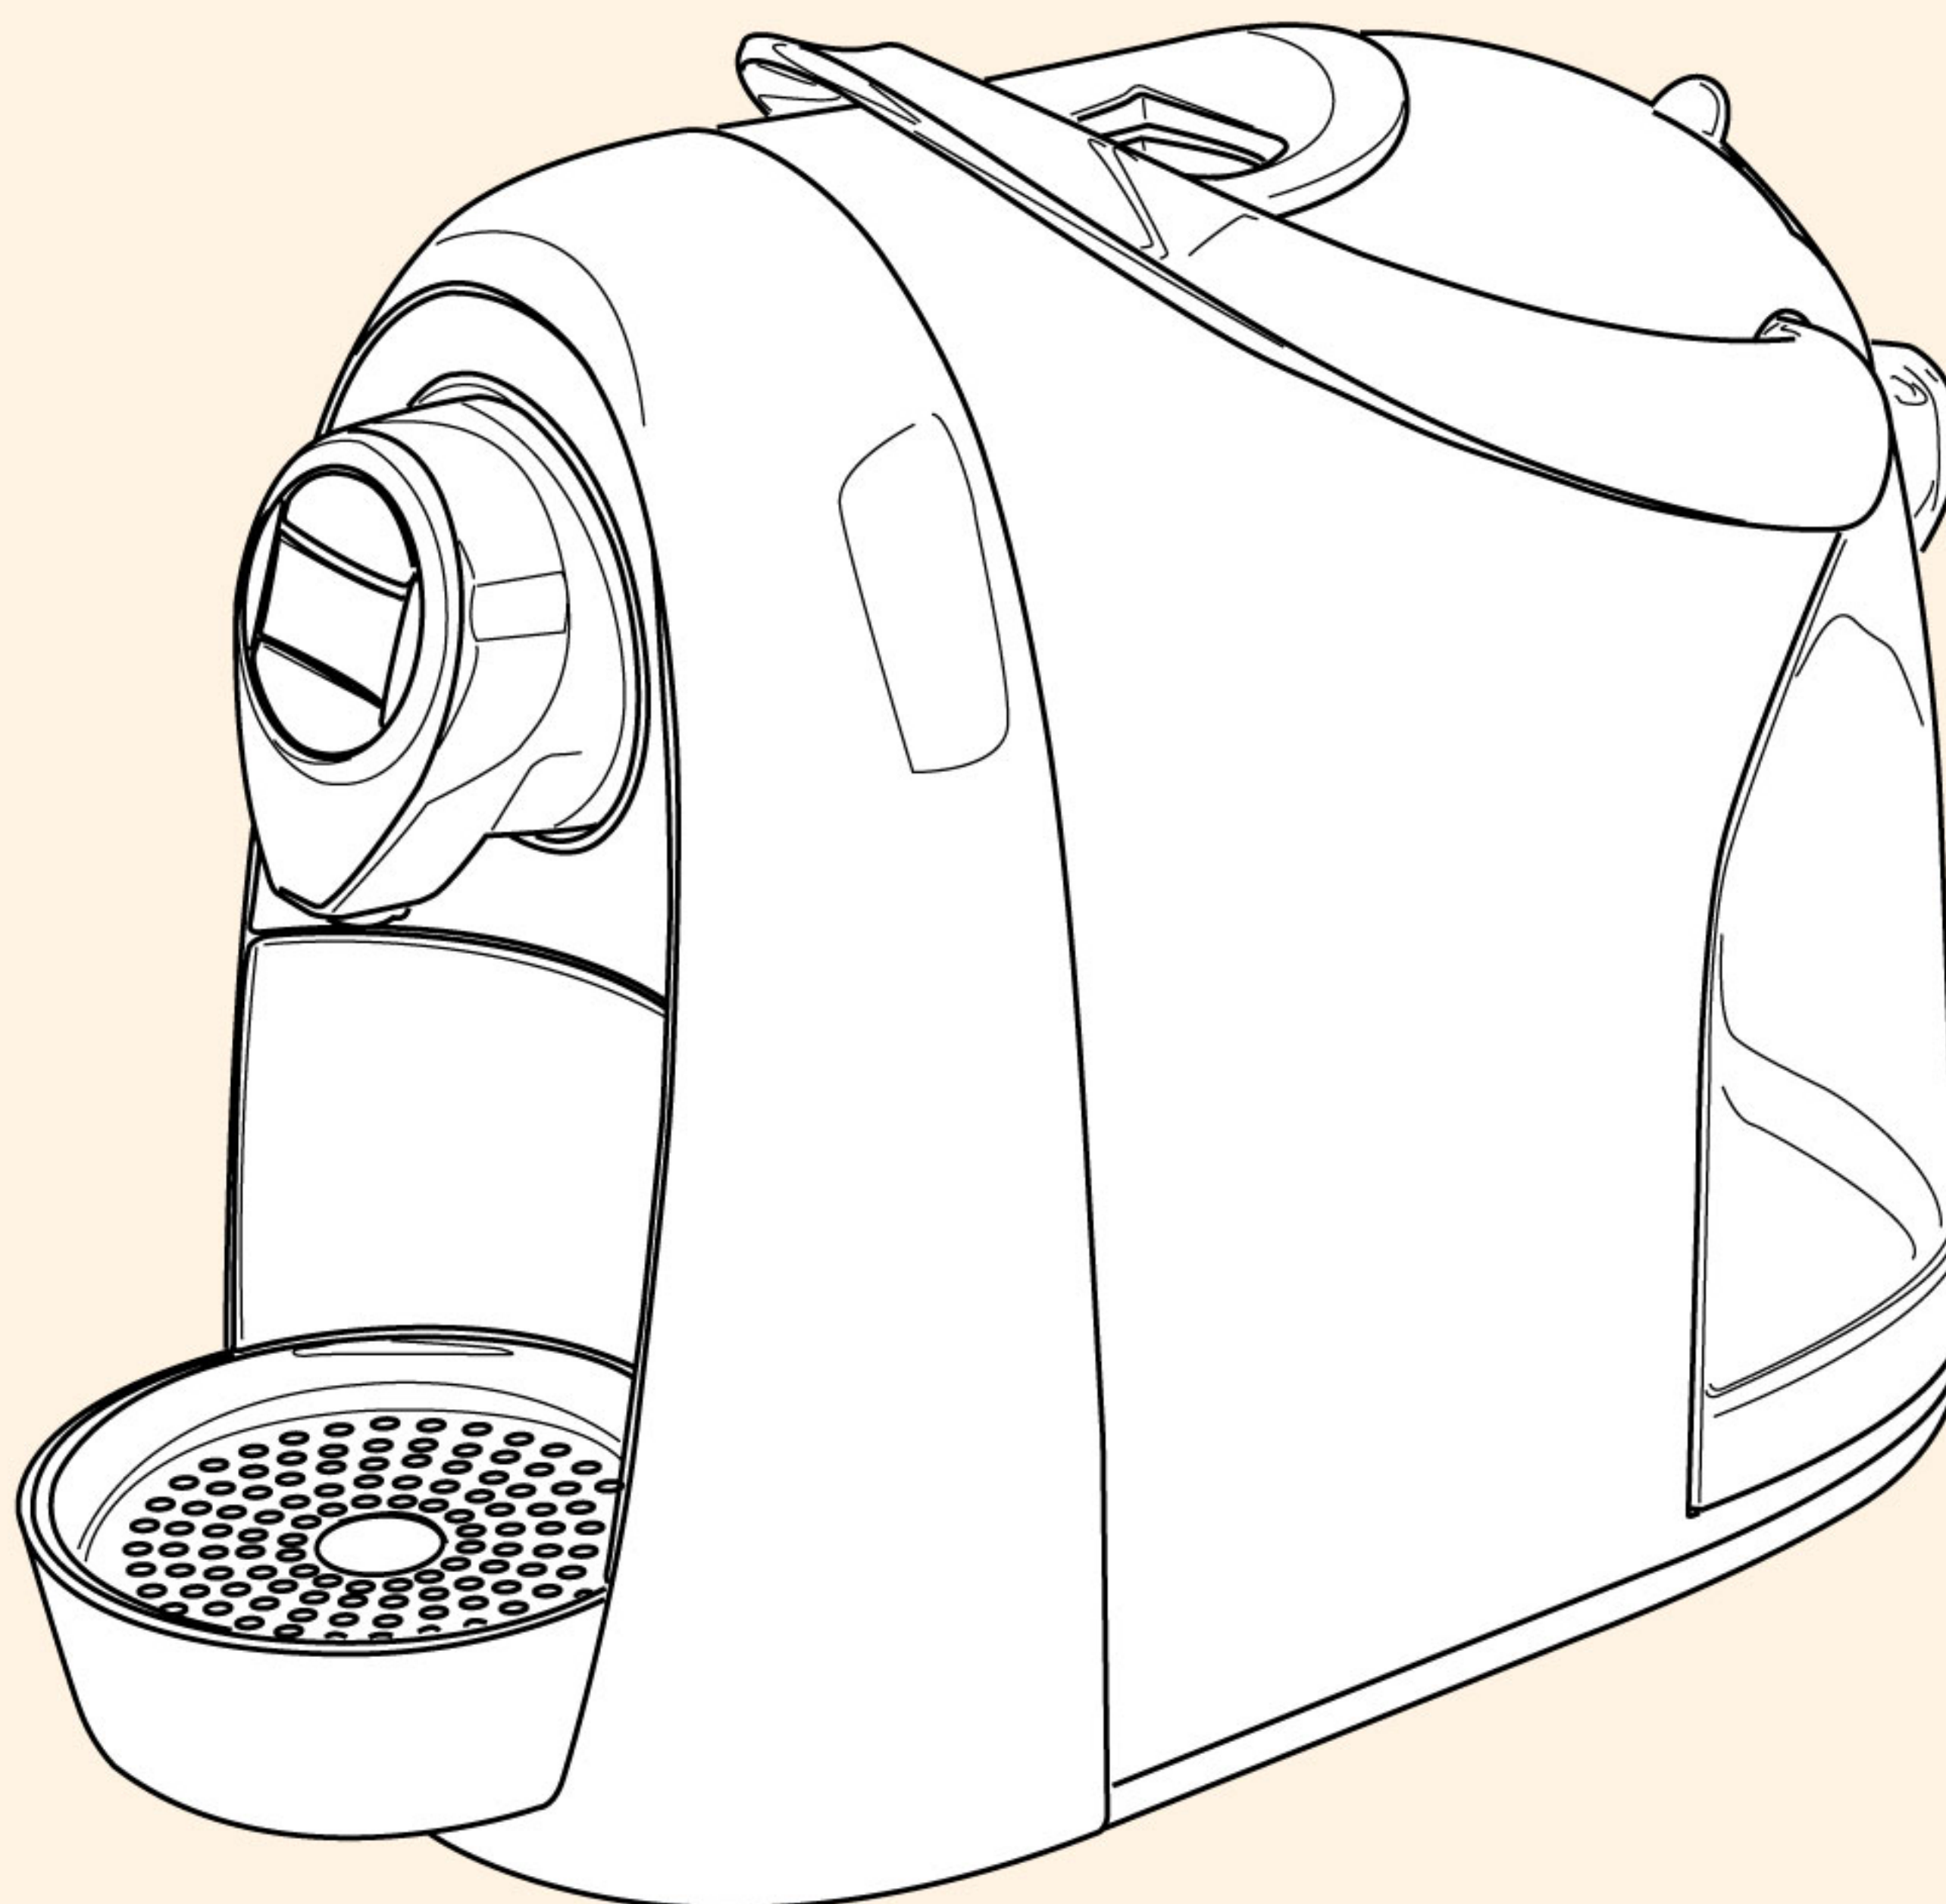

Instruction book



Model
S04 / P04

Table of Contents

4	Adjusting the cup/mug height	13
5	Brewing coffee	14
6	Preparing other beverages	15
7	Programming the quantity of coffee in a cup	16
9	Daily maintenance	18
10	Descaling the machine	19

Main topics

Safety warnings	4
Instructions for use and disposal	6
Your Caffitaly System contact	6
Intended use	7
Follow the instructions (Symbols)	7
Description	8
1 First use or after a long period of disuse	9
2 Turning on the appliance	10
3 General operating indications	10
4 Adjusting the cup/mug height	13
5 Brewing coffee	14
6 Preparing other beverages	15
7 Programming the quantity of coffee in a cup	16
8 Saving energy	17
9 Daily maintenance	18
10 Descaling the machine	19
11 Draining the appliance	23
12 Troubleshooting	24
13 Technical data	25



Safety warnings


Please keep these instructions safe.




It is necessary to pay attention to these warnings in order to avoid the risk of personal injury and damage to the appliance.



Do not use the appliance if it is damaged in any way. At the first sign of defects or unusual noises or smells, turn off the appliance and unplug it. In such cases contact an Authorized Service Center.

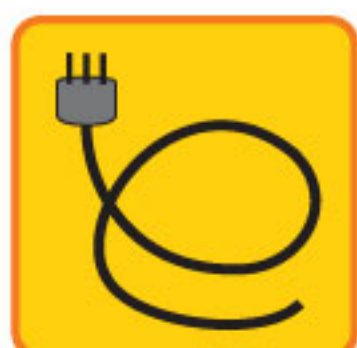

Only use the appliance if the power cord is intact. If the cord is damaged, it should be replaced: contact an Authorized Service Center. Danger of electric shocks.
Do not leave the power cord near hot surfaces, sharp edges or other sharp objects. When disconnecting the appliance, pull on the plug, not the cord; otherwise it may be damaged.

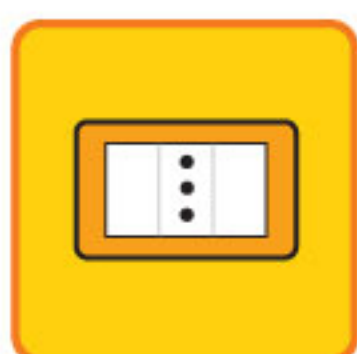

Only connect the appliance to power outlets complying with the requirements of law. Make sure that the power supply voltage matches the rating shown on the data plate on the bottom of the appliance.




To avoid the risk of fire, set the appliance on a flat, heat-resistant surface. Only use and store the appliance indoors.



Do not let the power cord dangle! Position the cord so there is no risk of tripping.



Do not allow the appliance to be used by children or persons with impaired mental, physical or sensory faculties or insufficient experience and/or skills, unless they are under the careful supervision and guidance of a person responsible for their safety. Children must be kept under supervision to prevent them from playing with the appliance.

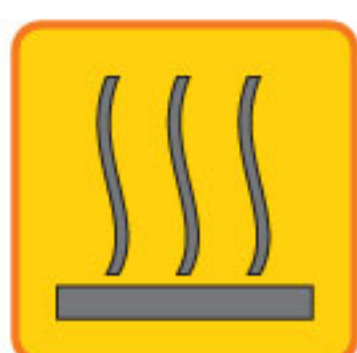

Always close the lever. Never open the lever while the appliance is operating. Always use the appliance with the drip tray and grill in place.



The quantity of coffee dispensed can be programmed up to a maximum of 250 ml.




Safety warnings



Never place your hands inside the capsule compartment. Danger of injury! Never remove parts of the appliance. Do not insert objects into the openings. This could cause electric shocks! Any operation that is not described in this instruction manual should only be performed by an Authorized Service Center!




Clean the appliance carefully and regularly. If it is not cleaned, the build-up that forms may be hazardous to your health. Unplug the appliance and allow it to cool before cleaning. CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

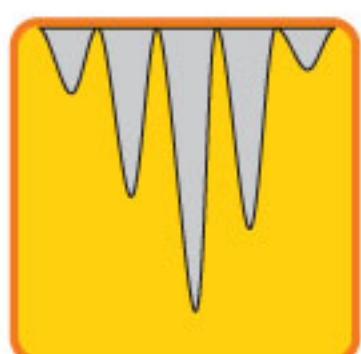

Descale the appliance regularly, following the instructions provided. If you do not, the appliance may be damaged and may become harmful to your health.



Make sure the electrical elements, plug and cord are dry. Never submerge the appliance in water. Protect the appliance from sprays and drips. Water and electricity together constitute a risk of electrocution.

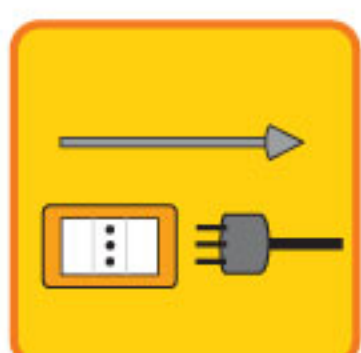

If you do not expect to use the appliance for a long period of time (leaving on vacation, etc.), unplug it.

Instructions for use and disposal



The appliance has been manufactured using high quality materials that can be reused or recycled. Dispose of the appliance in a suitable waste collection center.



When you decide to dispose of the appliance, unplug it from the power outlet. Then cut off the power cord as close to the body of the appliance as possible.



Directions for correct disposal of the product according to European Directive 2002/96/EC and Italian Legislative Decree no. 151 of 25 July 2005. At the end of its useful life, the product should not be disposed of with unsorted household waste. It should be taken to a suitable selective waste collection center set up by the local authorities or returned to a retailer who provides this service. Separate collection of an electric household appliance avoids a possible negative impact on the environment and health arising from improper disposal and enables the materials it is made of to be recovered so as to achieve significant savings of energy and resources. The crossed-out wheeled bin symbol applied on the product highlights the need to dispose of electric appliances separately. Improper disposal of the product by the user shall be subject to specific administrative sanctions as provided for under current regulations. The packaging is made from recyclable materials. Contact the competent authorities for information regarding local legislation.

Your Caffitaly System contact

info@mapcoffee.com.au

Intended use

The appliance is made to brew coffee and dispense hot water. It is intended for domestic use and must be used in accordance with these instructions. Use only Caffitaly System capsules. Any other use is to be considered improper. Use of the appliance in any manner other than as directed herein could cause harm to persons and void the guarantee. The manufacturer will not be responsible for injury or damage resulting from improper use of the appliance. This appliance is intended to be used in household and similar applications such as:- staff kitchen areas in shops, offices and other working environments;- farm houses;- by clients in hotels, motels and other residential type environments;- bed and breakfast type environments.

Prestar atención a las instrucciones (símbolos)




CAUTION

This is the safety warning symbol. It is used to call your attention to possible risks of personal injury. Abide by the safety messages provided in order to avoid possible injury or death.



NOTE

This is the symbol used to highlight some actions that will optimize use of the appliance.

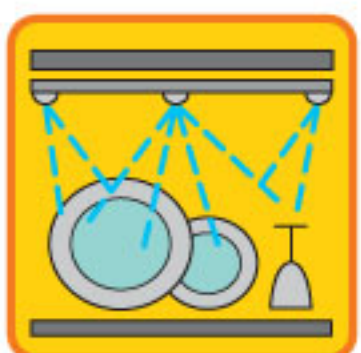

Dishwasher safe.



Not dishwasher safe.



This symbol is used to highlight a WHITE light indication.





This symbol is used to highlight a RED light indication.




This symbol is used to highlight an ORANGE light indication.

Description

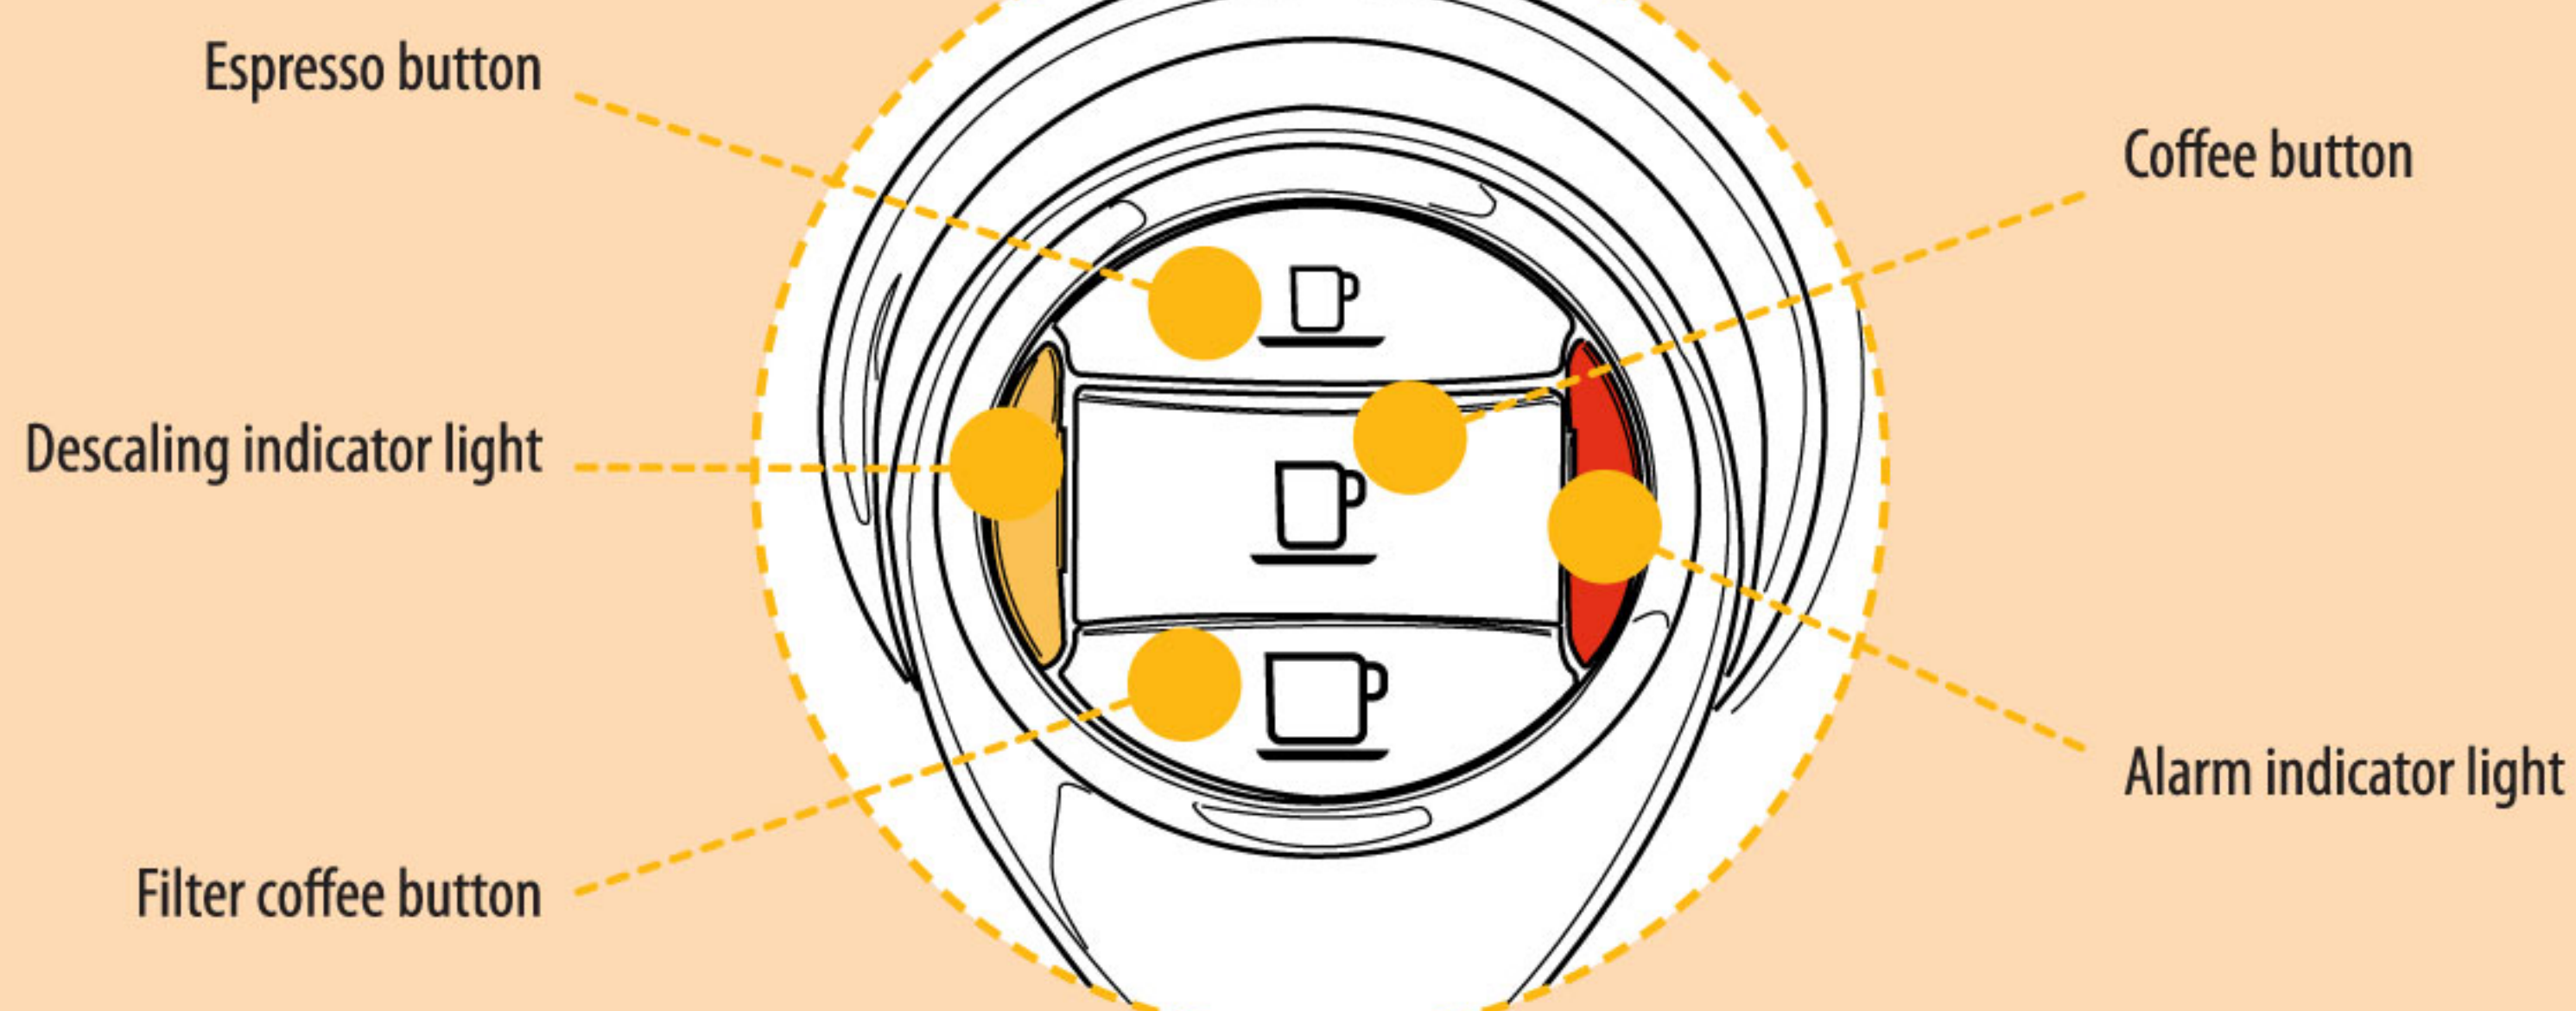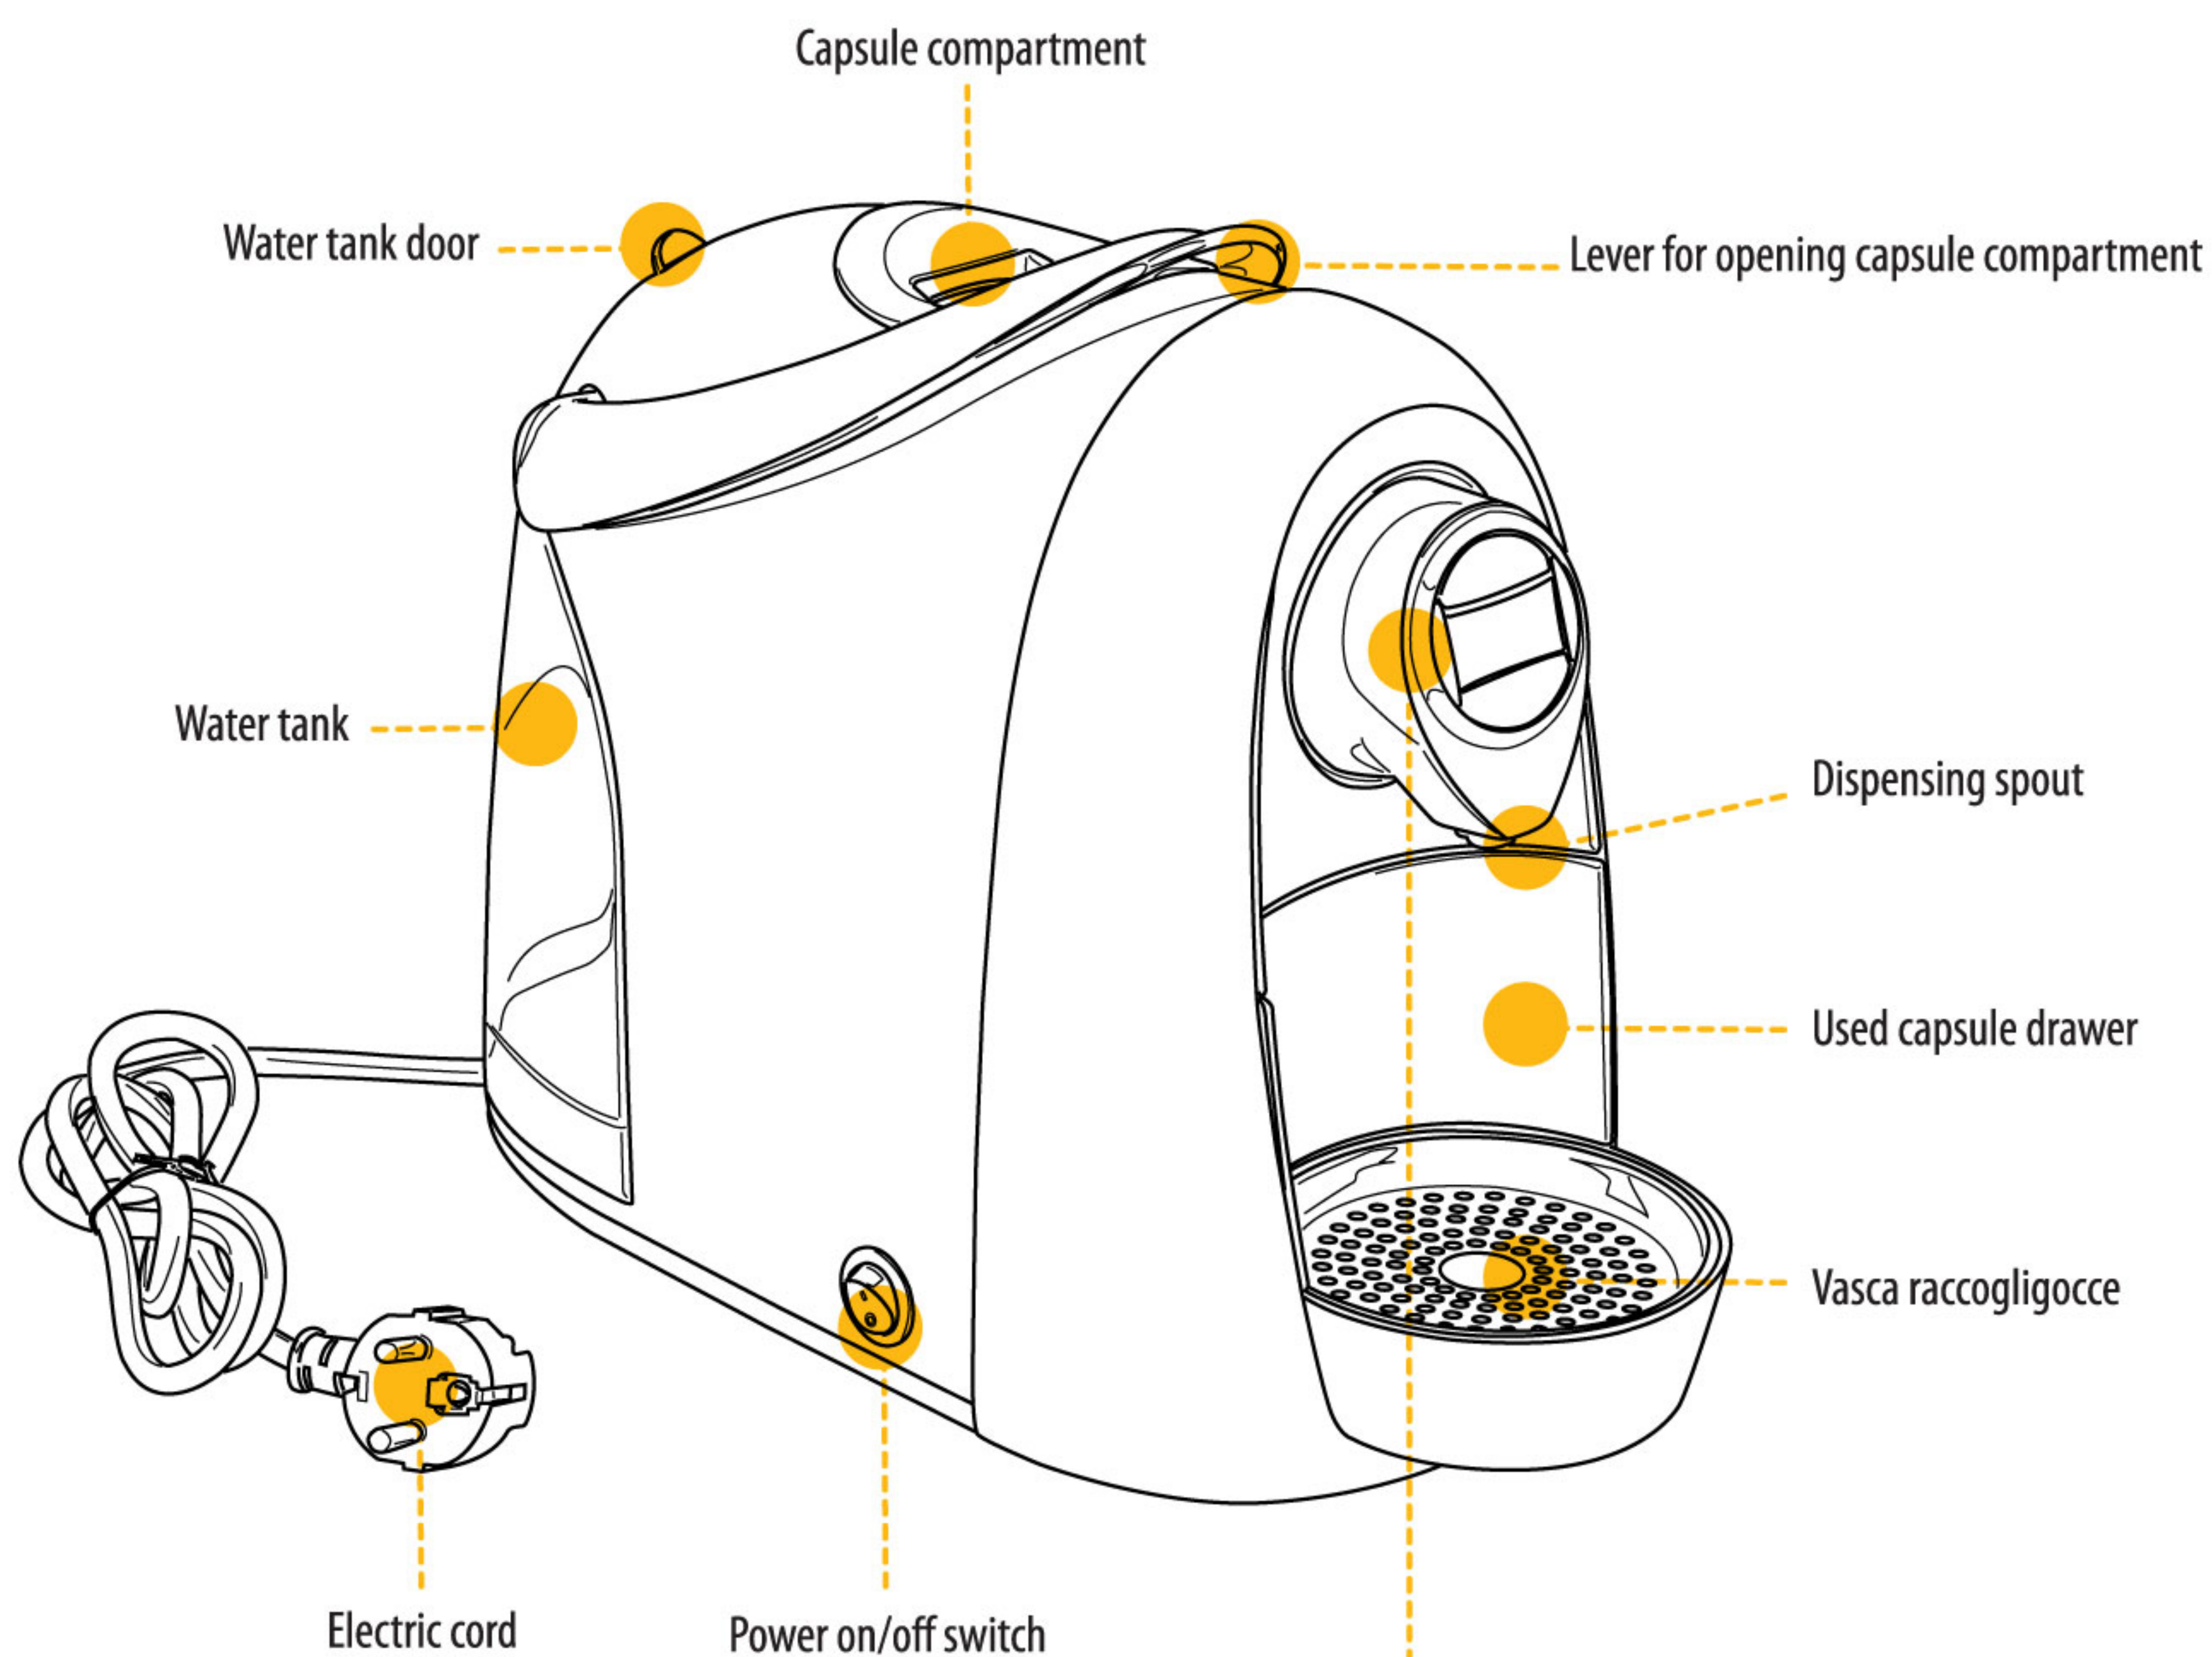


1**First use or after a long period of disuse.****1**

Fill the water tank with fresh, still water.

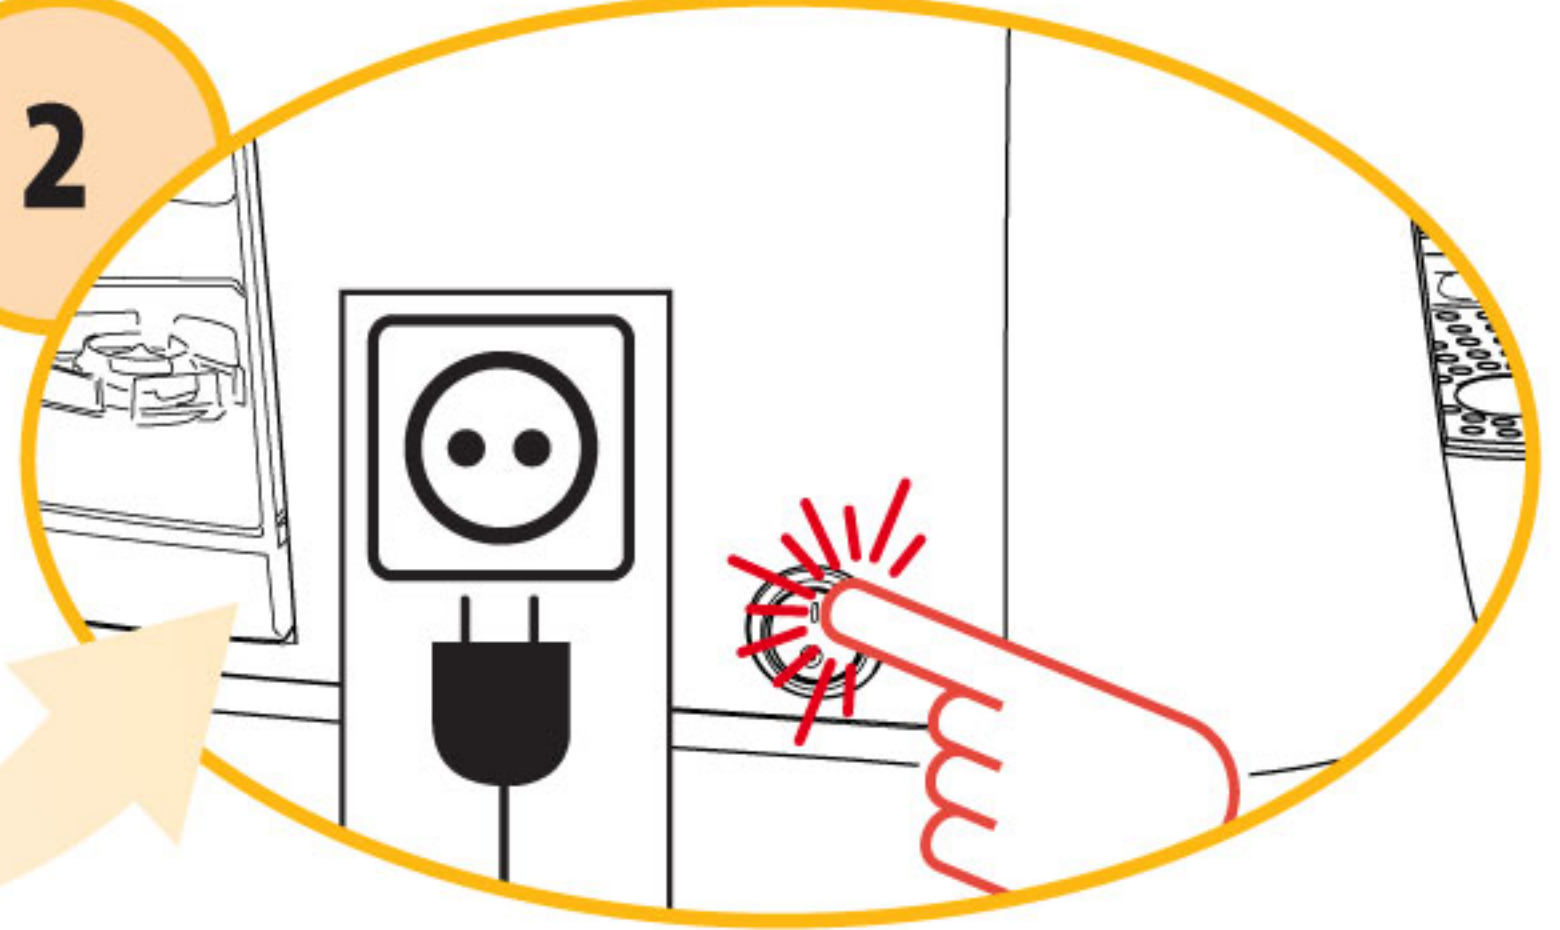2


Plug in the appliance and turn it on.

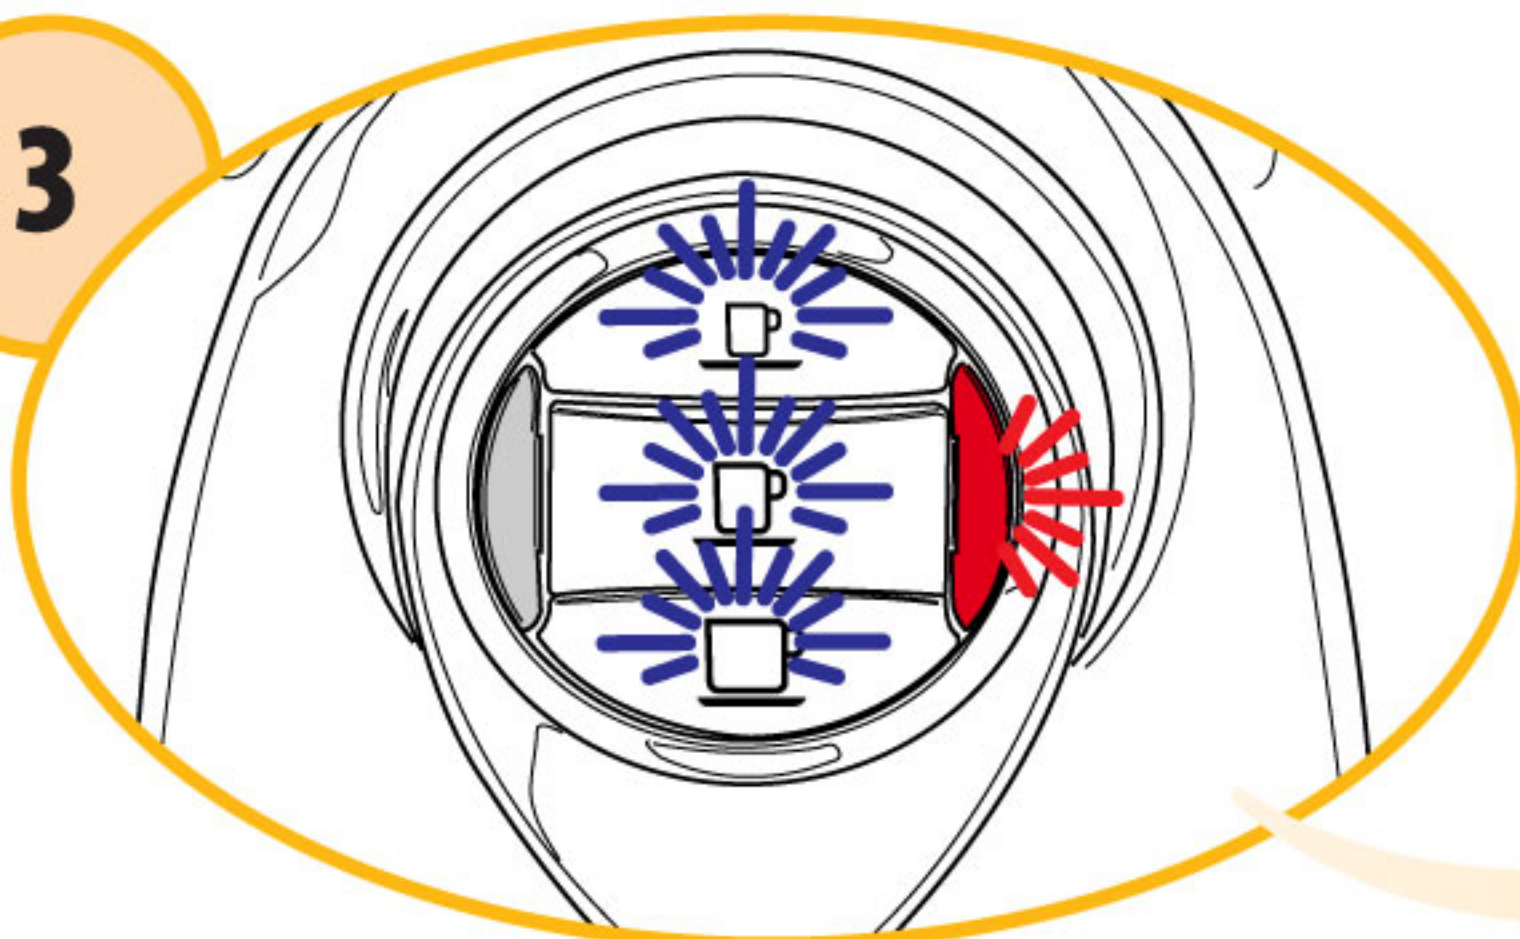3


The buttons and alarm indicator light will blink simultaneously.

4

Place an ample container under the dispensing spout.

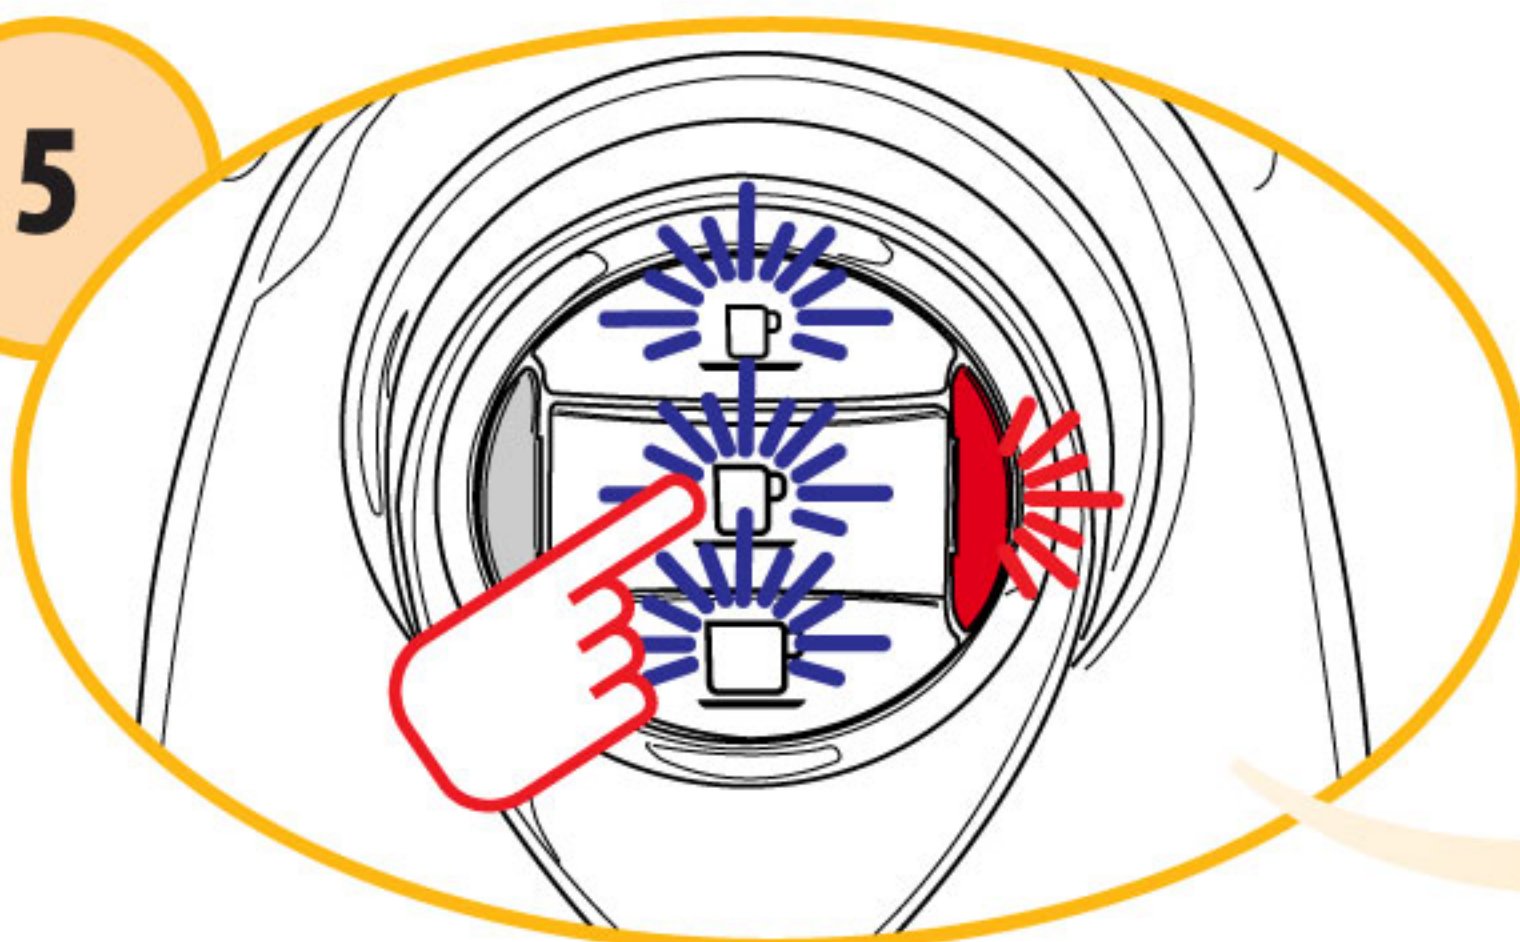5

Press one of the coffee buttons. Wait for the machine to complete the priming cycle and fill with water.

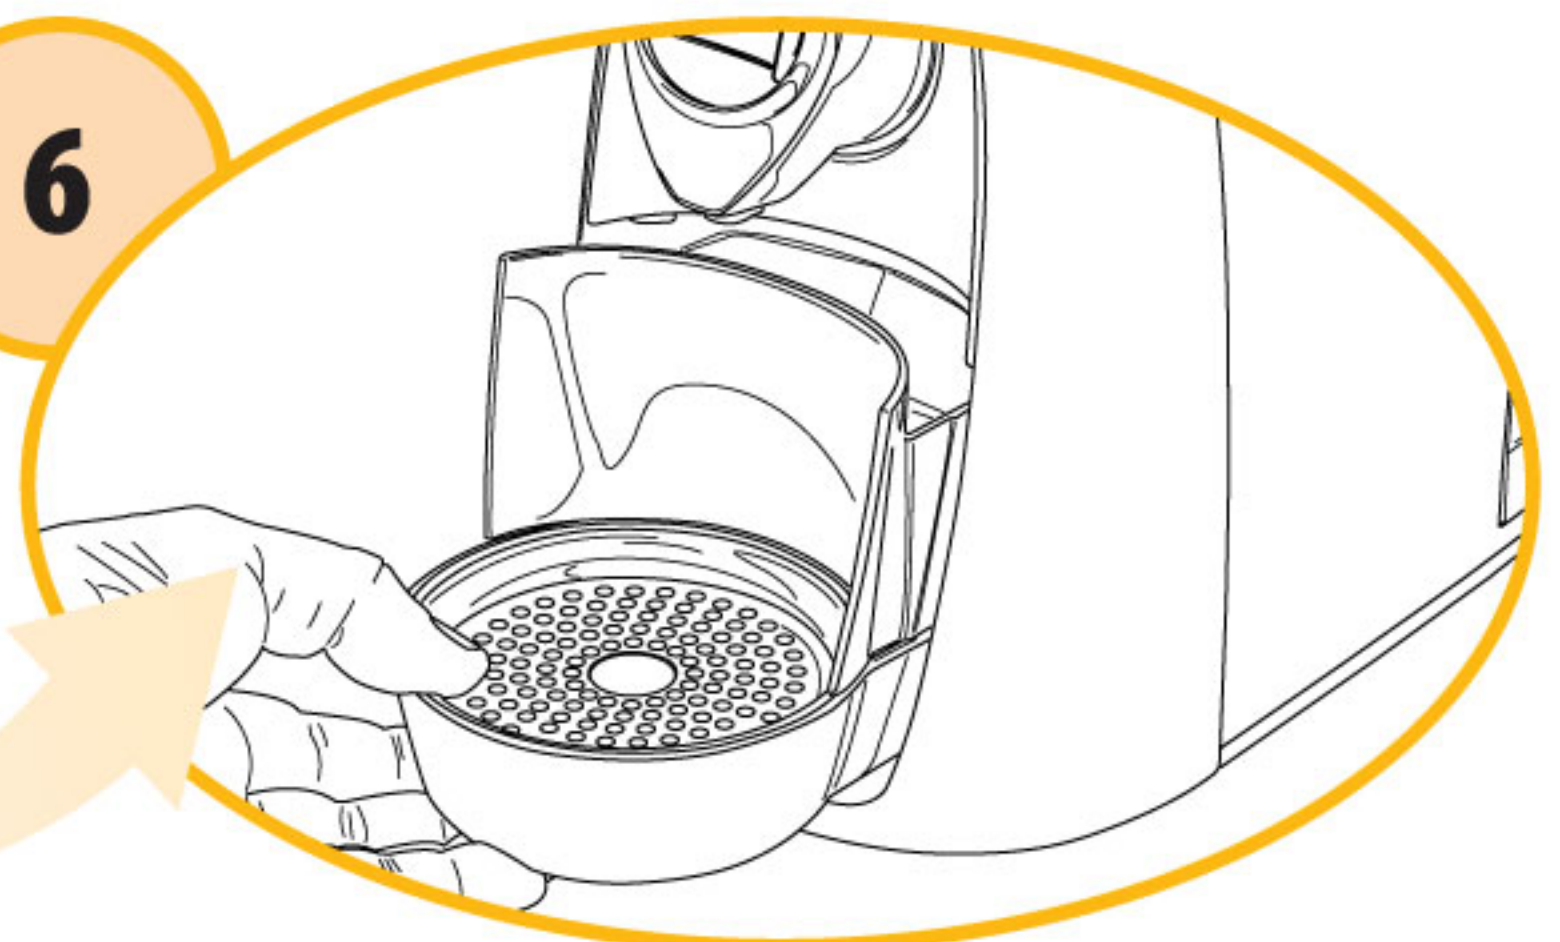
6

At the end of this operation, empty out the water from the used capsule drawer.

2


Turning on the appliance

1

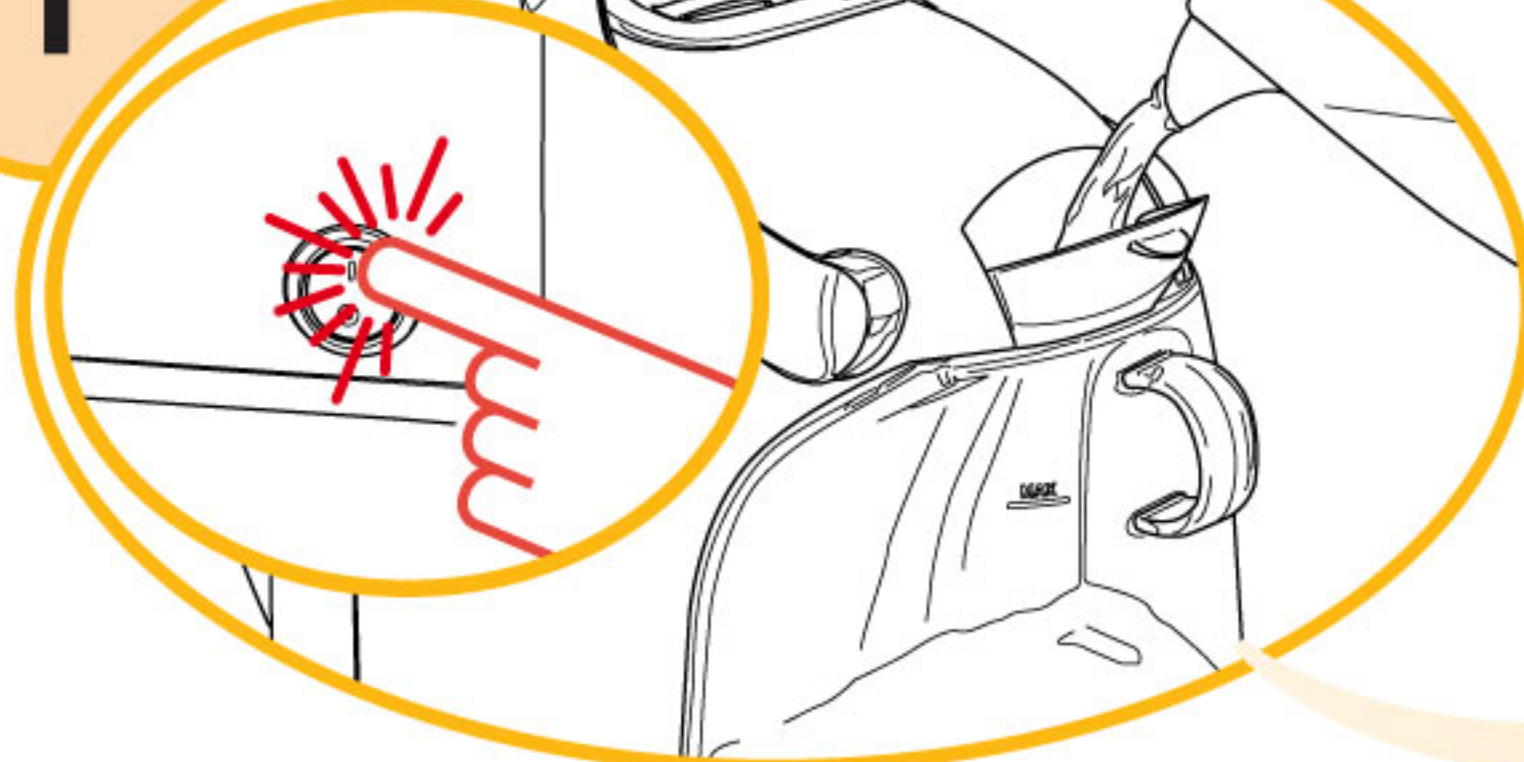

Fill the water tank with fresh, still water.
Turn the appliance on.

2

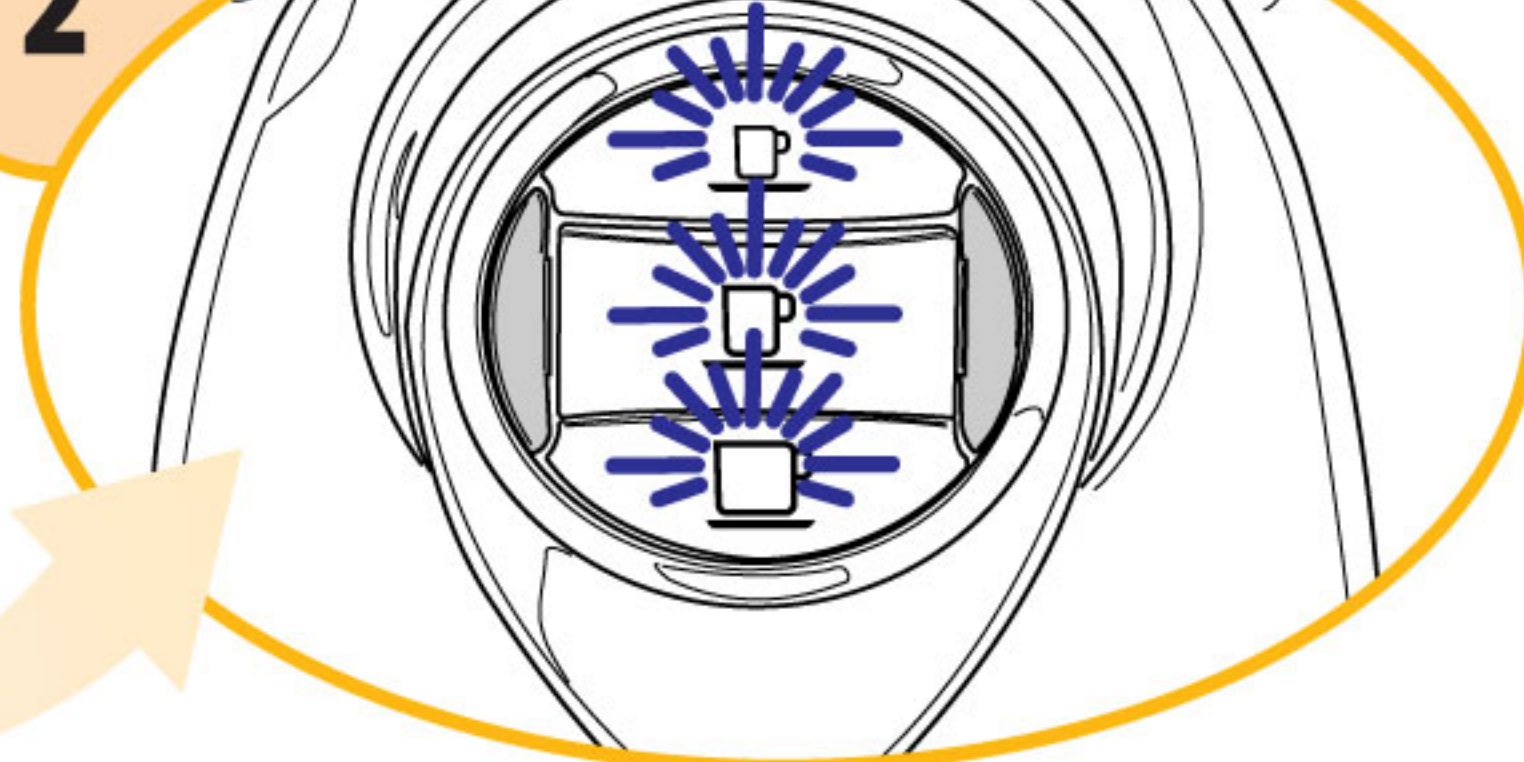


The buttons will blink simultaneously to indicate that the machine is warming up. When the buttons remain steadily lit, the appliance is ready for operation.

3

General operating indications

1ST DESCALING SIGNAL


1

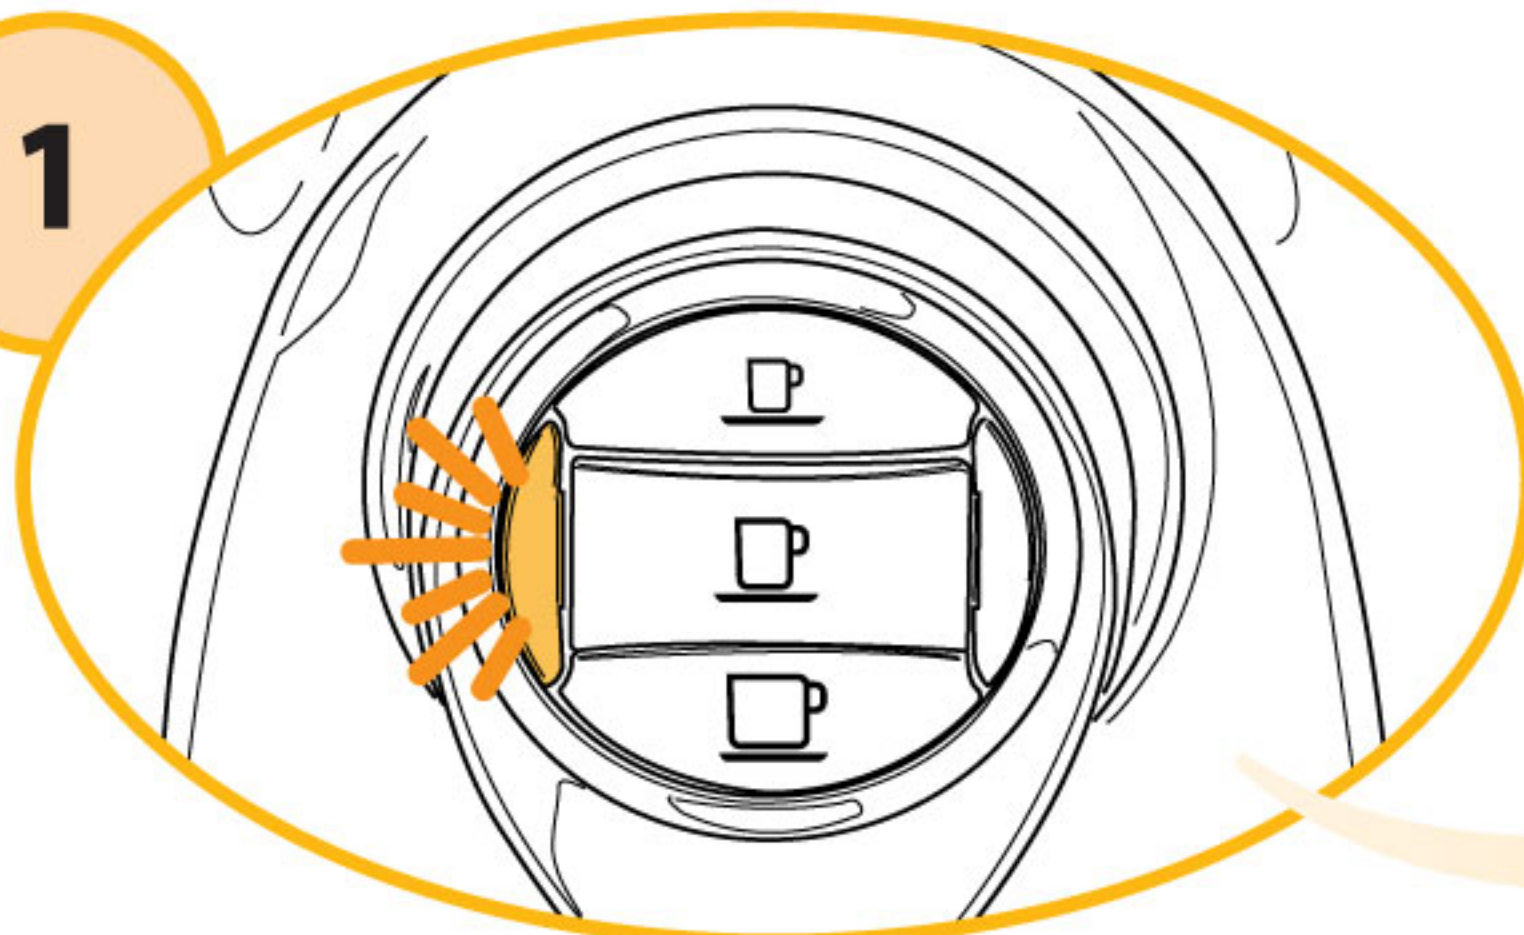

When the indicator light blinks and the appliance emits 3 beeps, it is advisable to carry out a descaling cycle.


2ND DESCALING SIGNAL - DISABLING

2

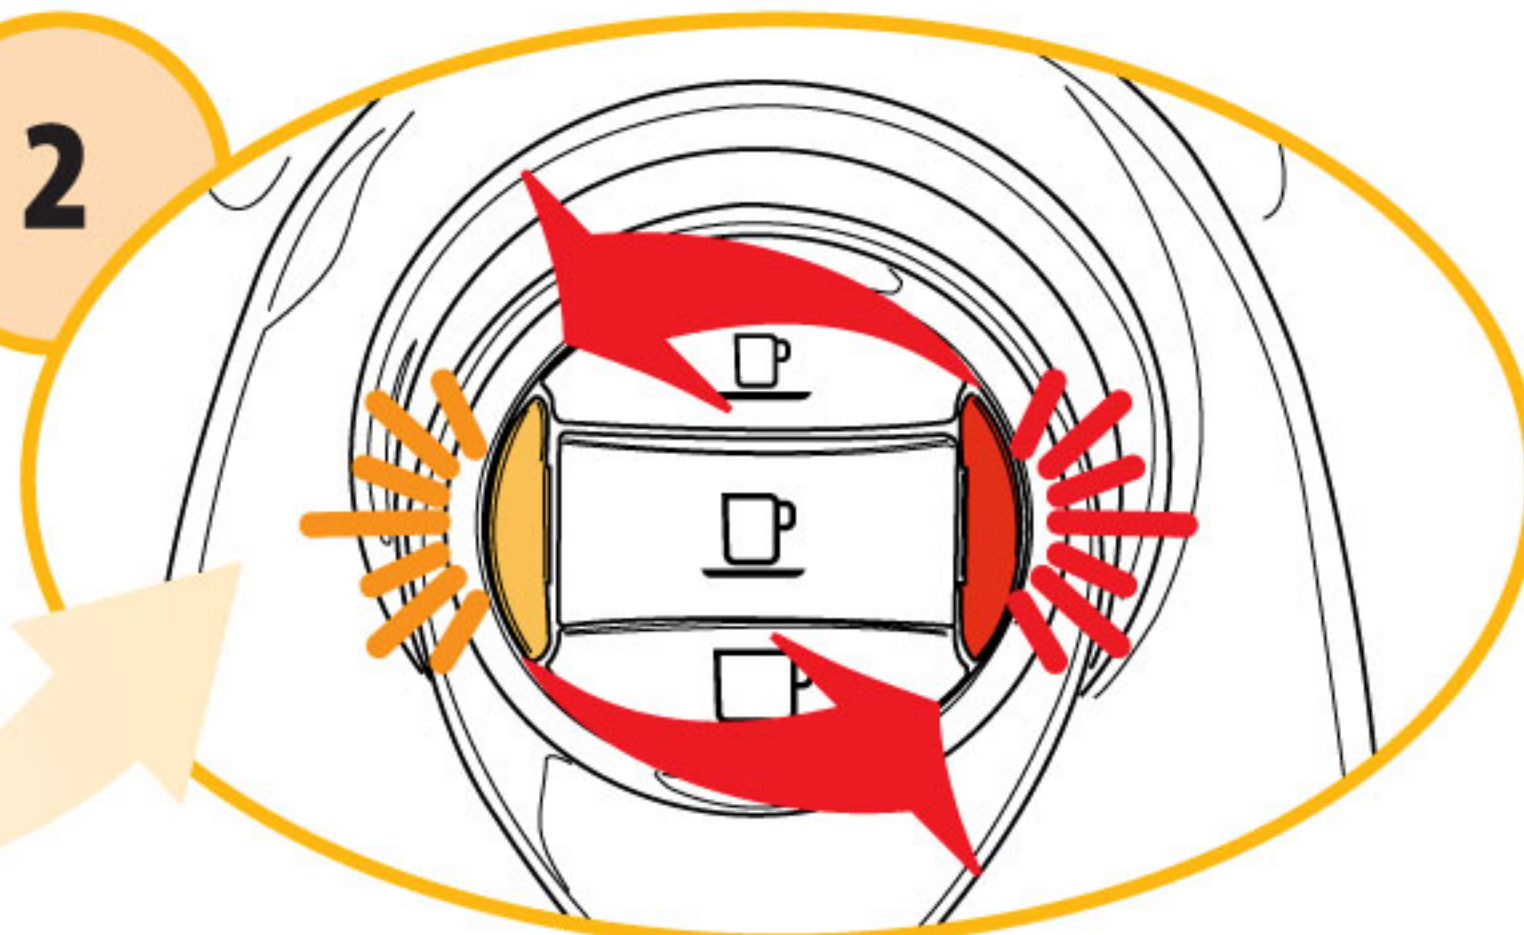

When the indicator lights blink alternately and the appliance emits 3 beeps, it is necessary to carry out a descaling cycle.


WARMING UP

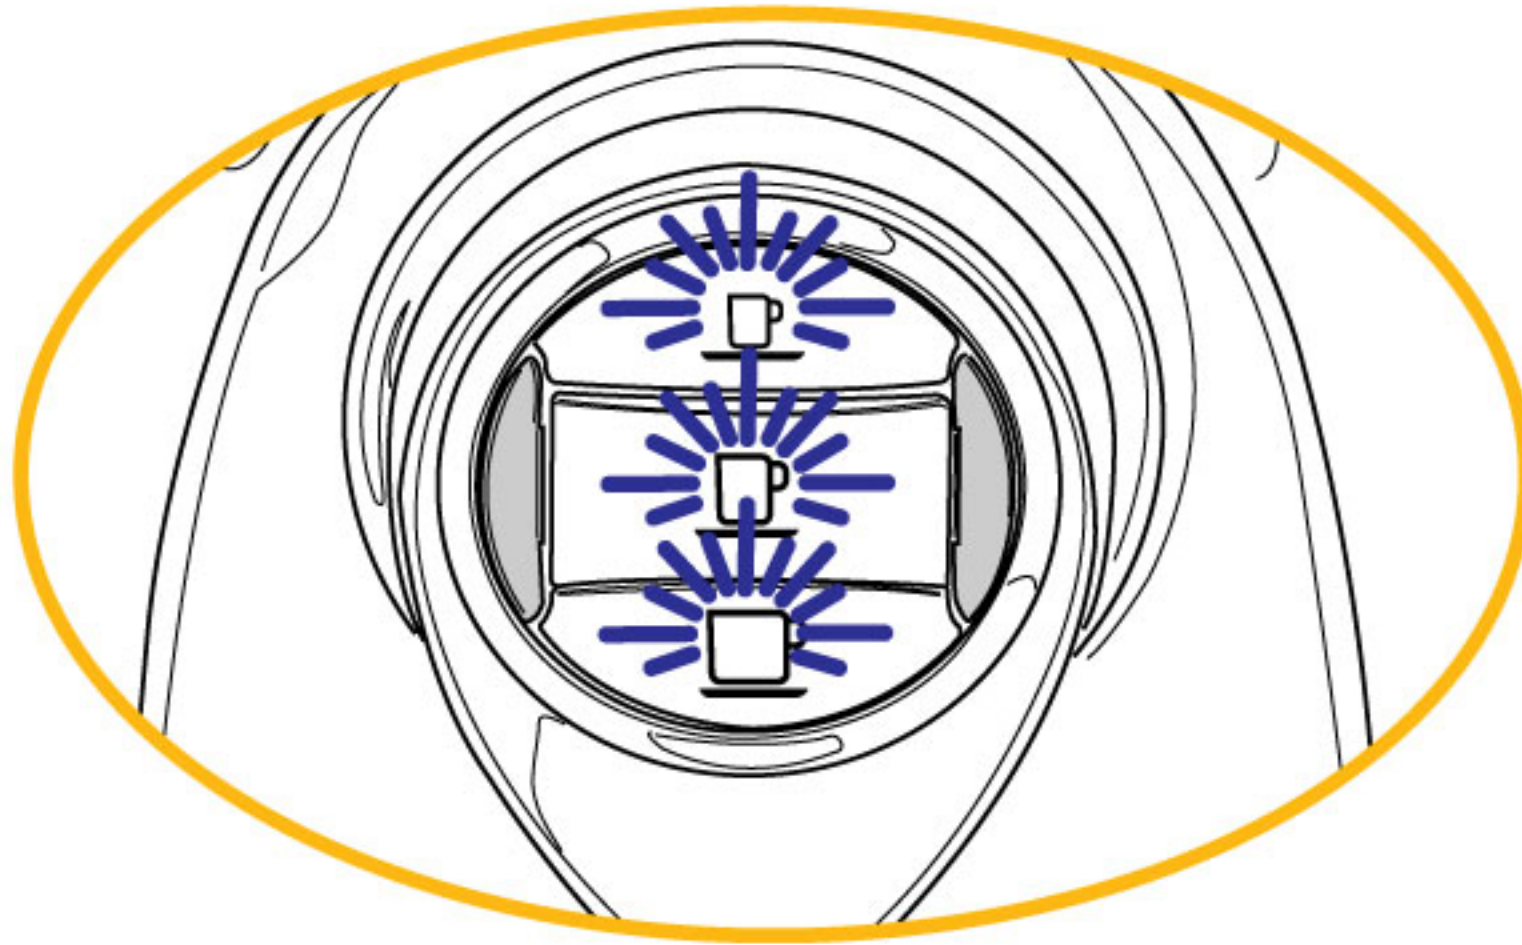

The buttons flash simultaneously.


WHEN THE WATER RUNS OUT DURING OPERATION

1

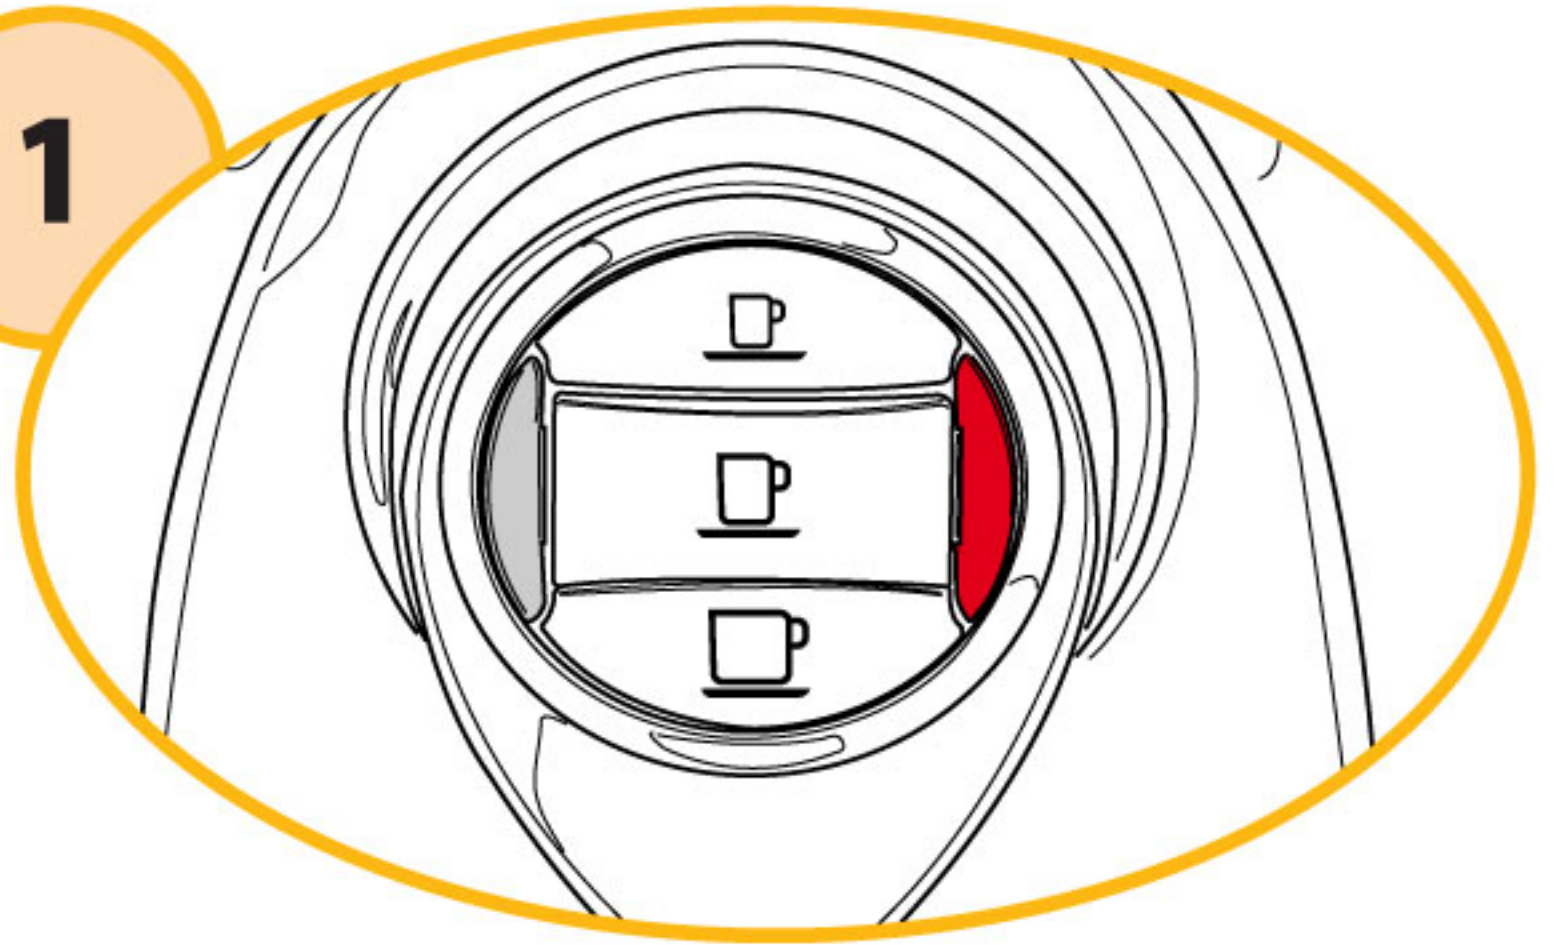


The indicator light will blink RED and the appliance will emit 3 beeps: the water tank is empty.

2

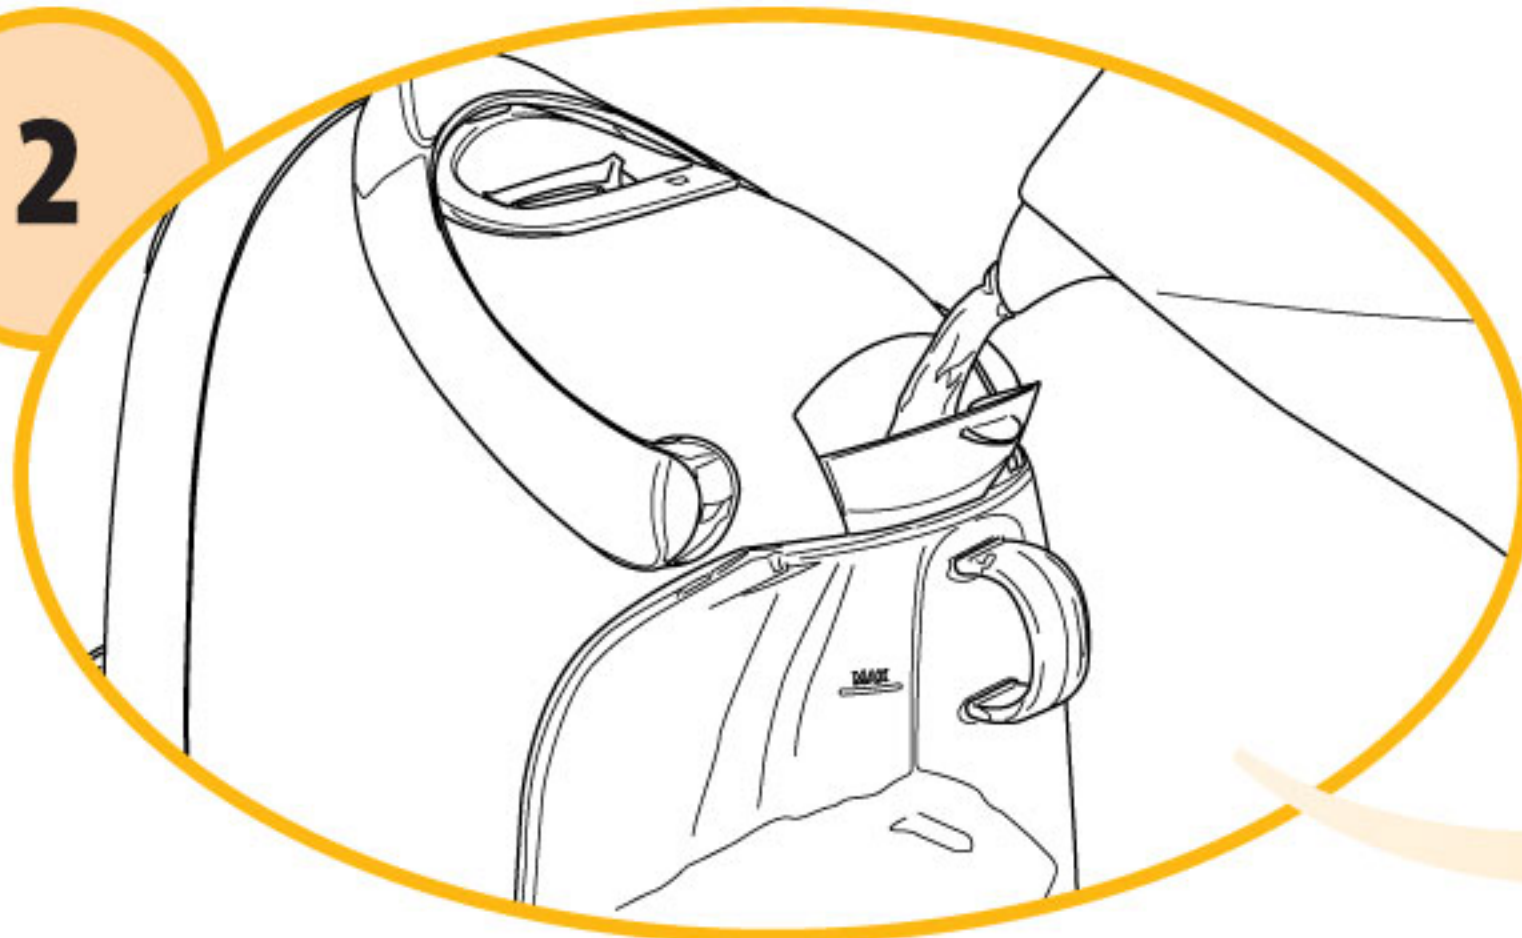

Fill the tank with fresh, still water.


3

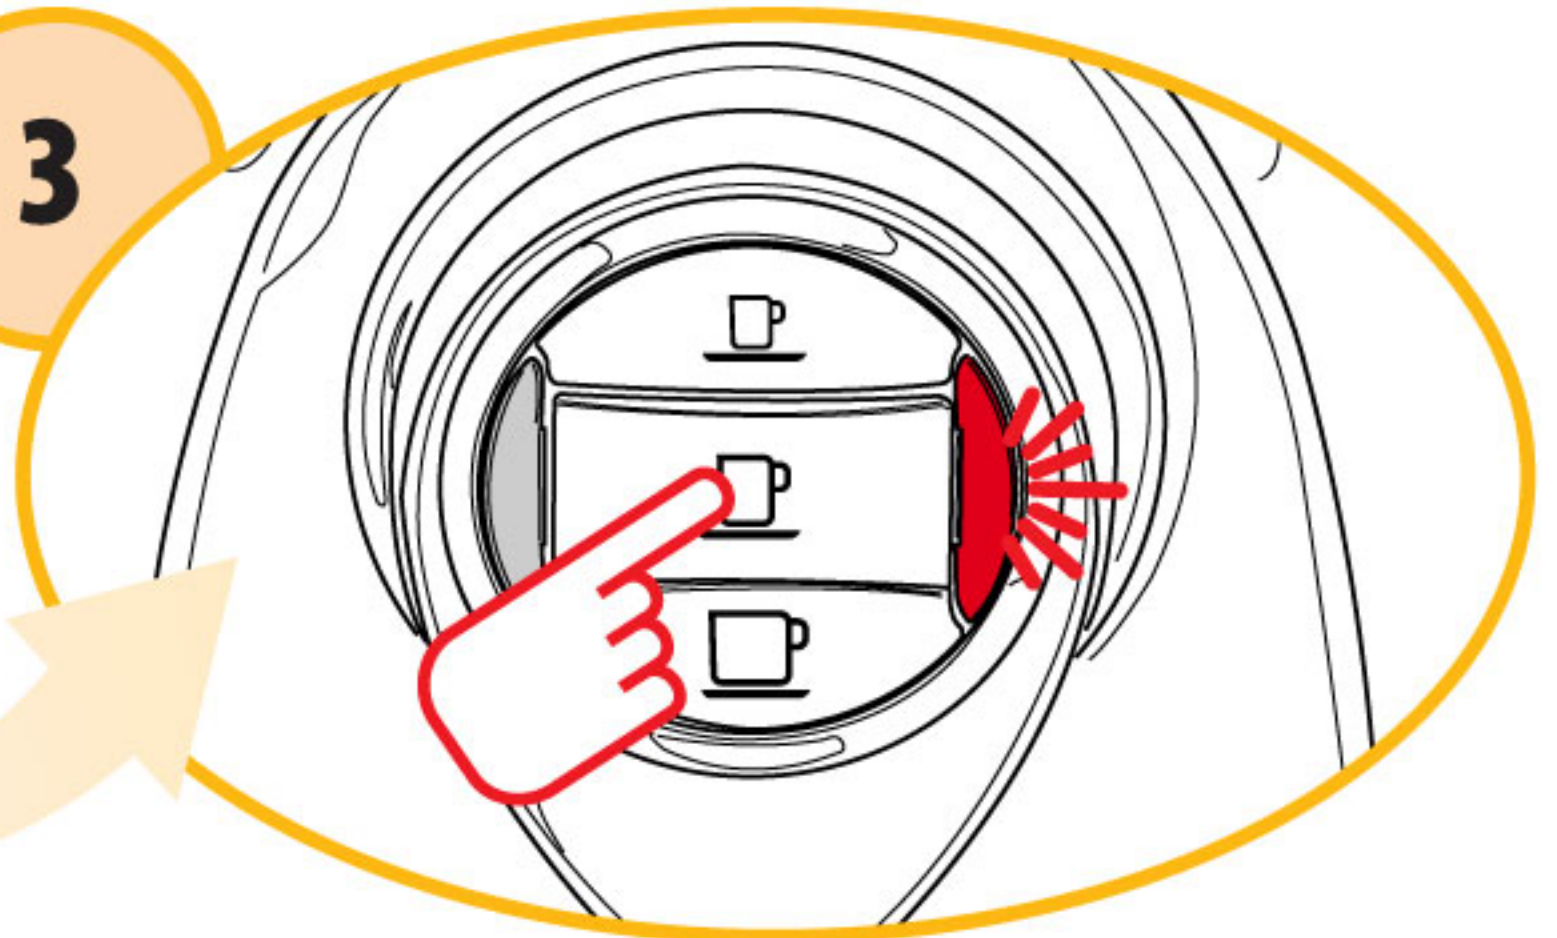


Press the same button as before; the appliance will resume dispensing.

Continued


IF THE LEVER IS RAISED

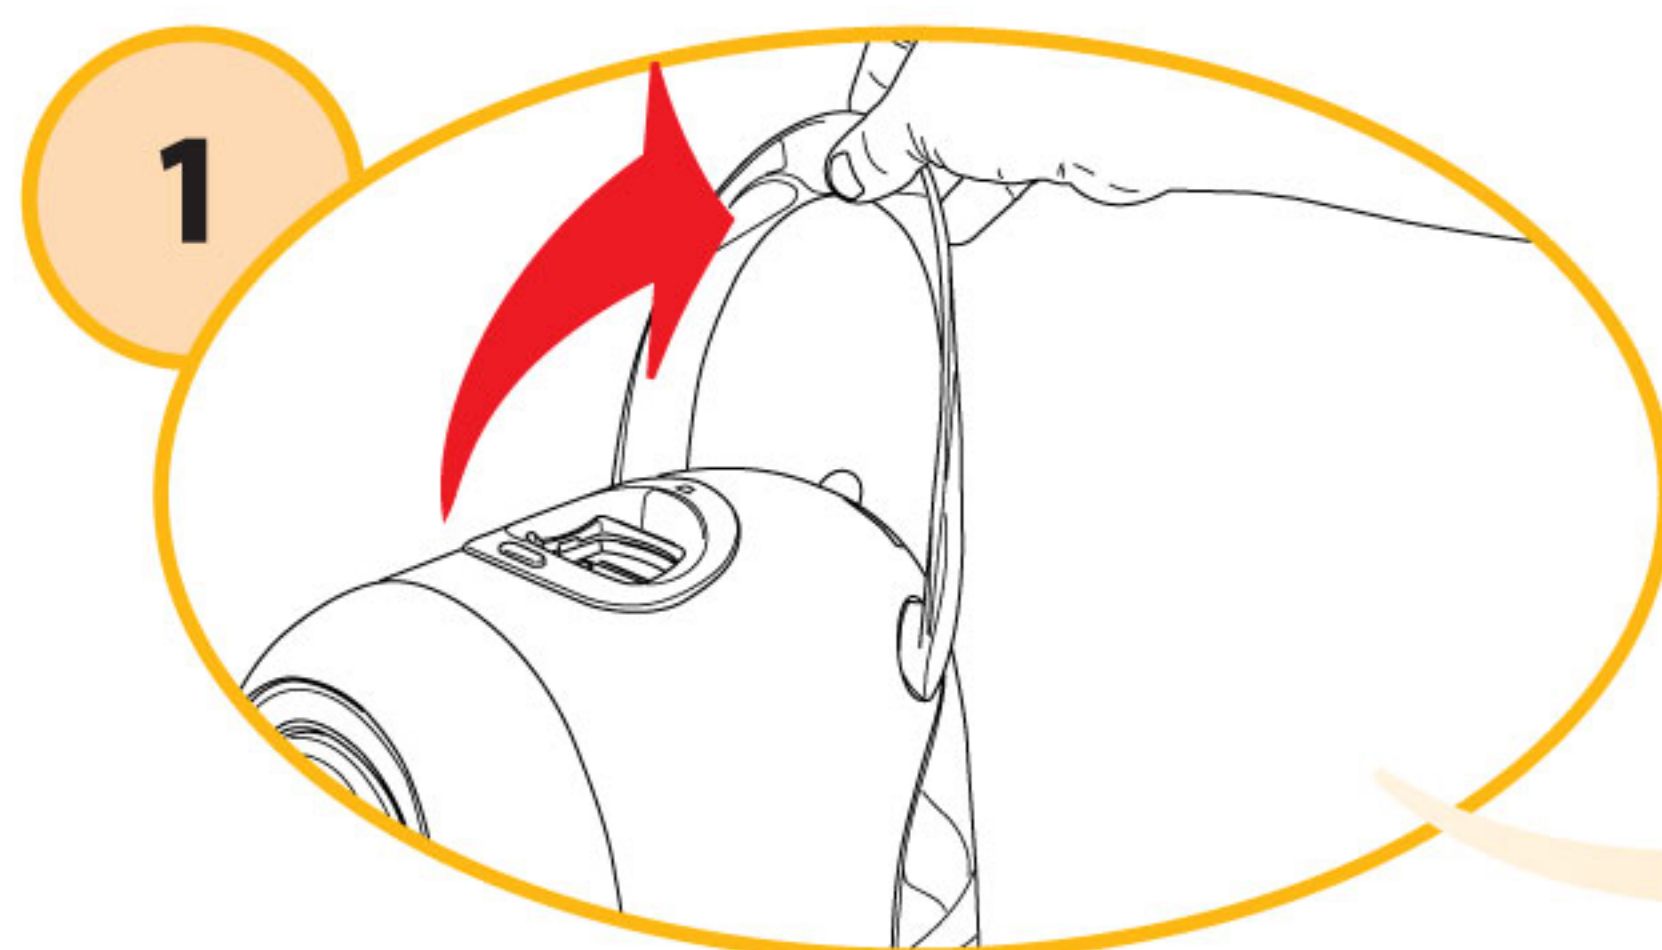


If the lever is raised while a beverage is being dispensed.

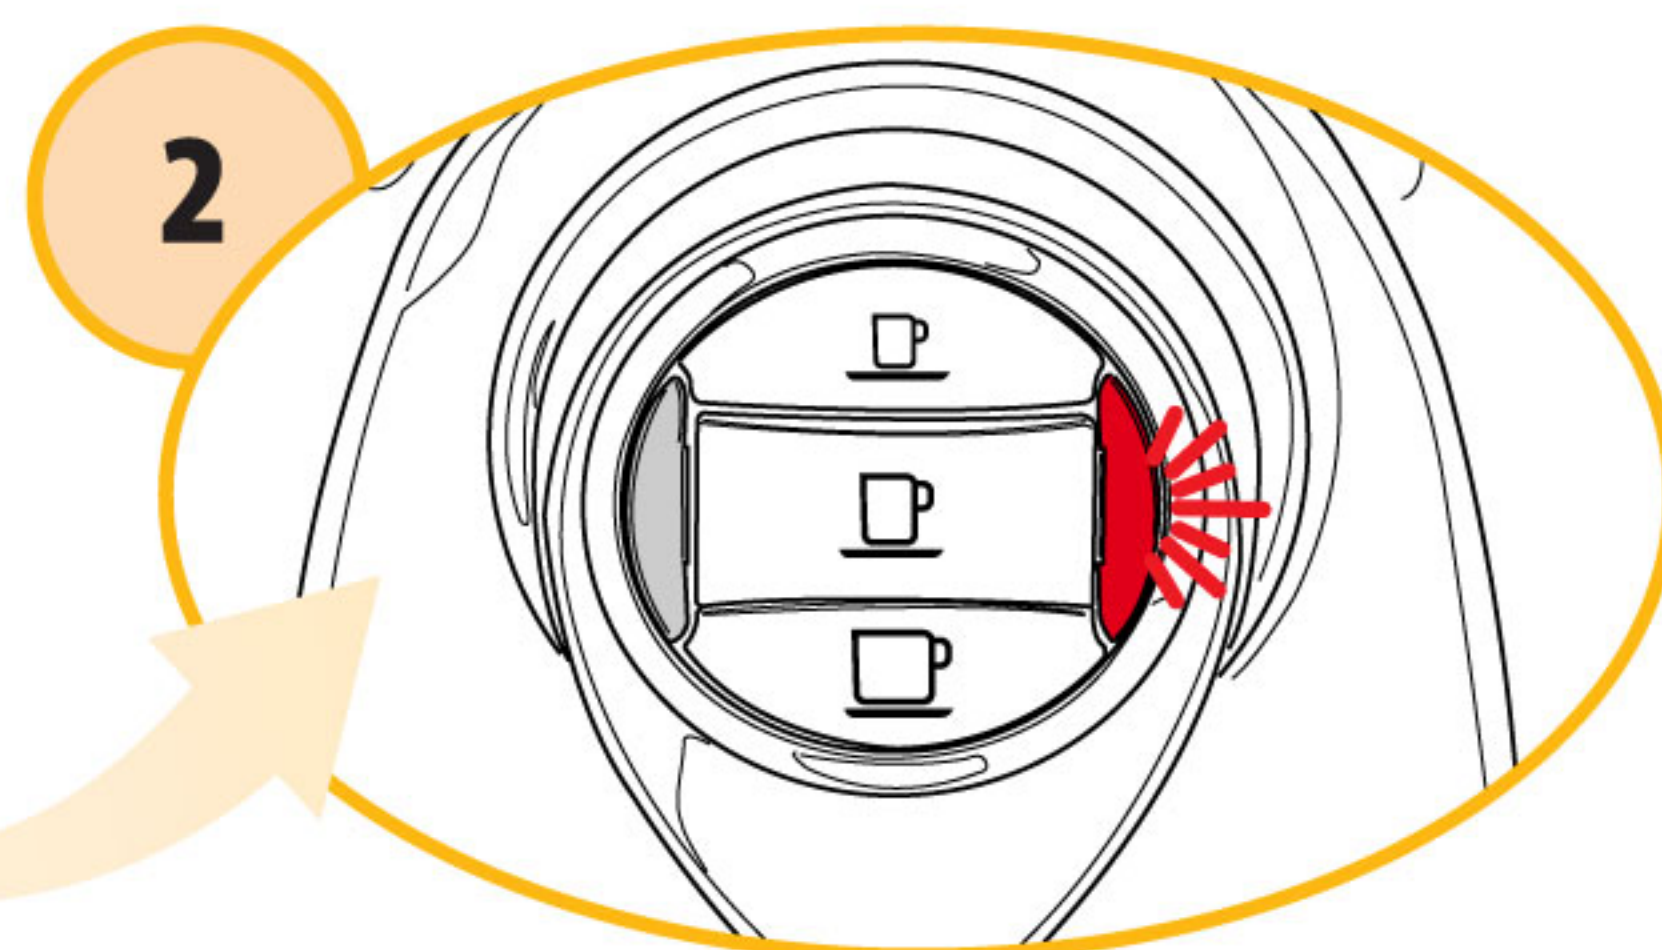


The indicator light will blink RED and an intermittent beep will be emitted. The appliance will immediately stop dispensing.

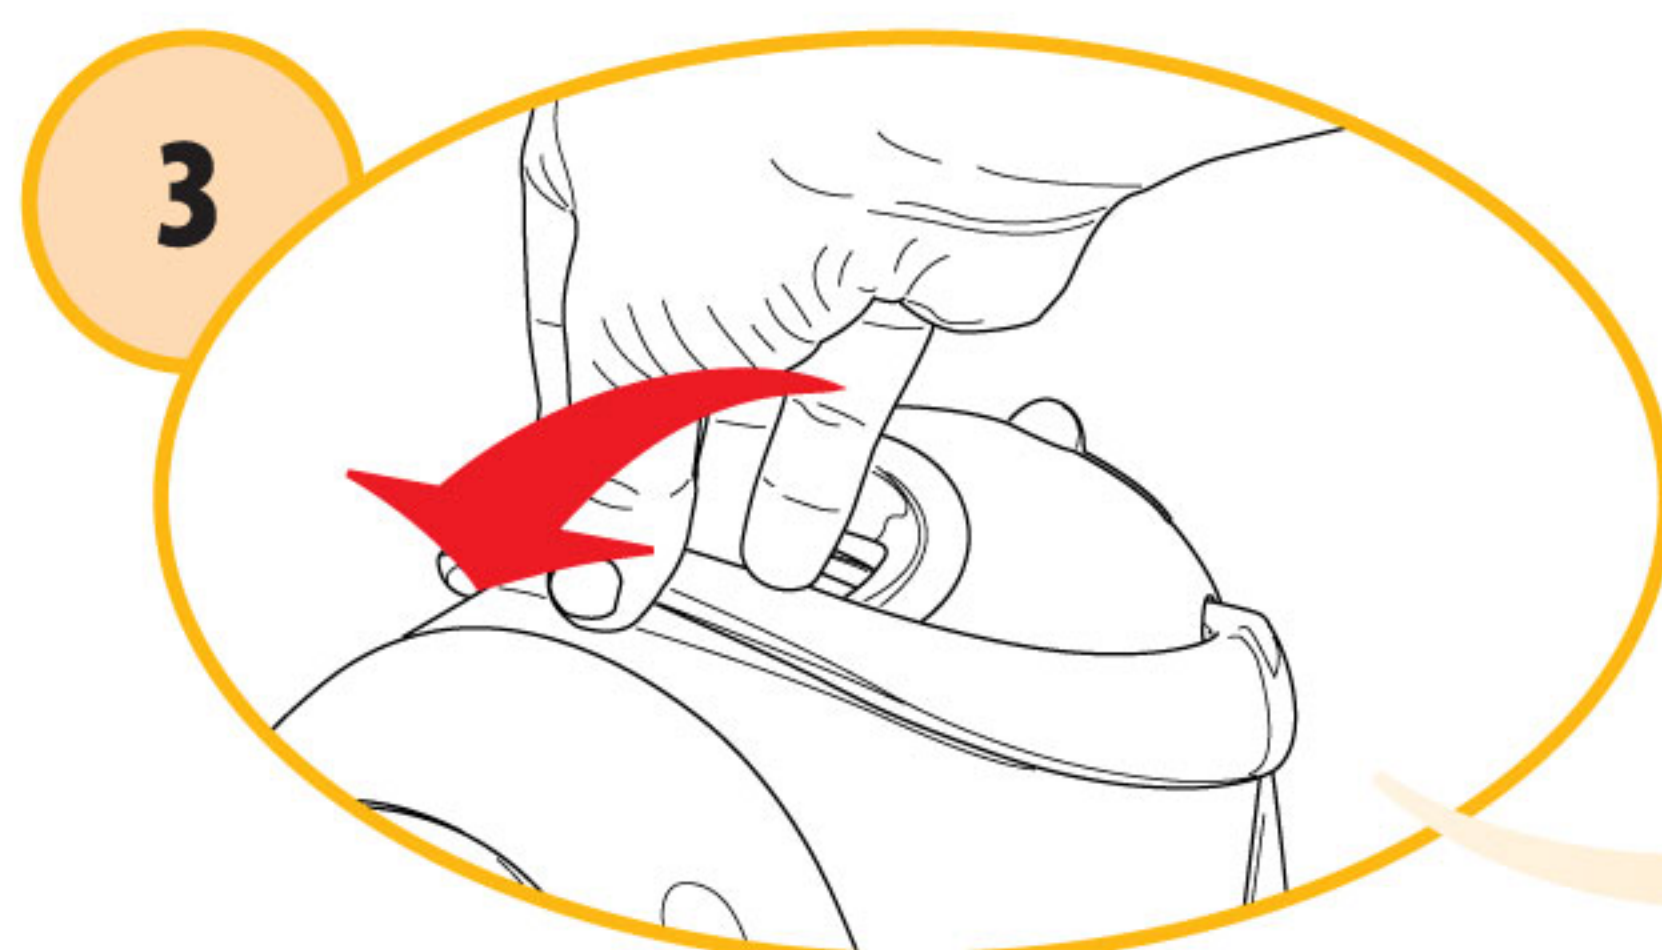

Close the lever

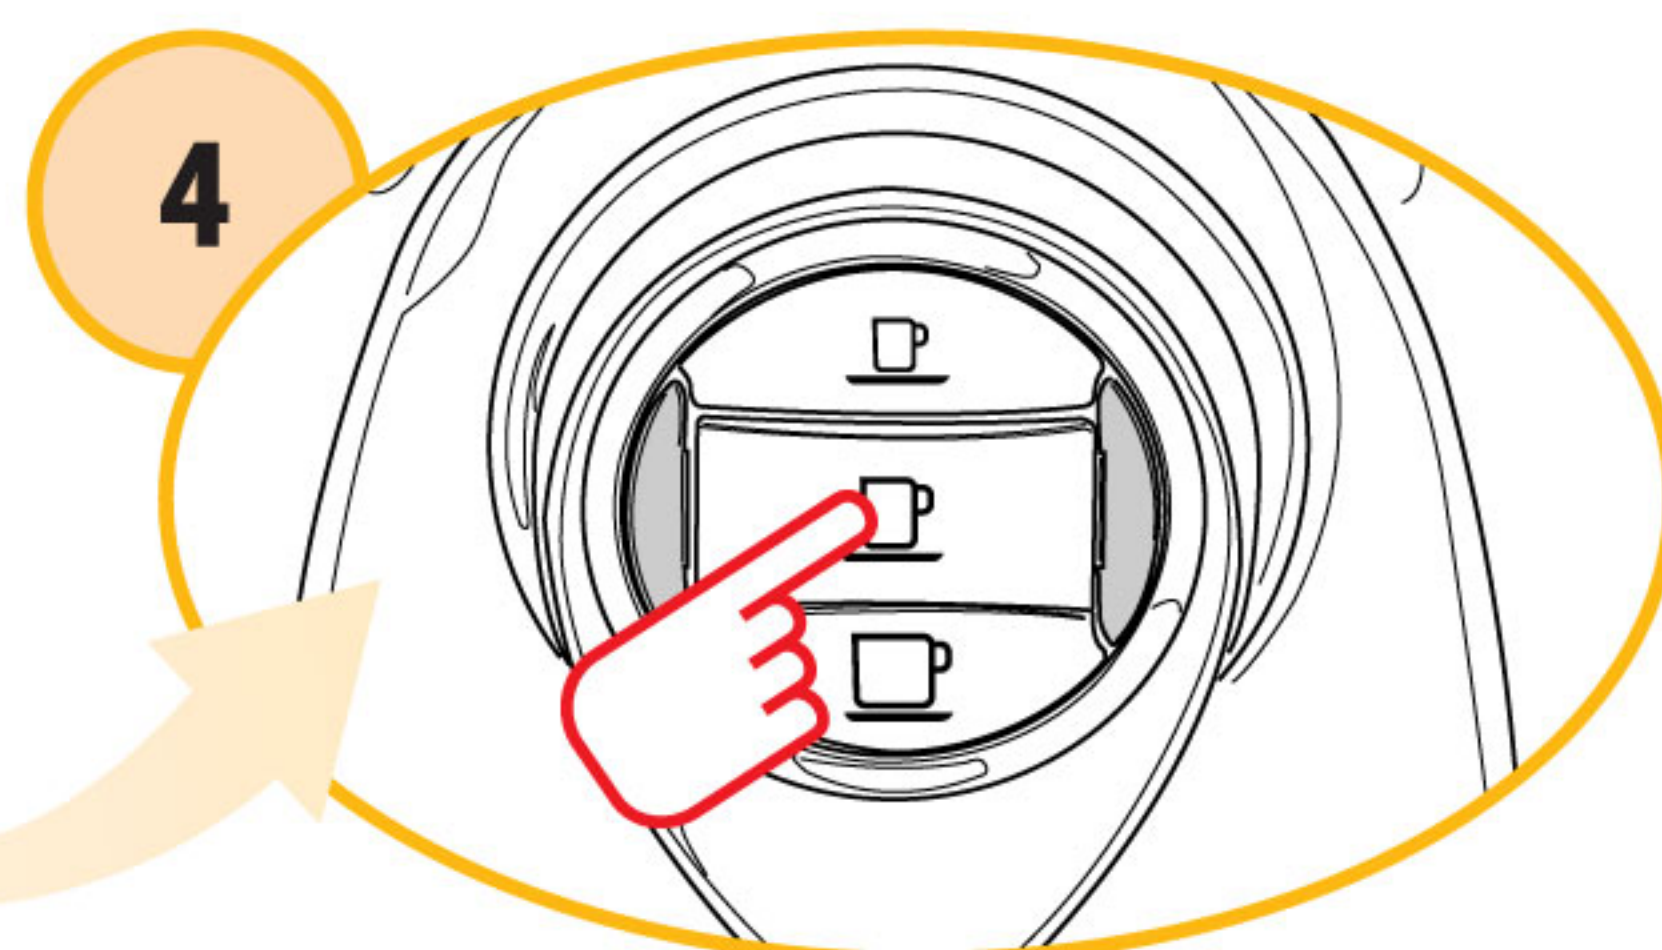

Press a button to reset the alarm.

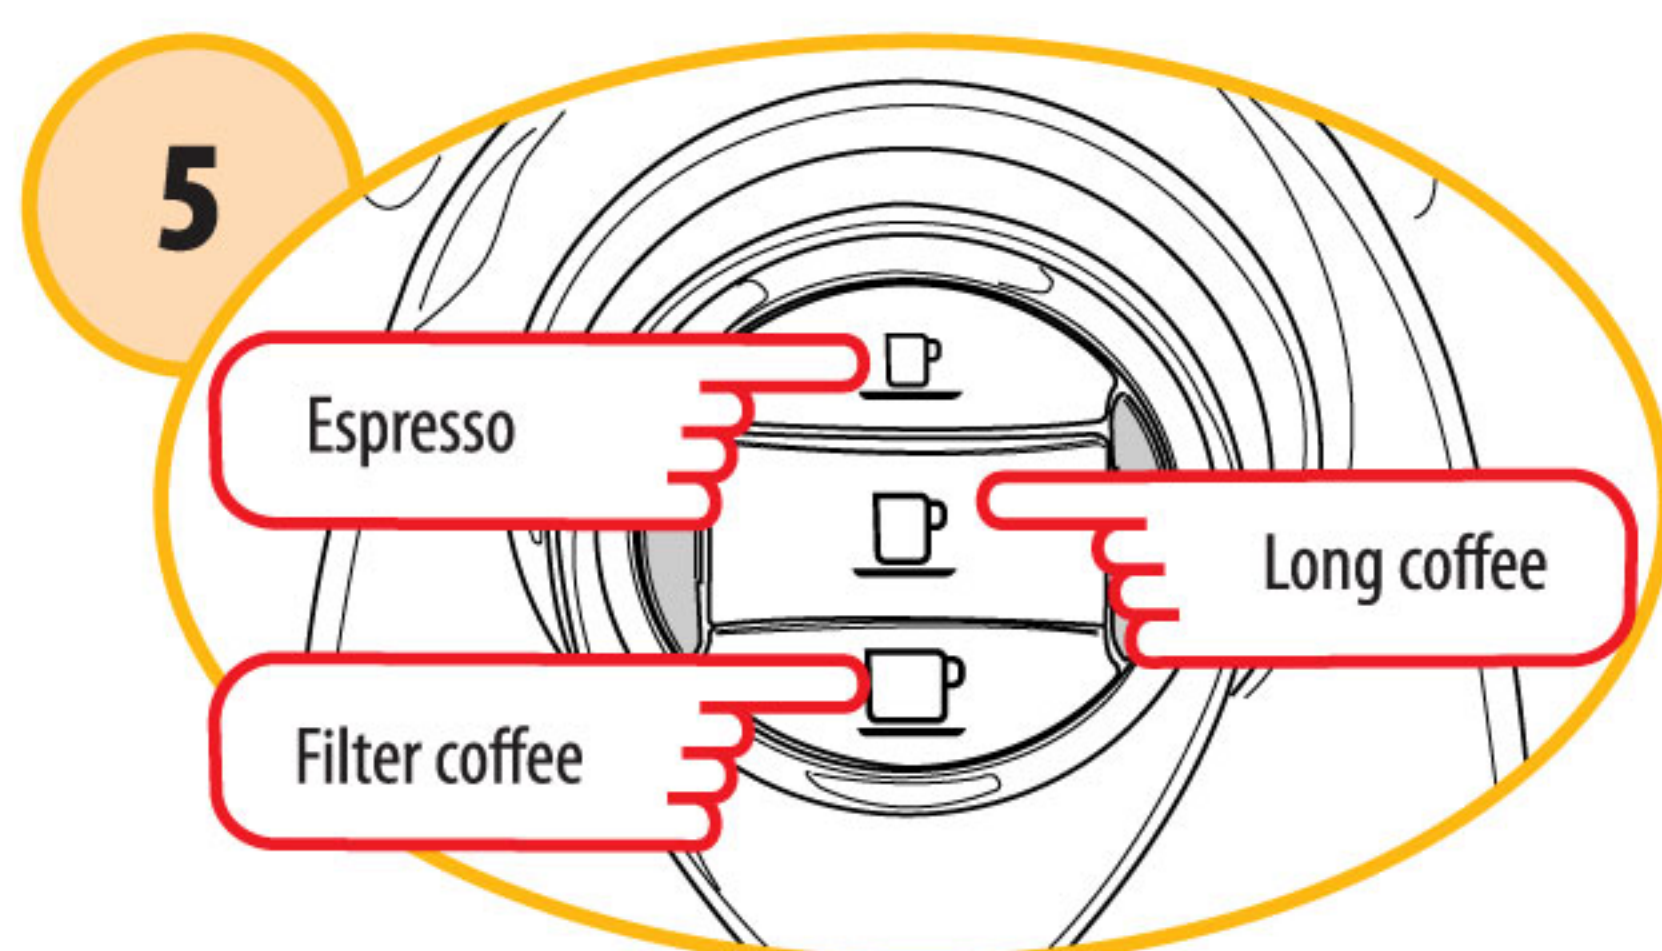


Press the button corresponding to the desired type of coffee to brew a new cup.

4

Adjusting the cup/mug height

1

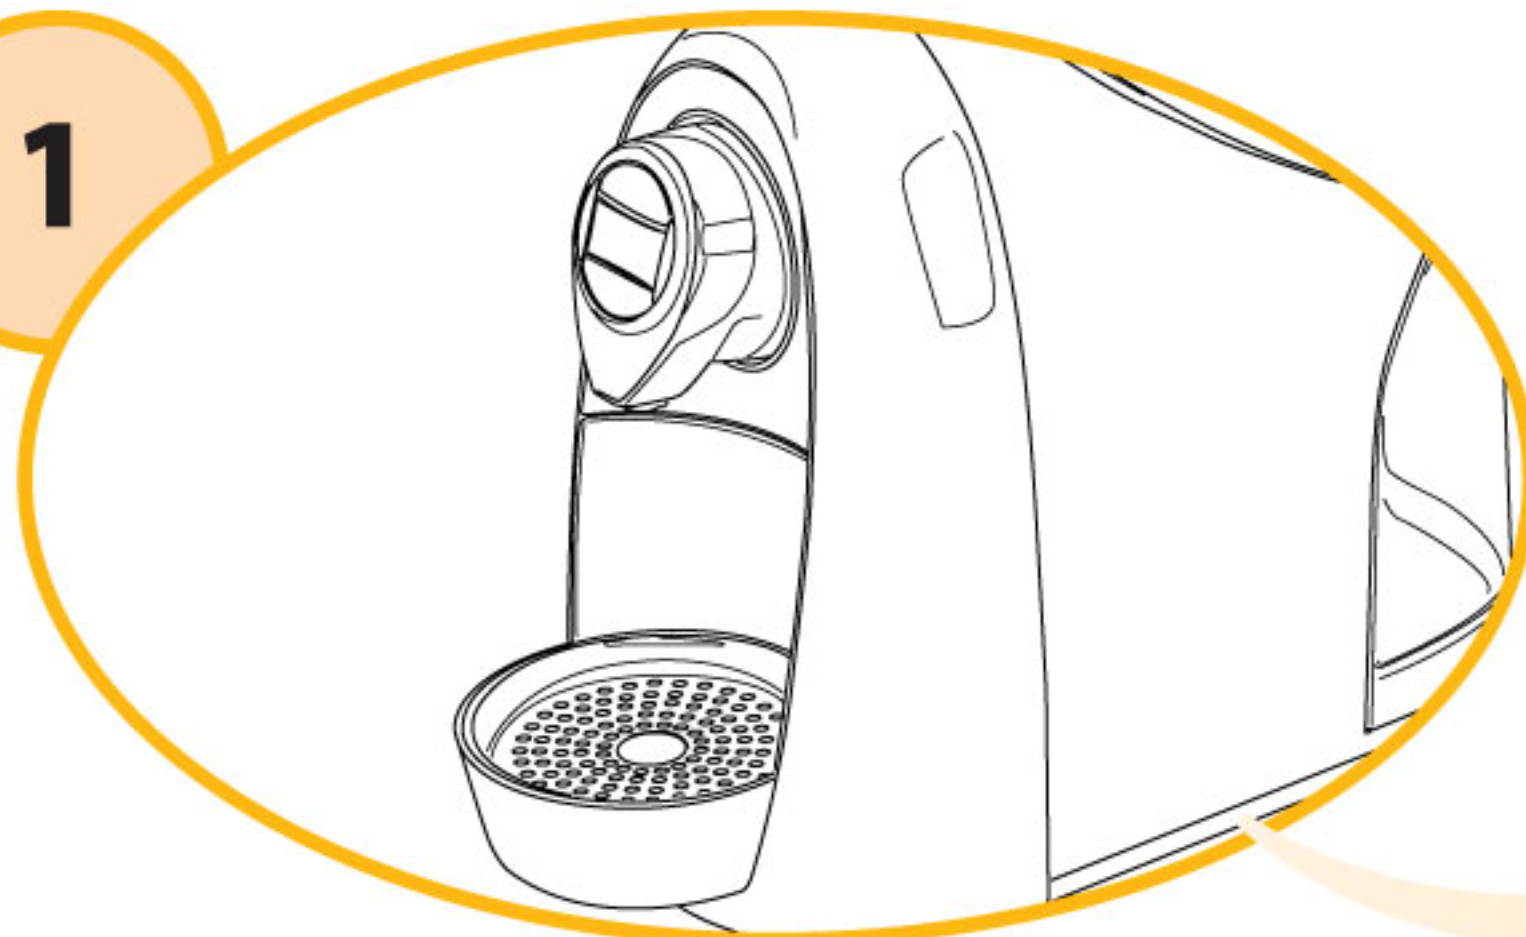


The appliance can be adjusted for the use of mugs or espresso cups.

2



The appliance is initially set for the use of large cups or mugs.

3

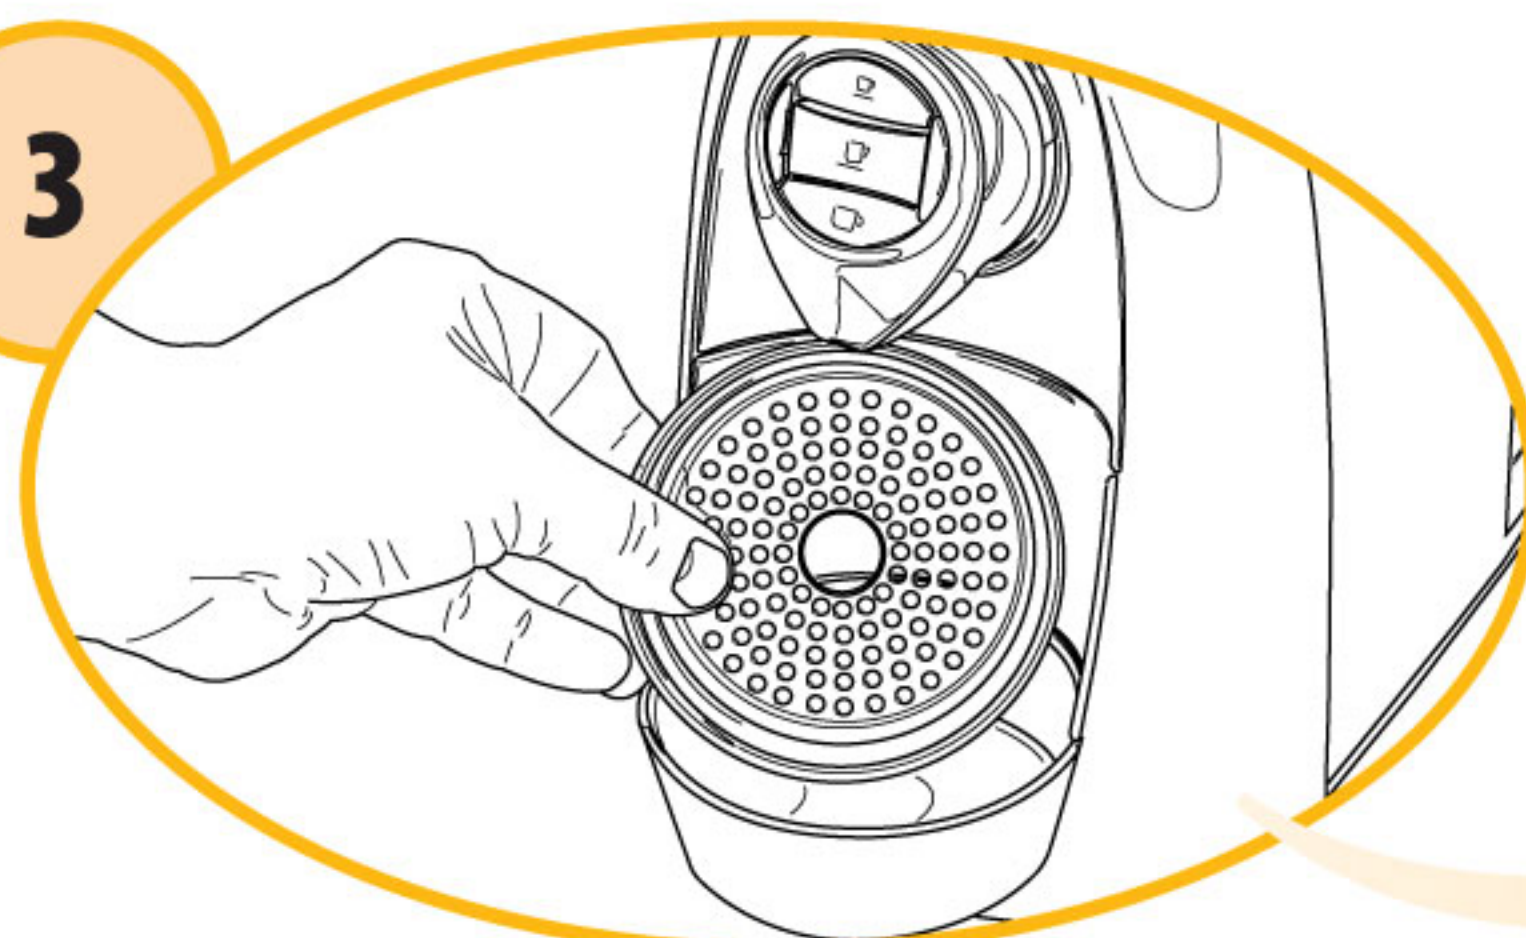

In order to use espresso cups, you must lift and turn the grill on top of the drip tray.

4



The grill must be positioned over the drip tray turned.


5




In this way you can obtain the best results when using small espresso cups.

5


Brewing coffee

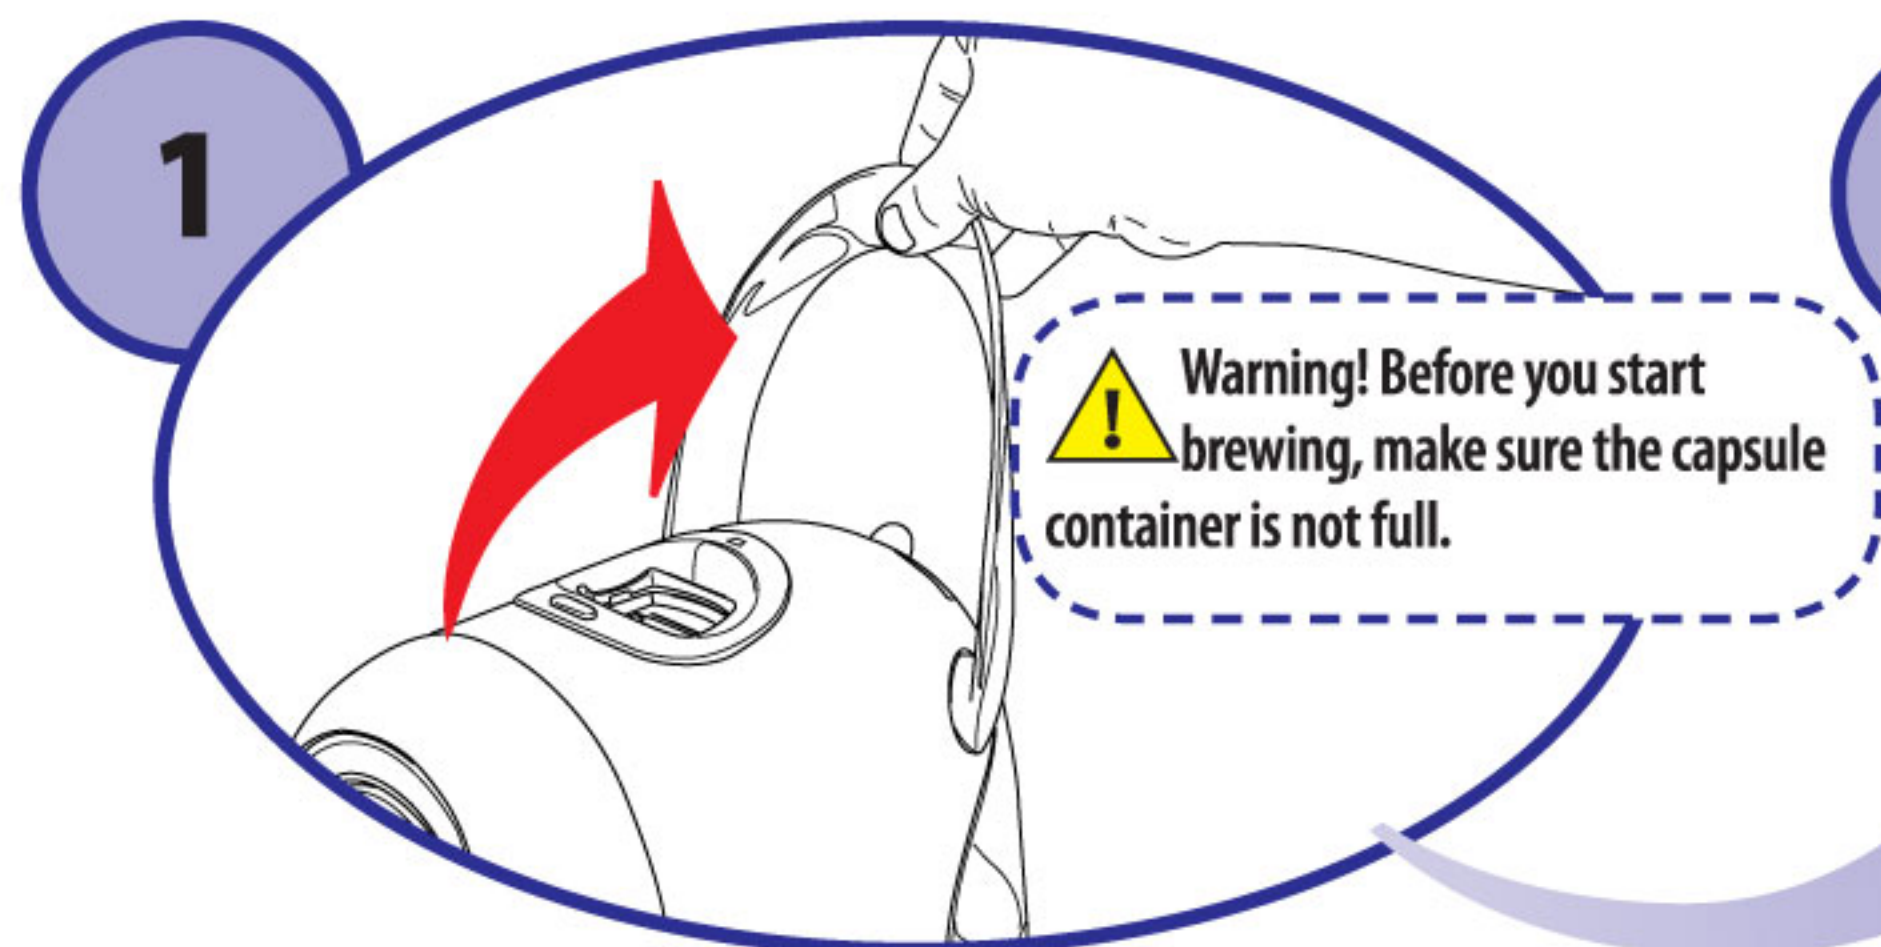


Raise the lever to open the capsule compartment.

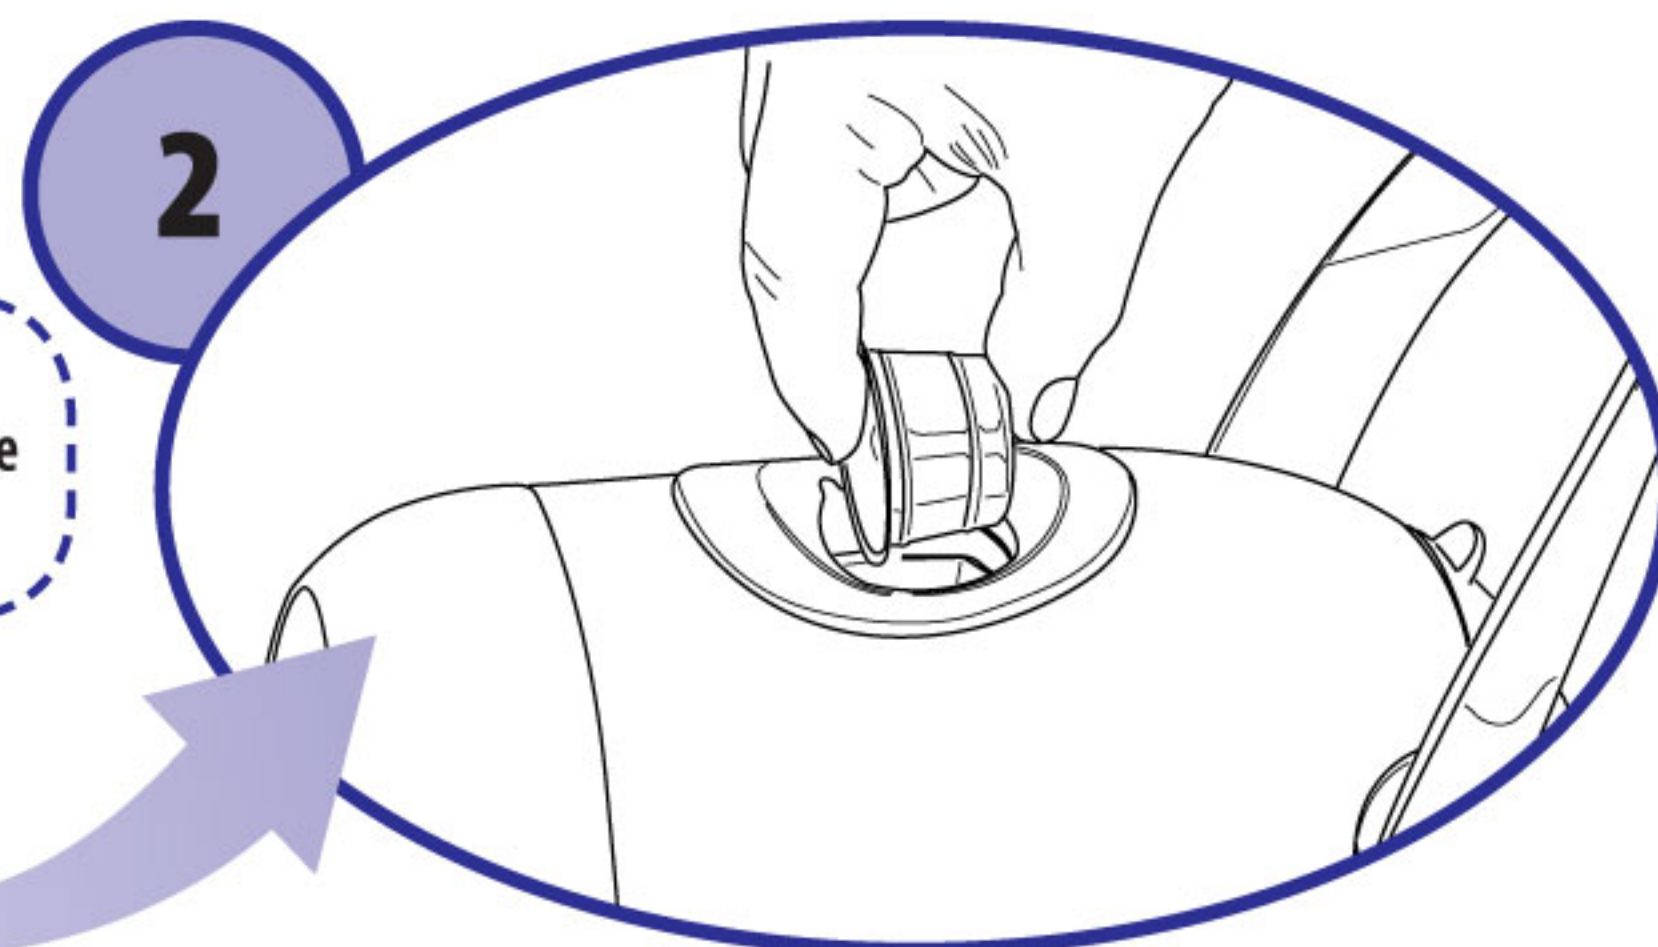


Insert the capsule, pressing it gently into place.

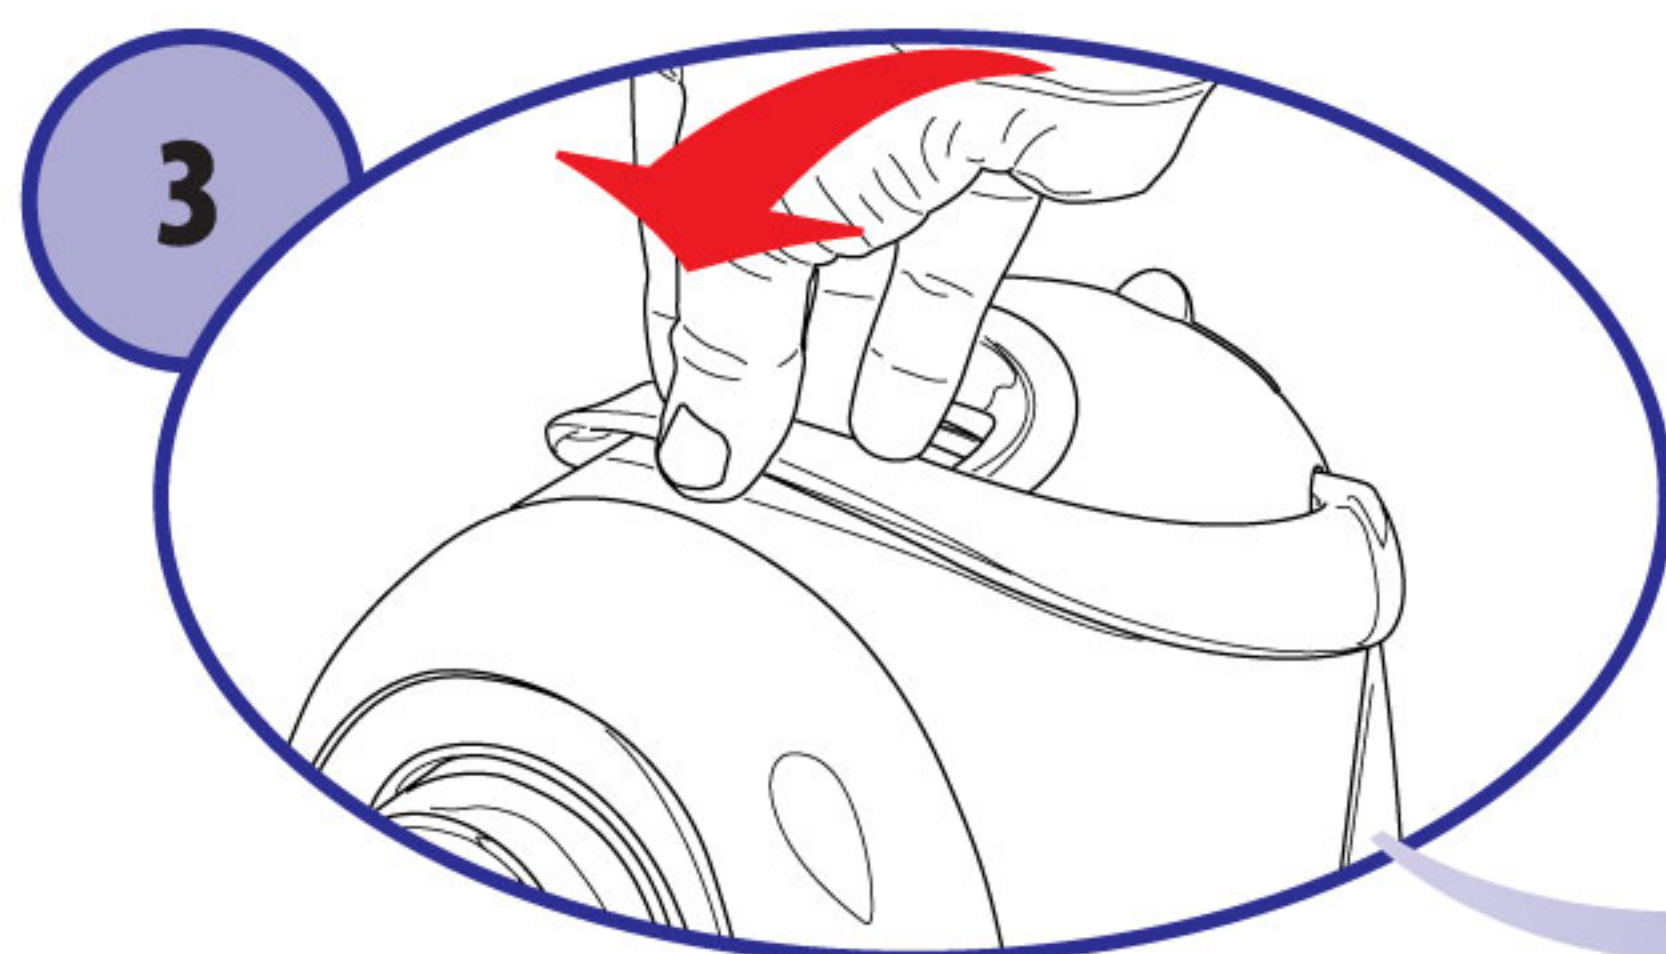


Close the lever firmly.

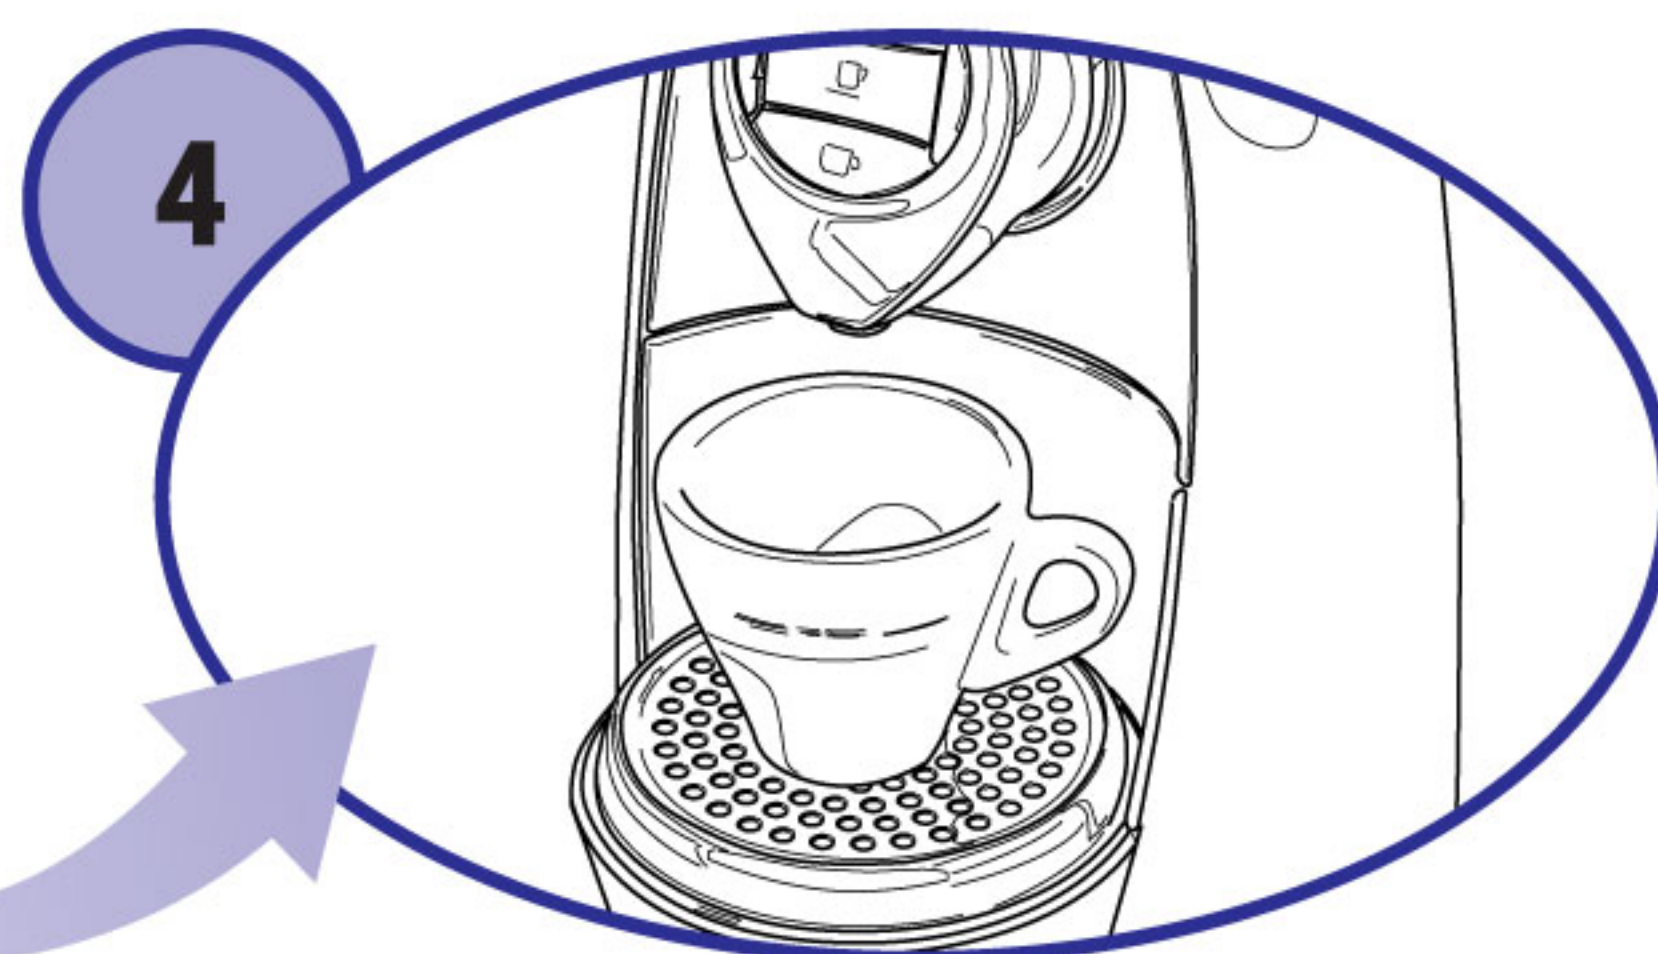


Place a cup or mug under the coffee dispensing spout (see chapter 4).

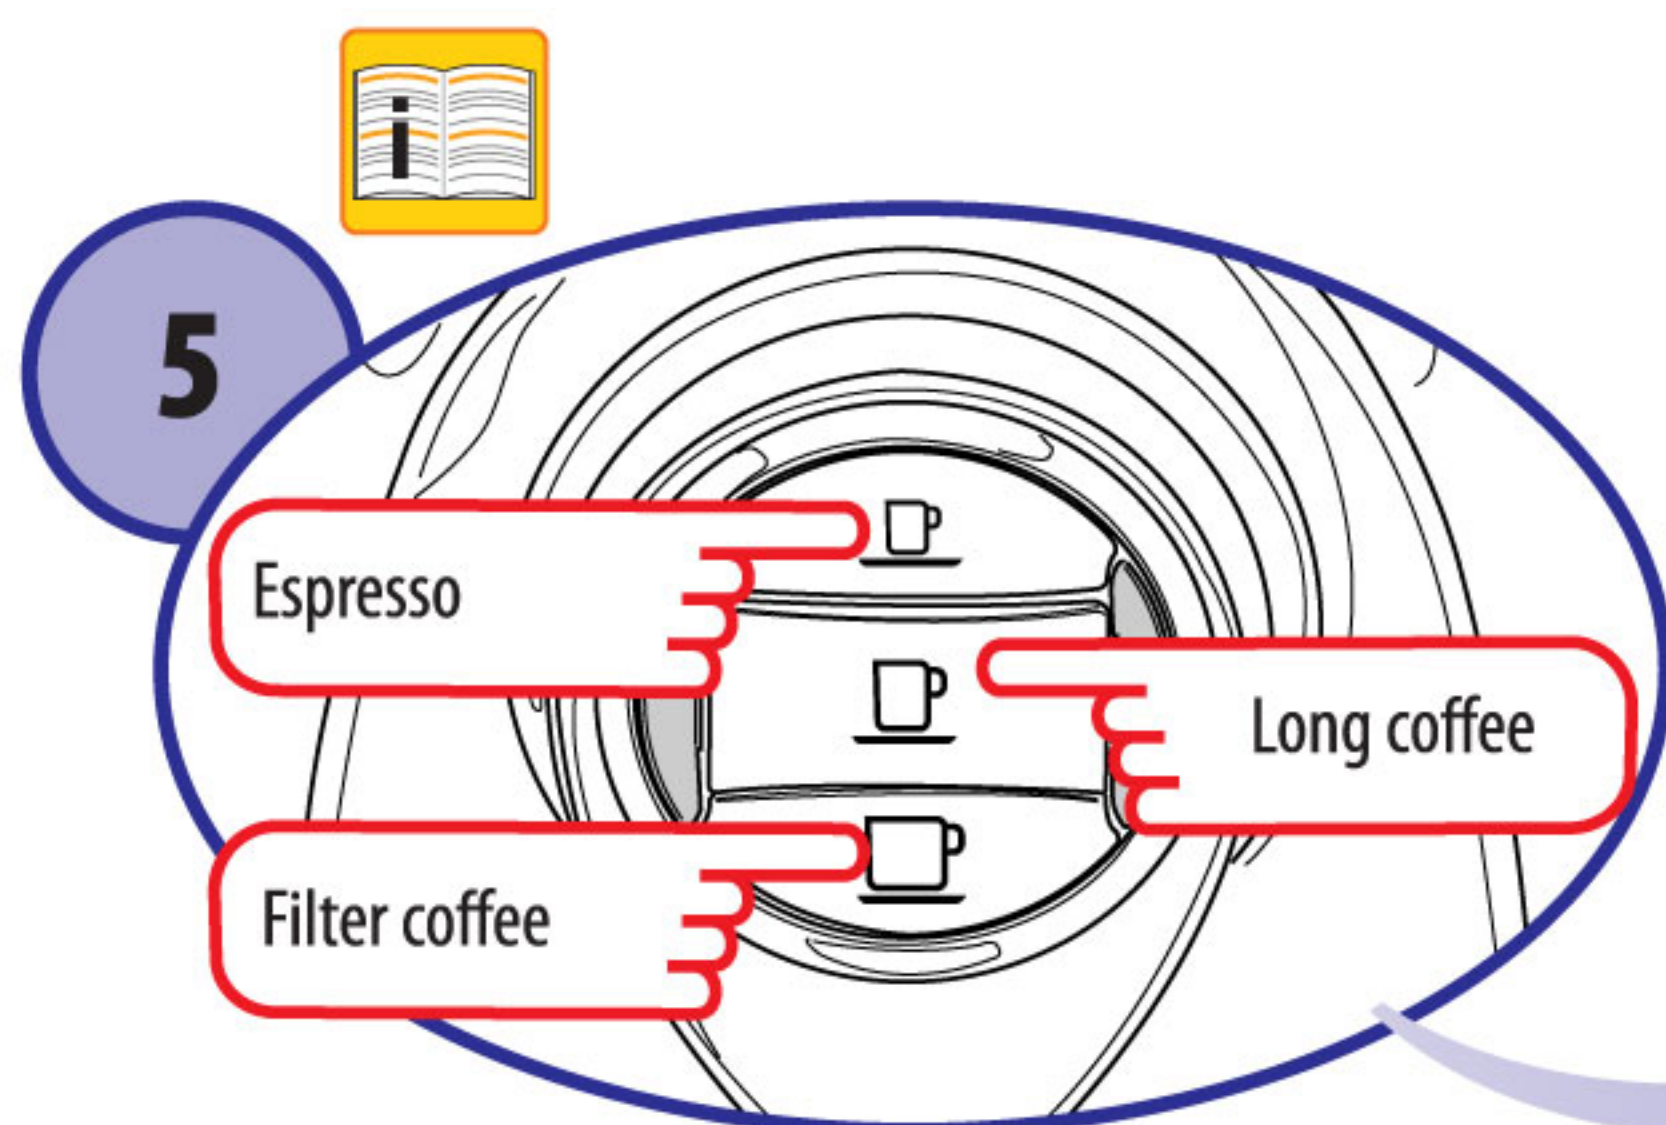


Press the desired coffee button only once.

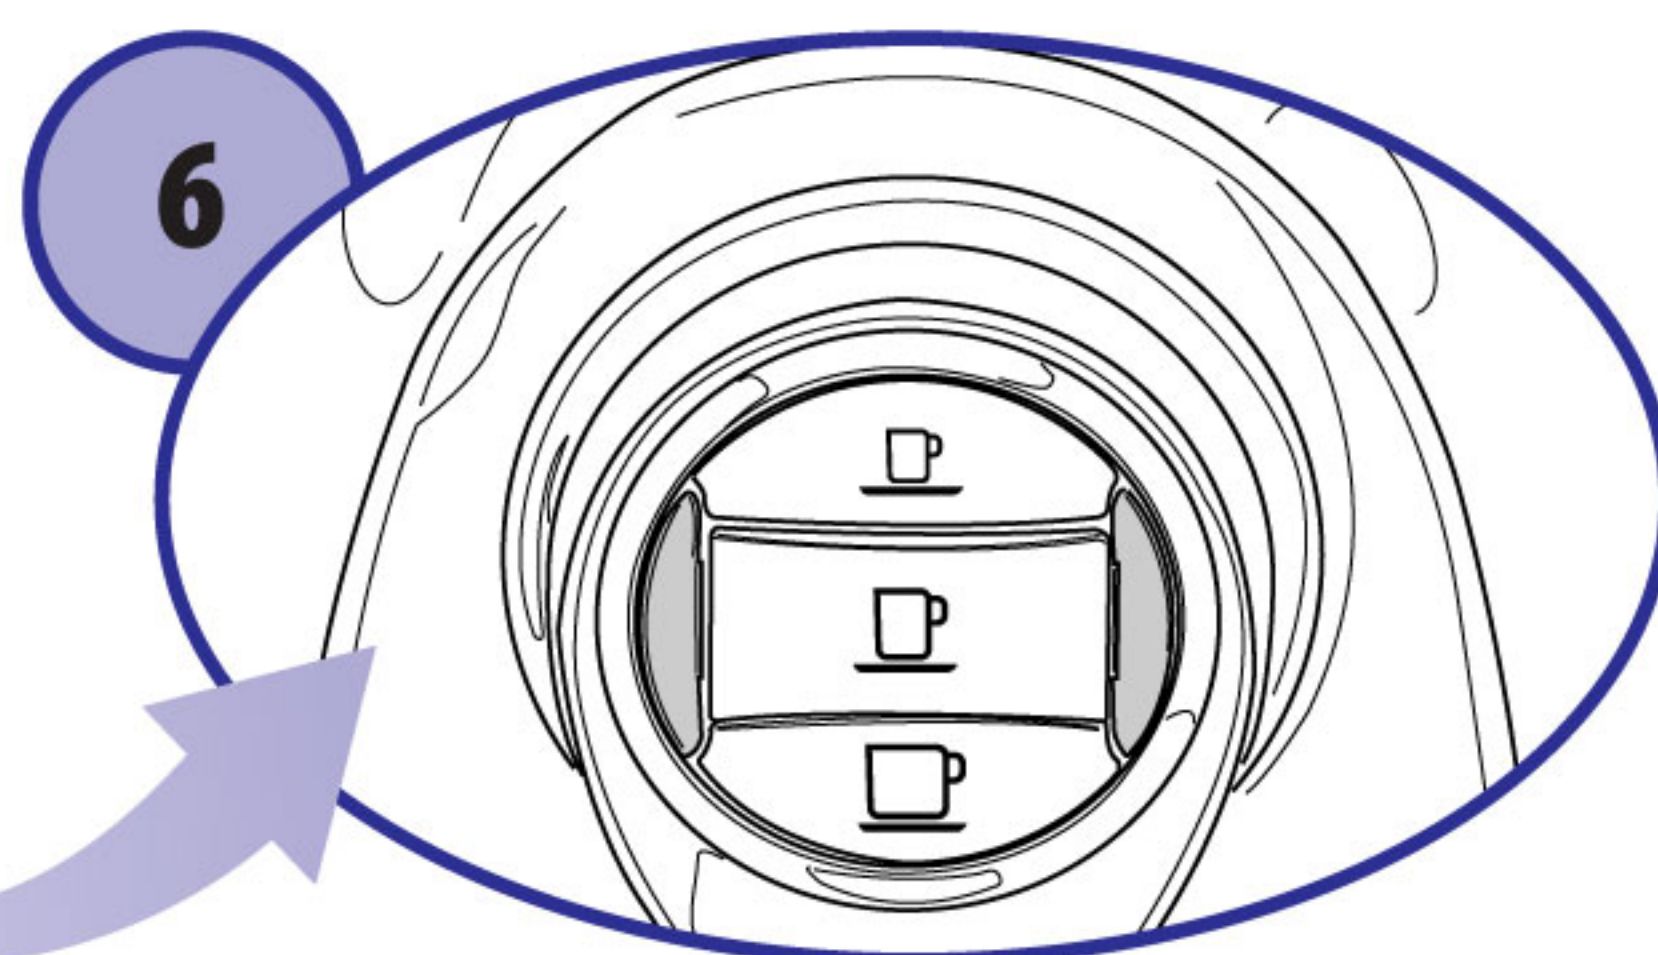

The selected coffee button will blink. The appliance will stop dispensing on reaching the programmed quantity and the emit a beep.

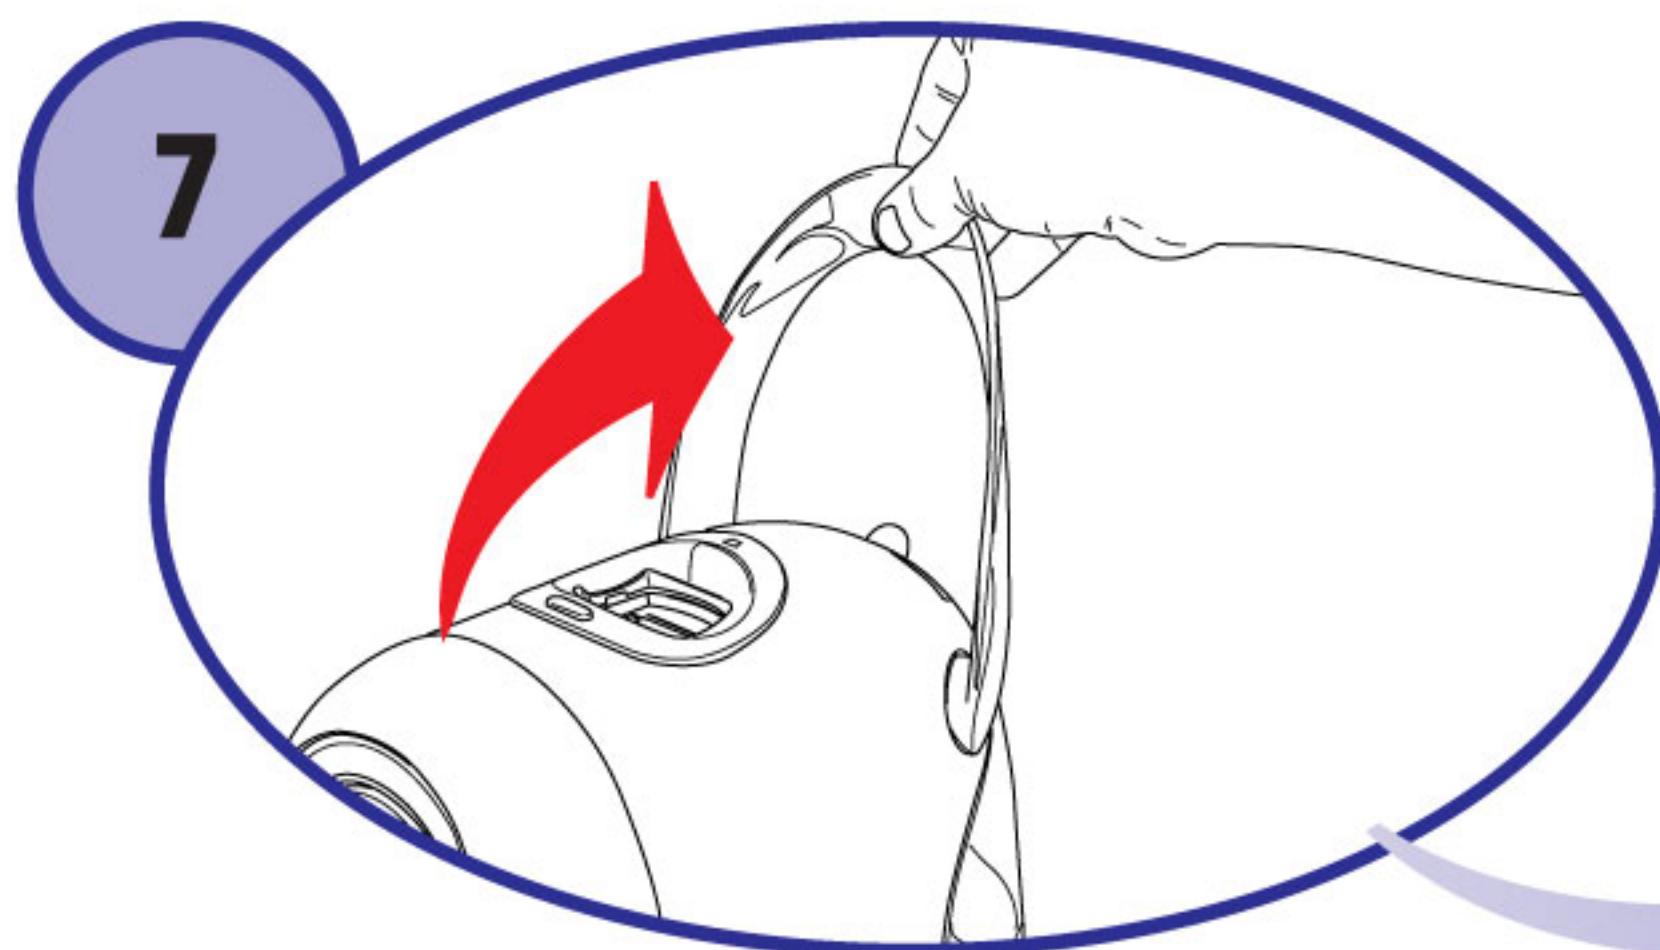

Raise the lever to eject the used capsule into the drawer.

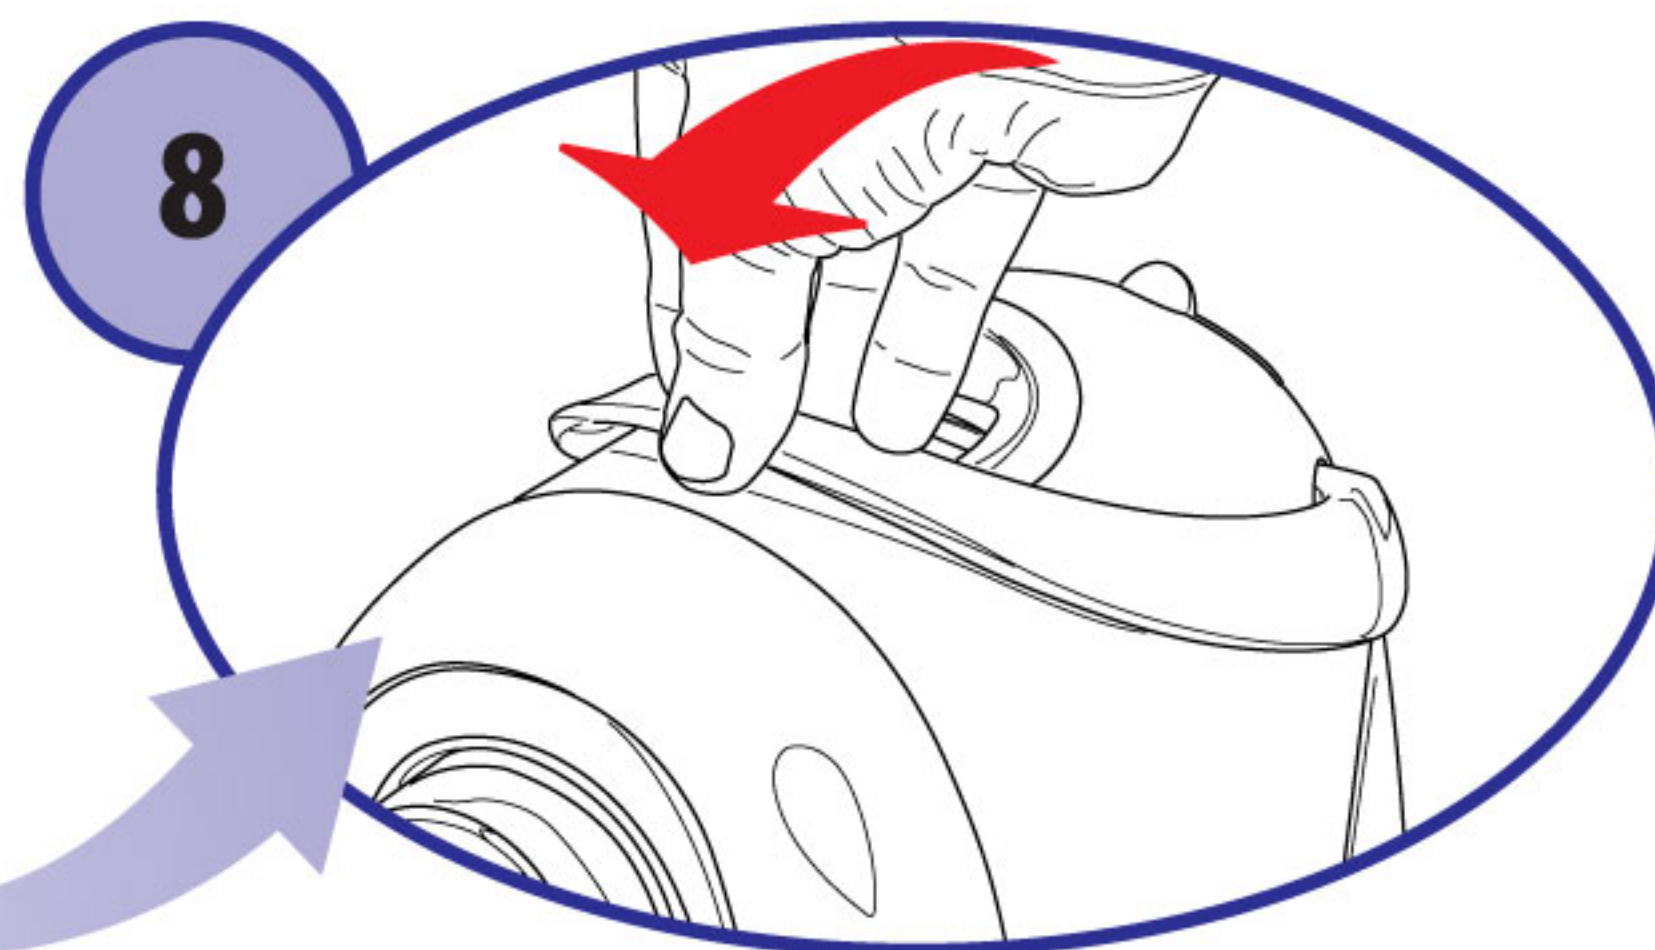

Close the lever.



NOTE:

The quantities of coffee dispensed can be **reprogrammed** according to personal taste and the size of the cups/mugs used. Please refer to chapter 7 for reprogramming instructions.

6

Preparing other beverages

Capsules may be available for preparing beverages such as **tea, chamomile tea, filter coffee, etc.** For their use, proceed as directed in the previous chapter; on reaching step 5, press "Filter coffee".

In order to prepare beverages using **barley capsules, cocoa drinks, etc..** proceed as directed in the previous chapter; on reaching step 5, press "Espresso or Long Coffee" depending on the desired quantities.




NOTE:

Traces of the product just dispensed may remain inside the machine. When switching from one product to another, in order to fully enjoy the flavor of the beverage we suggest rinsing the machine by pressing the coffee button as if to dispense a coffee without inserting a capsule.


7

Programming the quantity of coffee in a cup

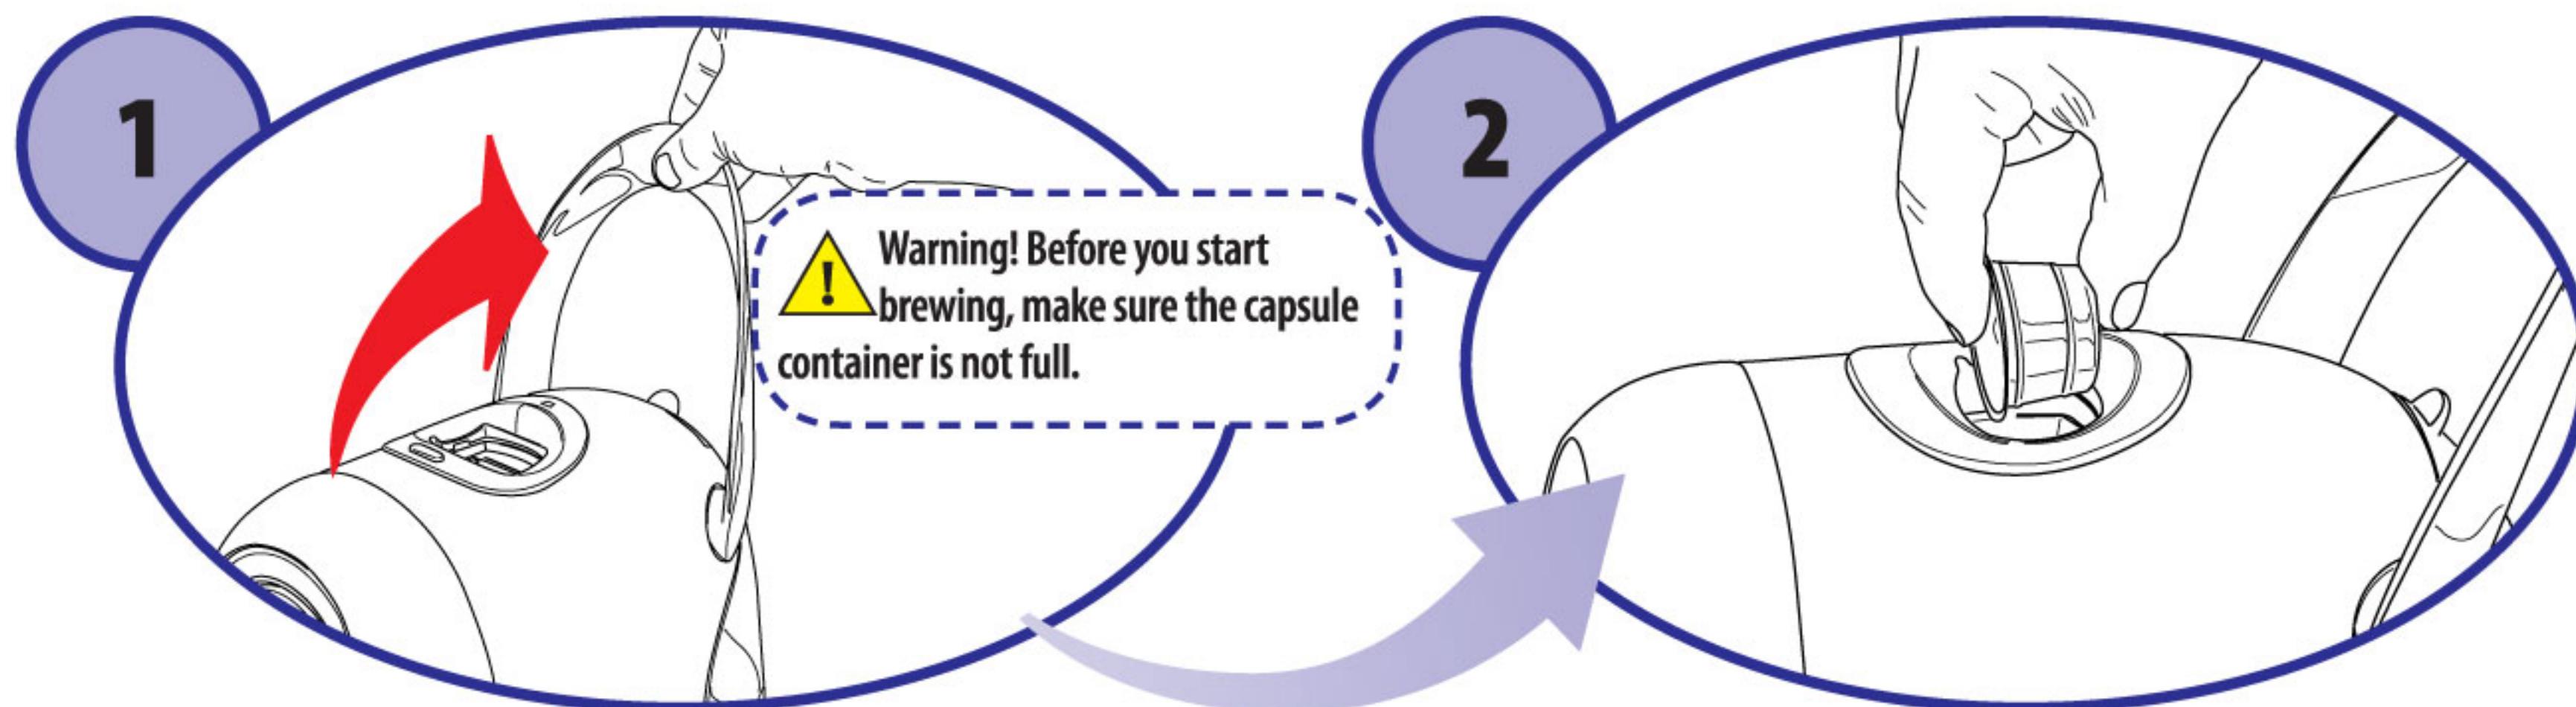


Raise the lever to open the capsule compartment.

Insert the capsule, pressing it gently into place.

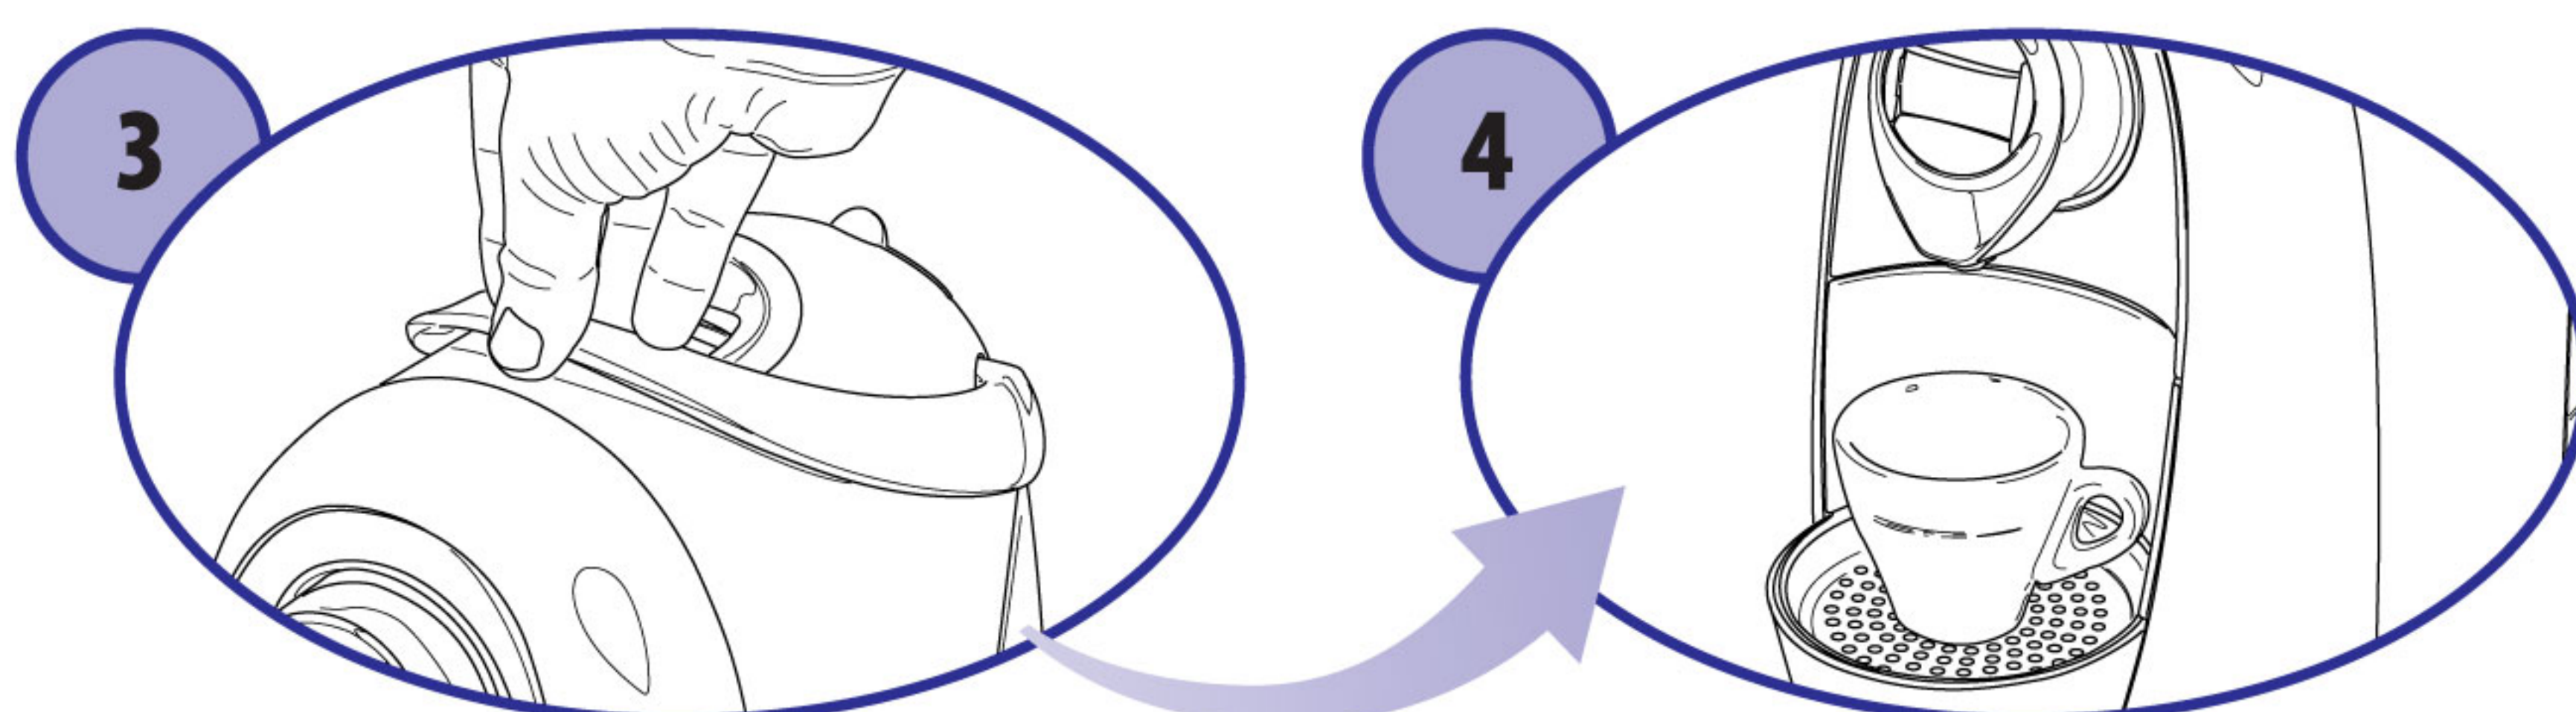

Close the lever firmly.

Place a cup or mug under the coffee dispensing spout depending on the type of coffee you wish to program (see chapter 4).

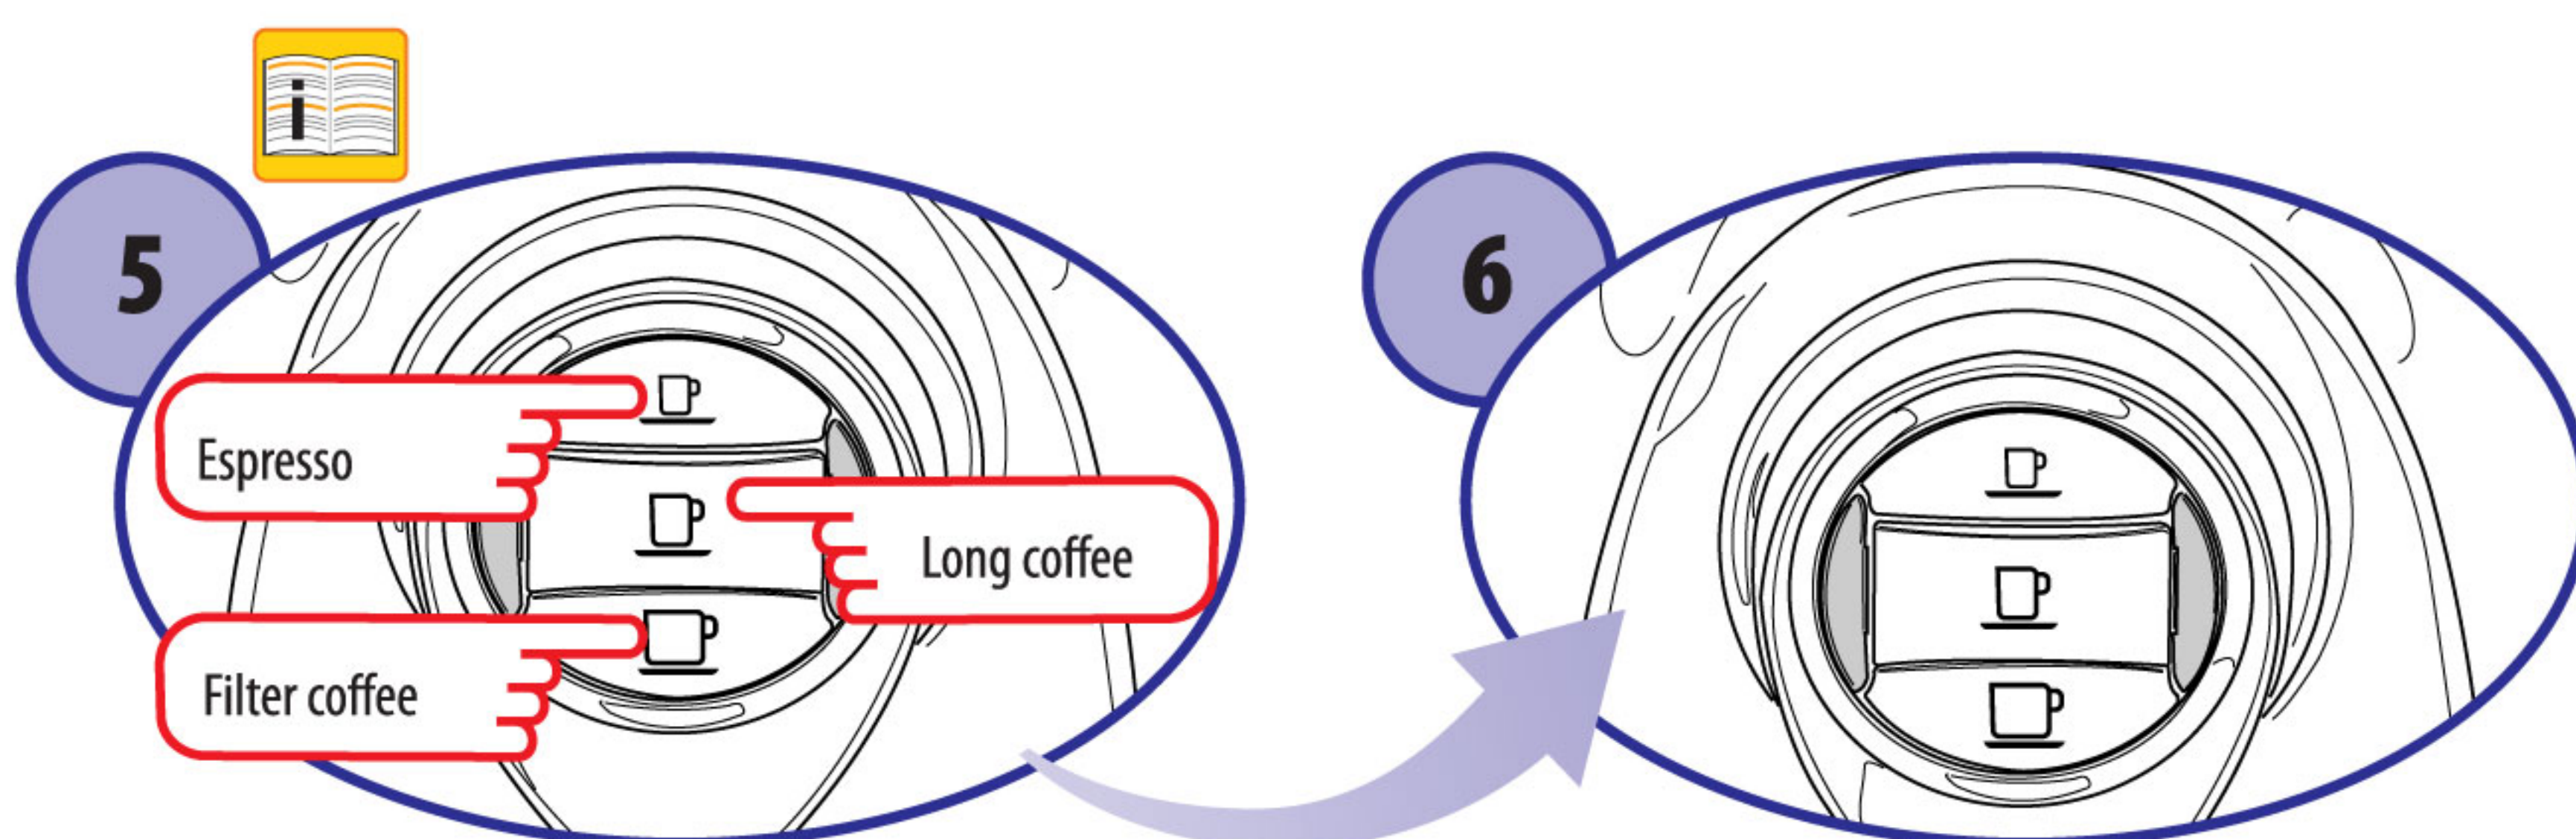

Press the desired coffee button and **keep it pressed down**.

On reaching the desired amount of coffee in a cup, release the button. Now the button is programmed. To reprogram the button or program another button repeat the above steps.

8

Saving energy


The machine features a function (normally activated) which automatically reduces energy consumption by around 98% after one hour has elapsed since it was last used. To deactivate (or reactivate) this function, proceed as follows:

1




Make sure the lever is lowered.

2

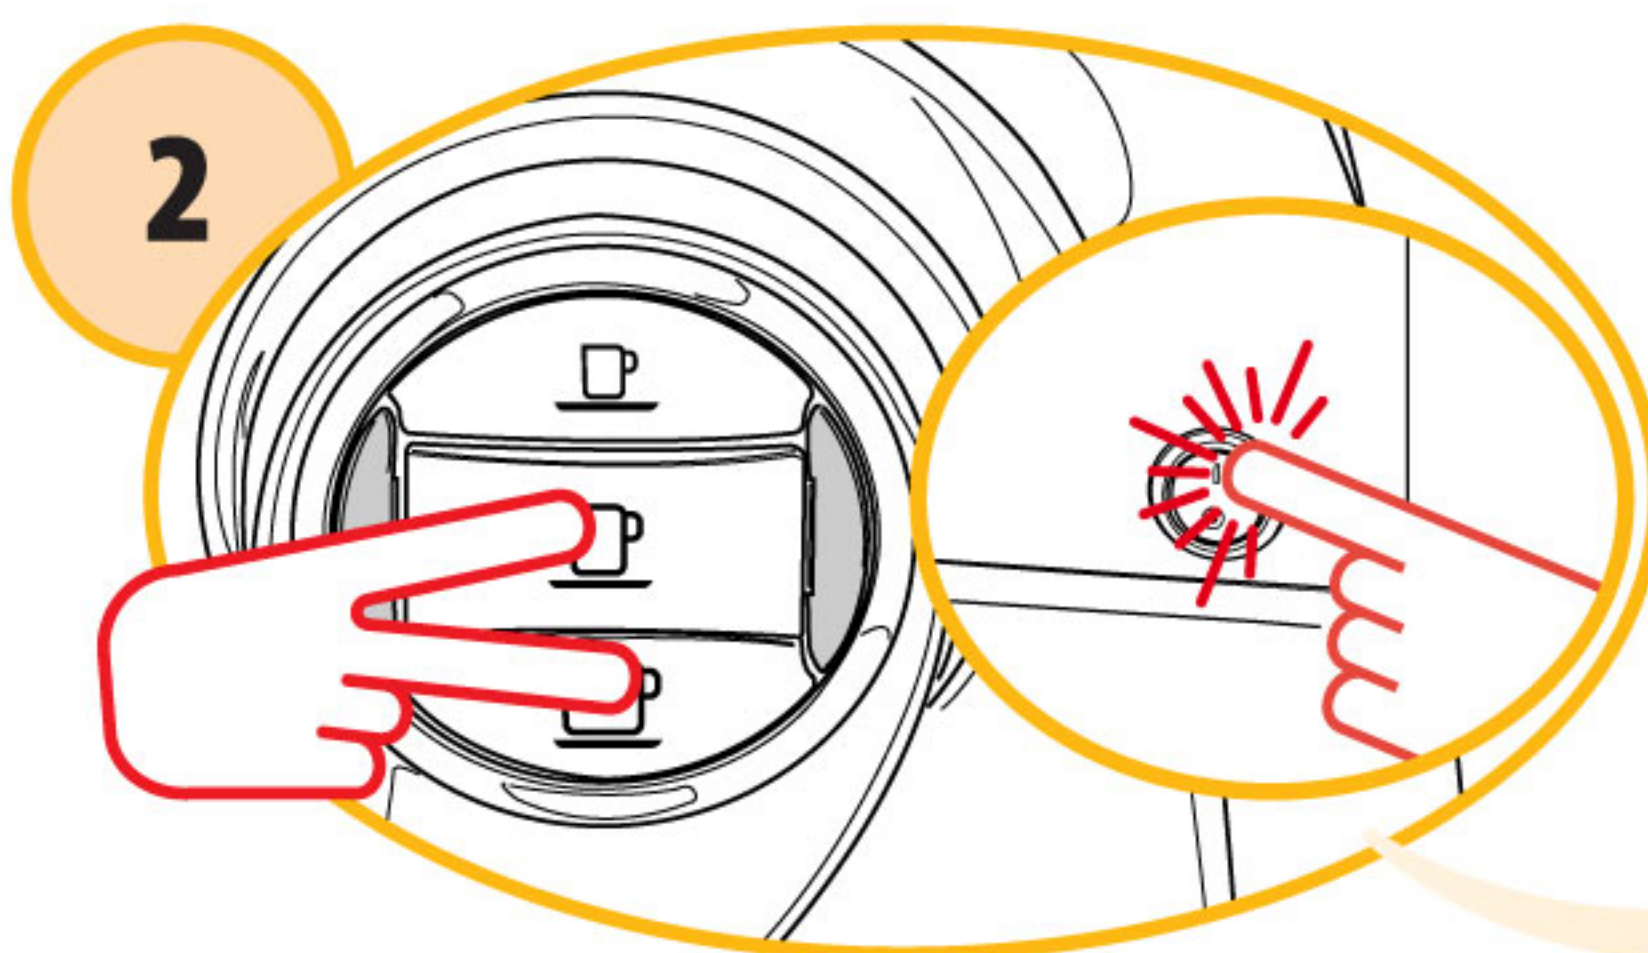


Keep the buttons pressed down and at the same time turn on the machine by pressing the power on/off switch.


3

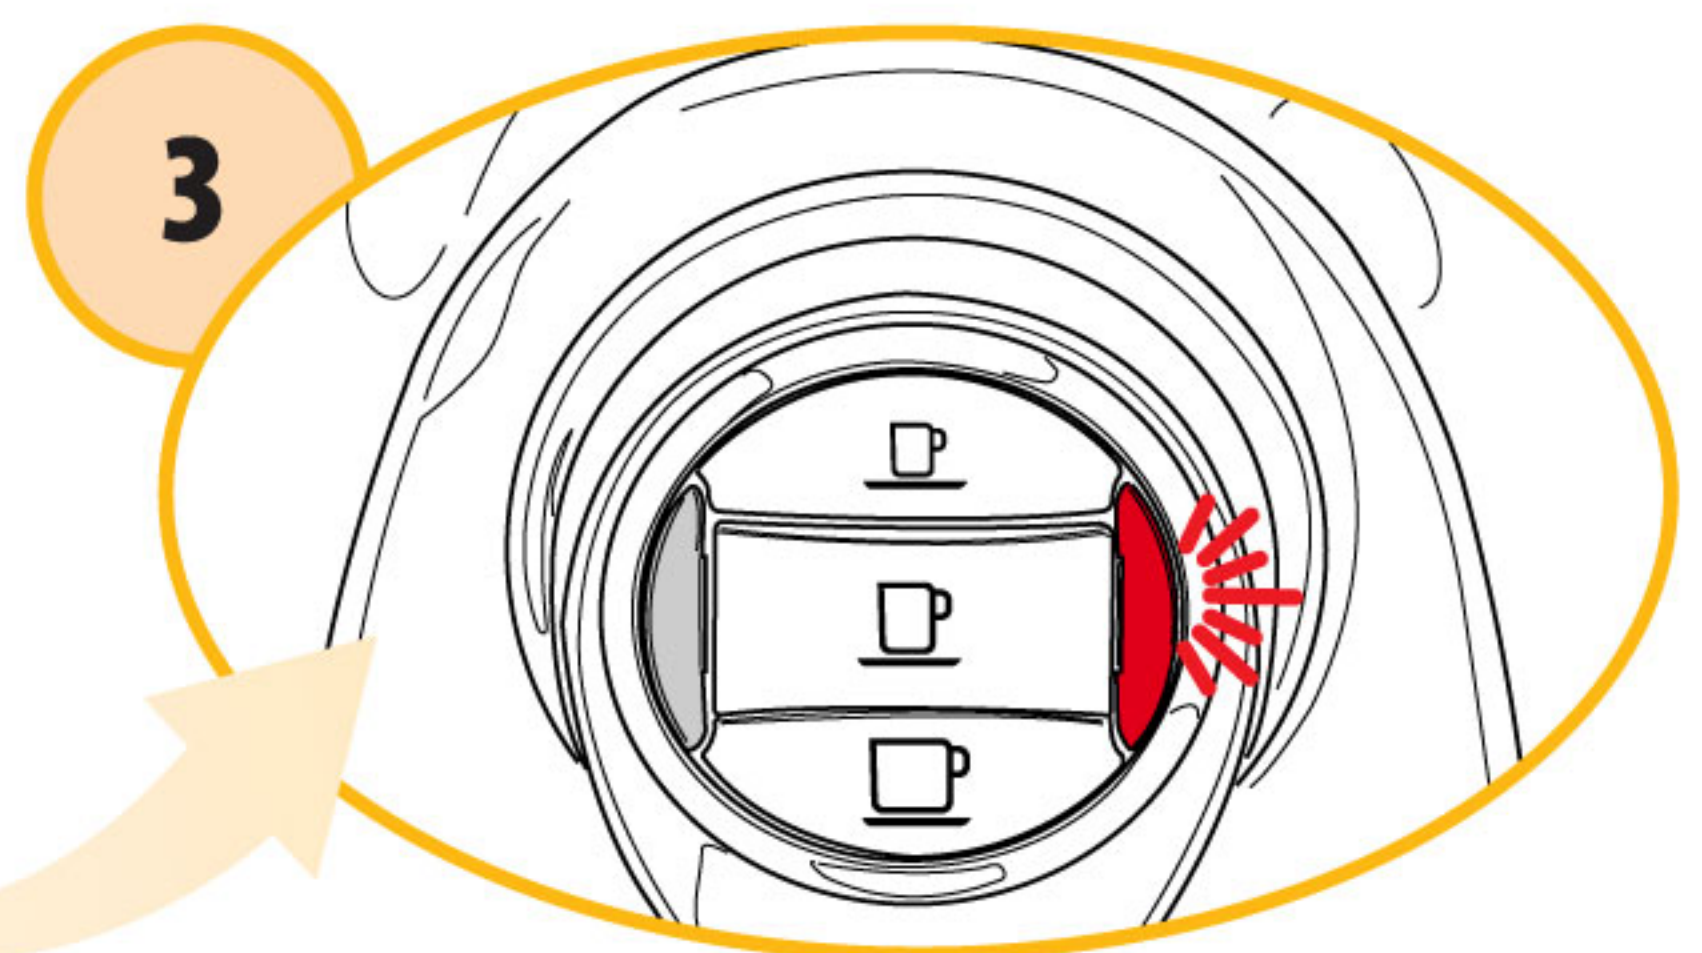

The indicator light will flash three times and three beeps will be emitted to confirm deactivation of the "Energy Saving" function. When the function is reactivated, the indicator light will flash twice and two beeps will be emitted.

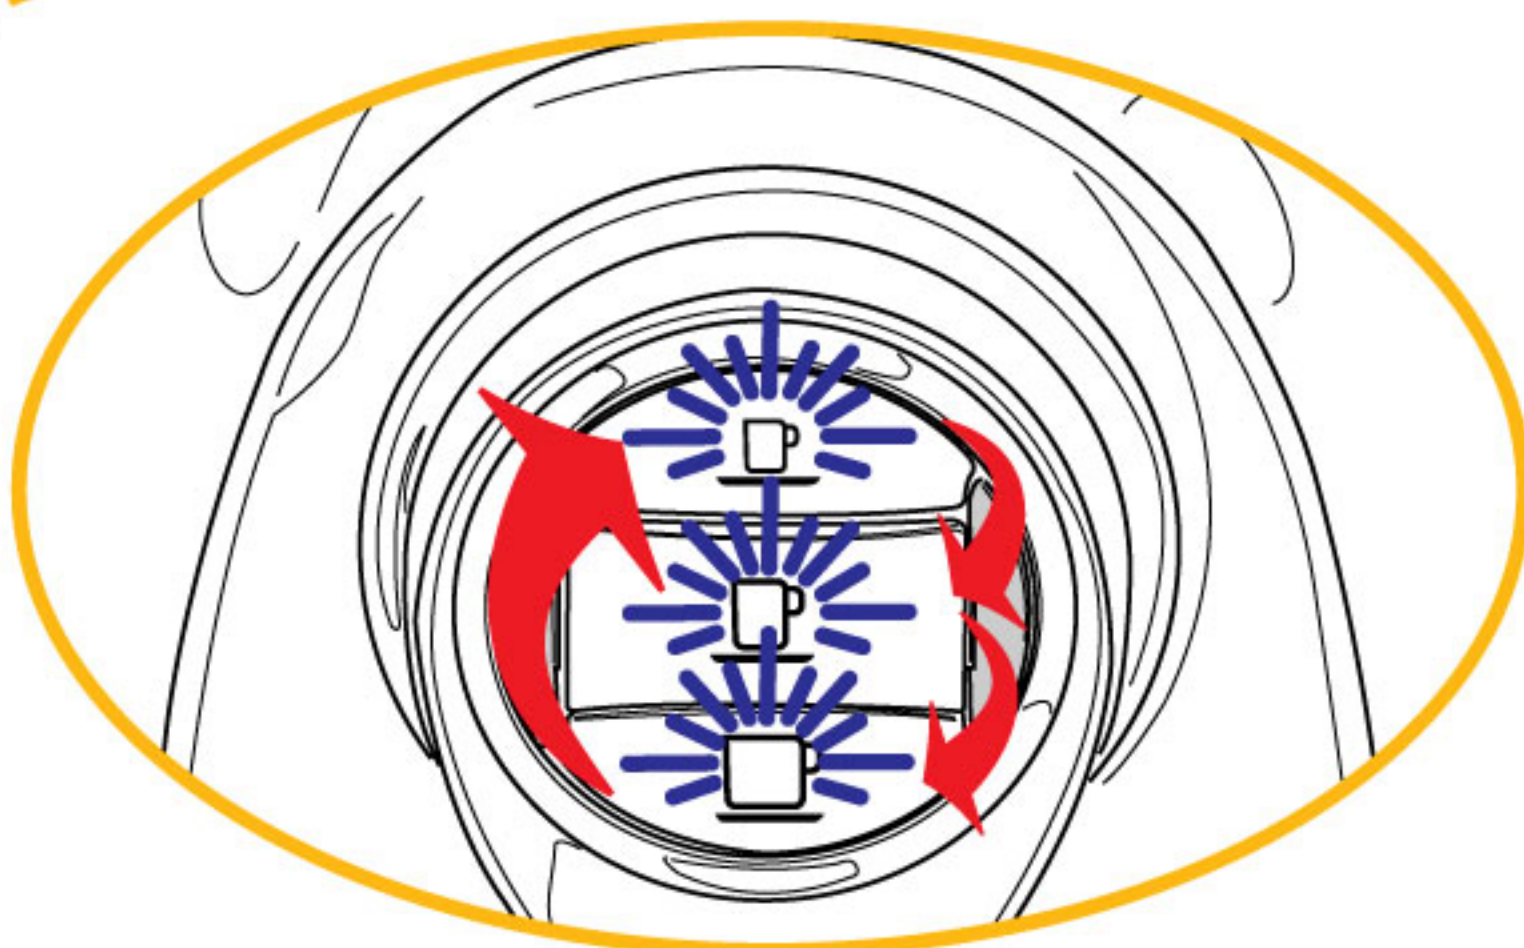

Once the "Energy Saving" function has been programmed, the machine will automatically reduce consumption one hour after the last use. The buttons will cyclically and slowly blink with a WHITE light.

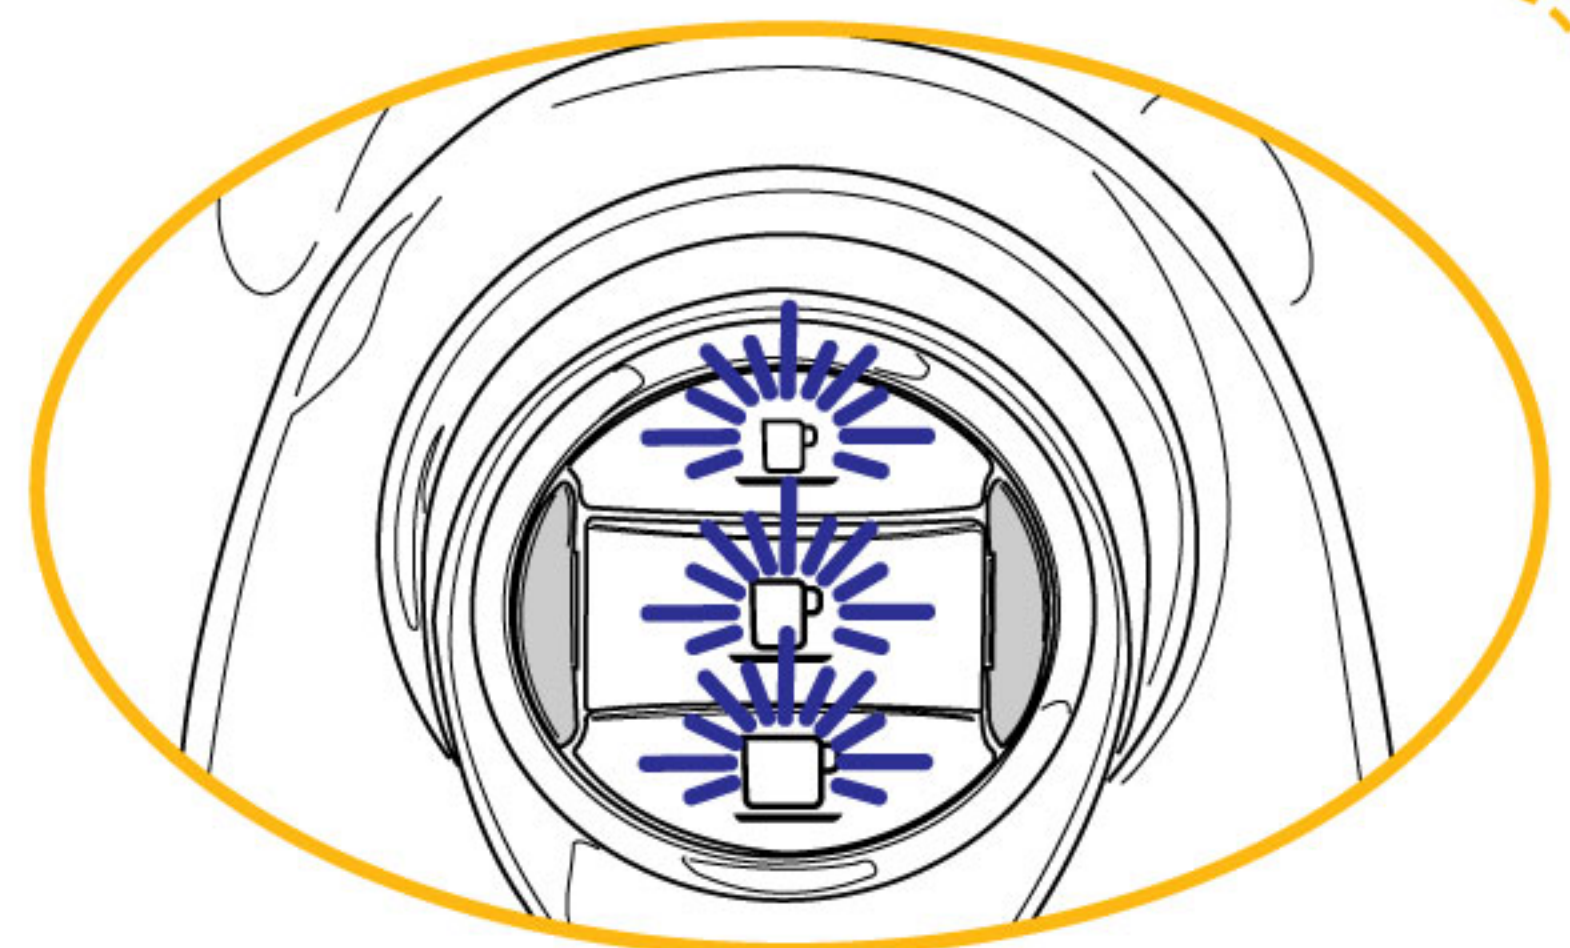


To restore normal operating conditions, press any button or raise the lever. The appliance will start warming up. When the appliance is ready for use the buttons will be steadily lit WHITE.

9

Daily maintenance

1

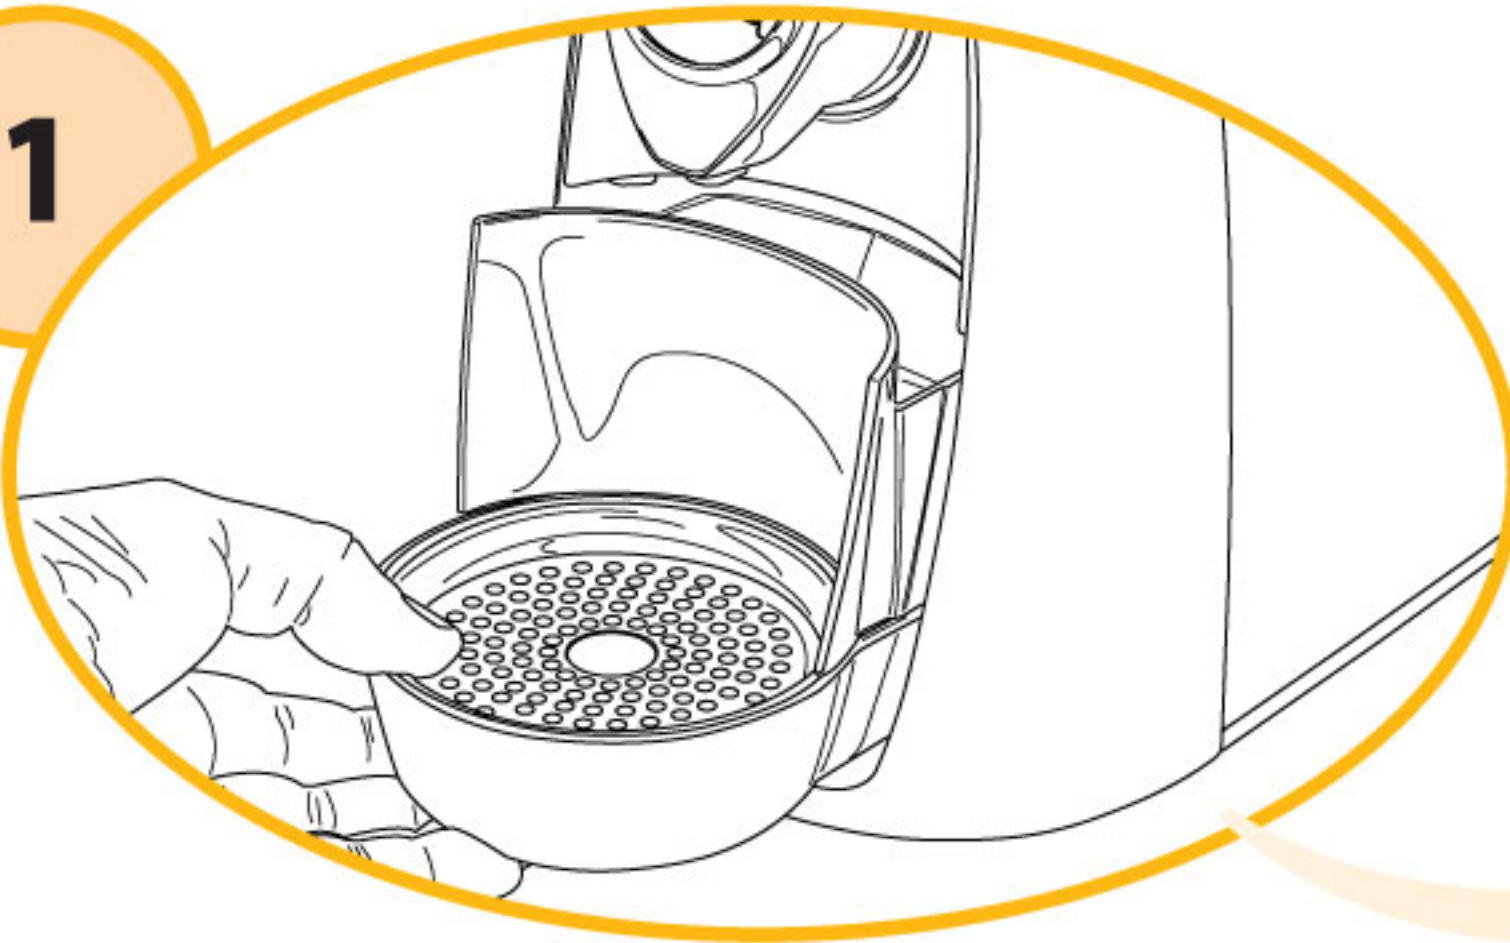


Remove the drip tray and used capsule drawer.

2




Lift the capsule drawer; empty and rinse it out.

3

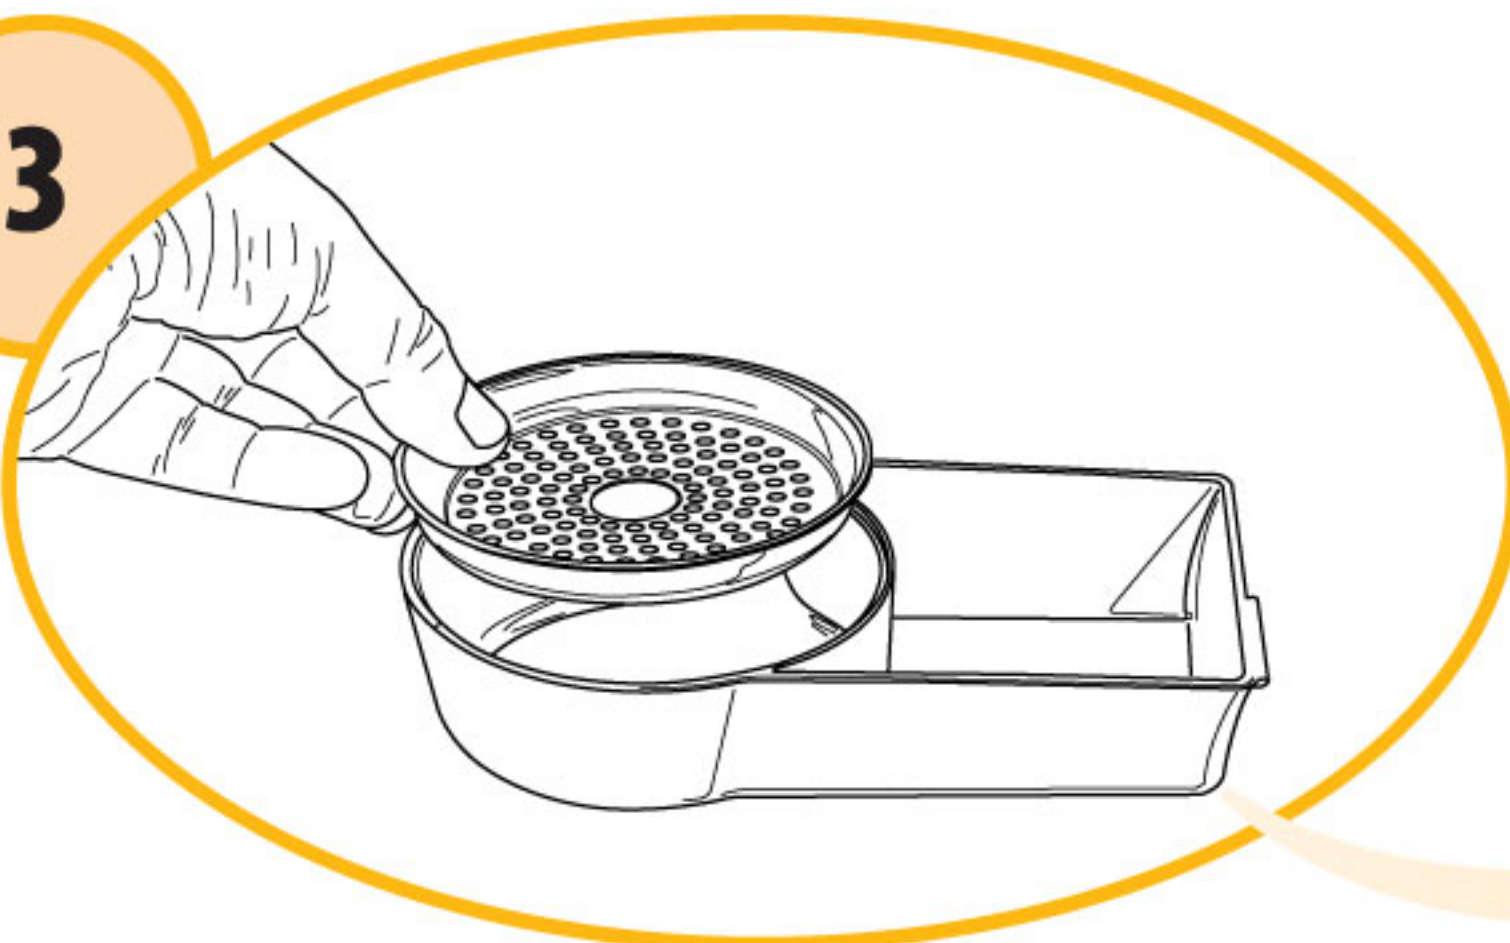

Remove the grill. Empty the drip tray and rinse it out with fresh water.

4

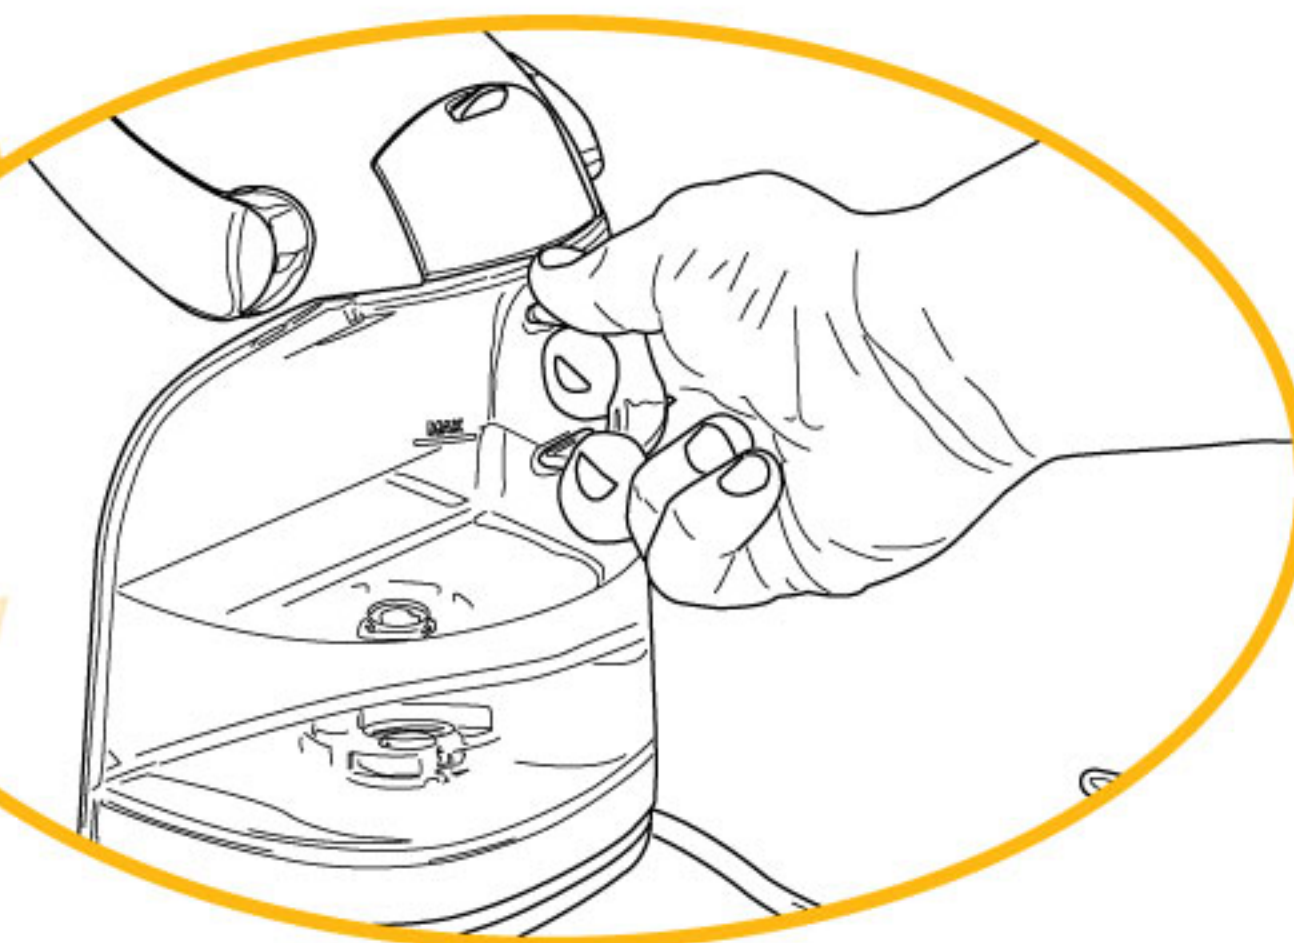

Remove the water tank. Empty and rinse out the tank. The water tank is NOT dishwasher safe.



Use a soft, dampened cloth and a neutral detergent to clean the surfaces of the appliance.



The plastic parts of the machine are not dishwasher safe.

10


Descaling the machine




The machine features an advanced program that monitors how much water is used to dispense beverages. This measurement provides the user with indications as to when the machine needs to be descaled. Specific indications are given in chapter 3.




Carefully read the directions for use on the package of the descaling agent. Avoid contact with eyes, skin and machine surfaces. Do not use vinegar: it could damage your appliance! During descaling, do not turn the machine off.

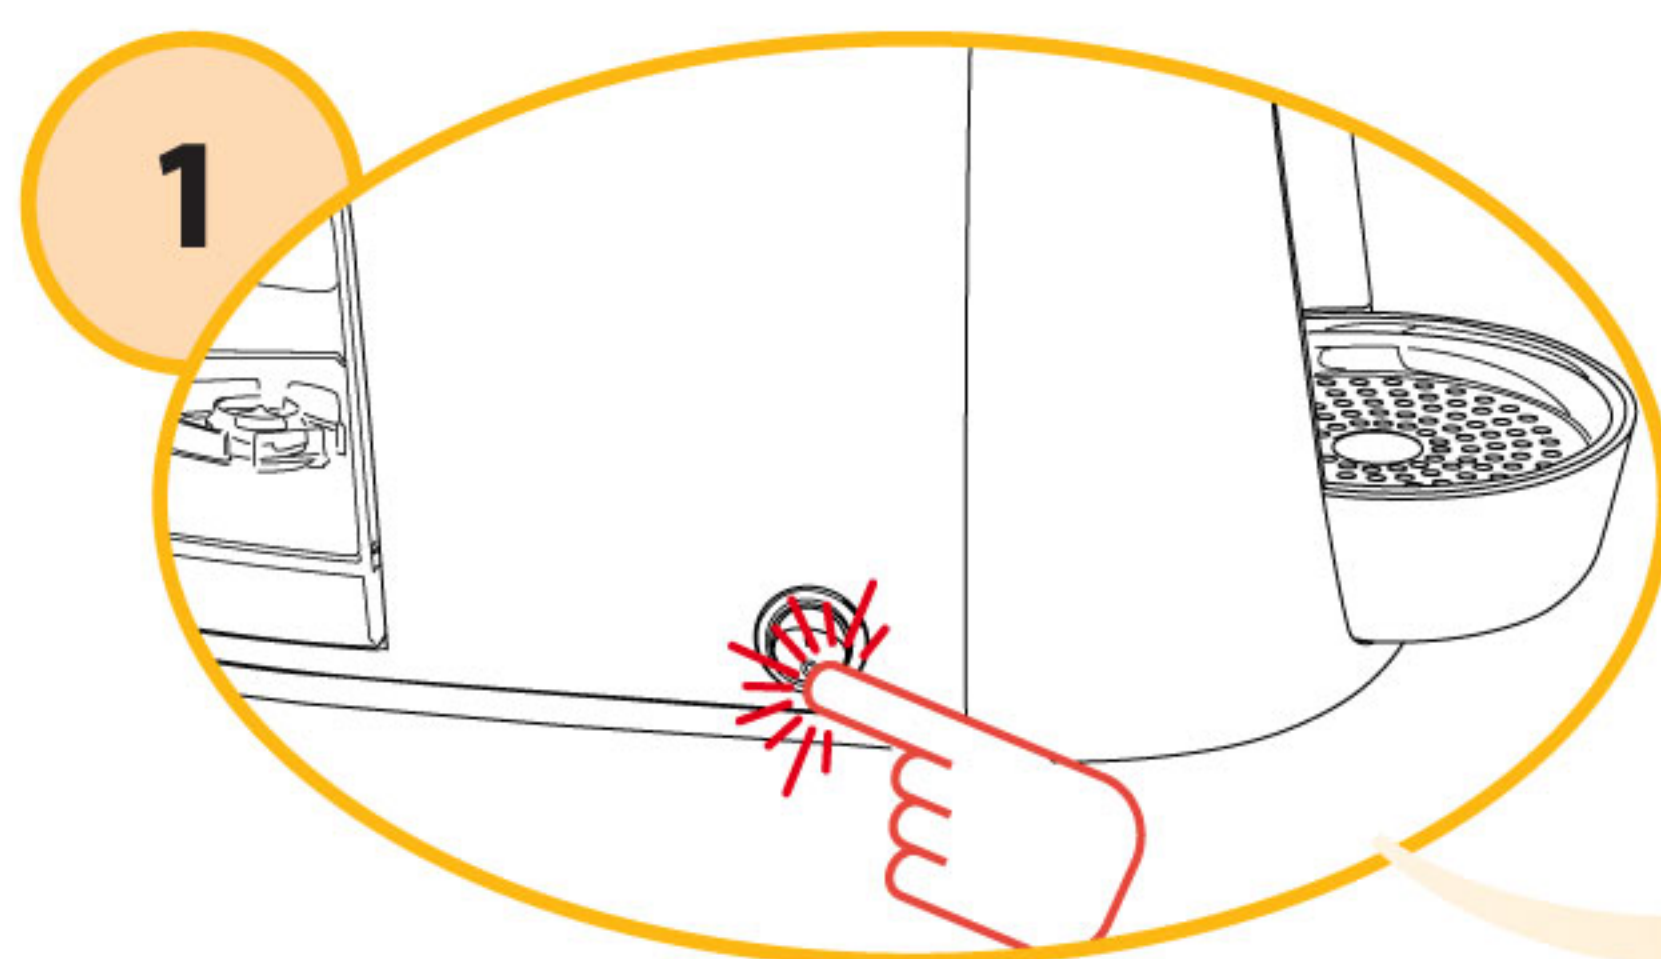

Turn the machine off.

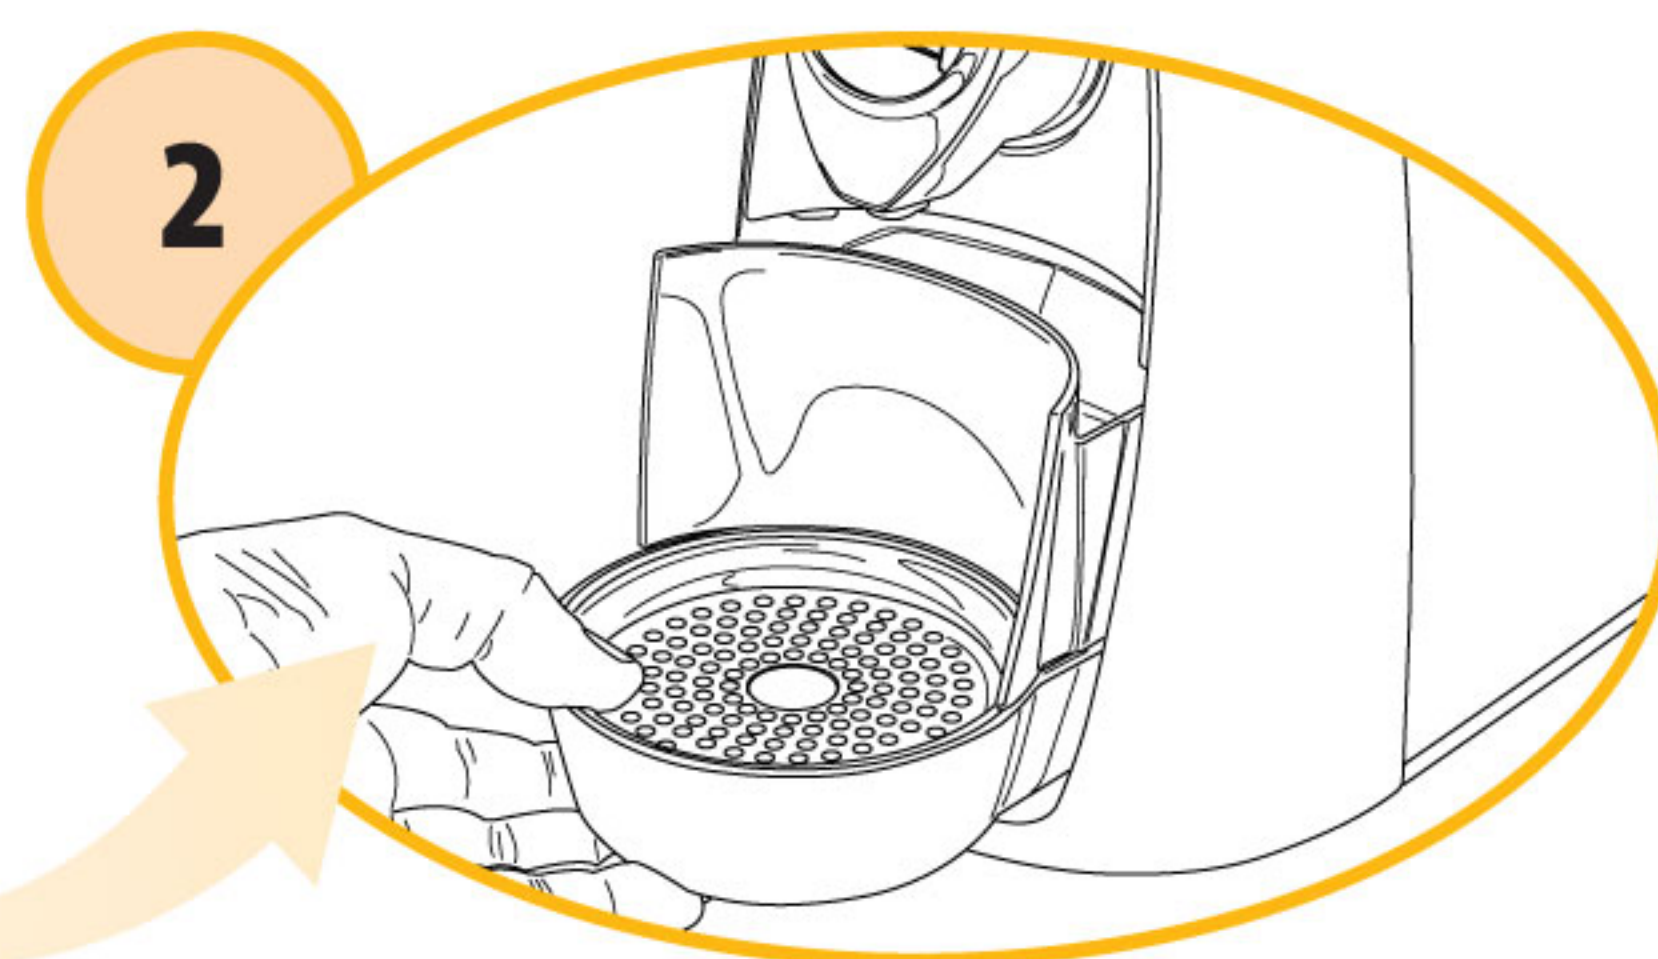

Empty and rinse out the used capsule drawer and drip tray.

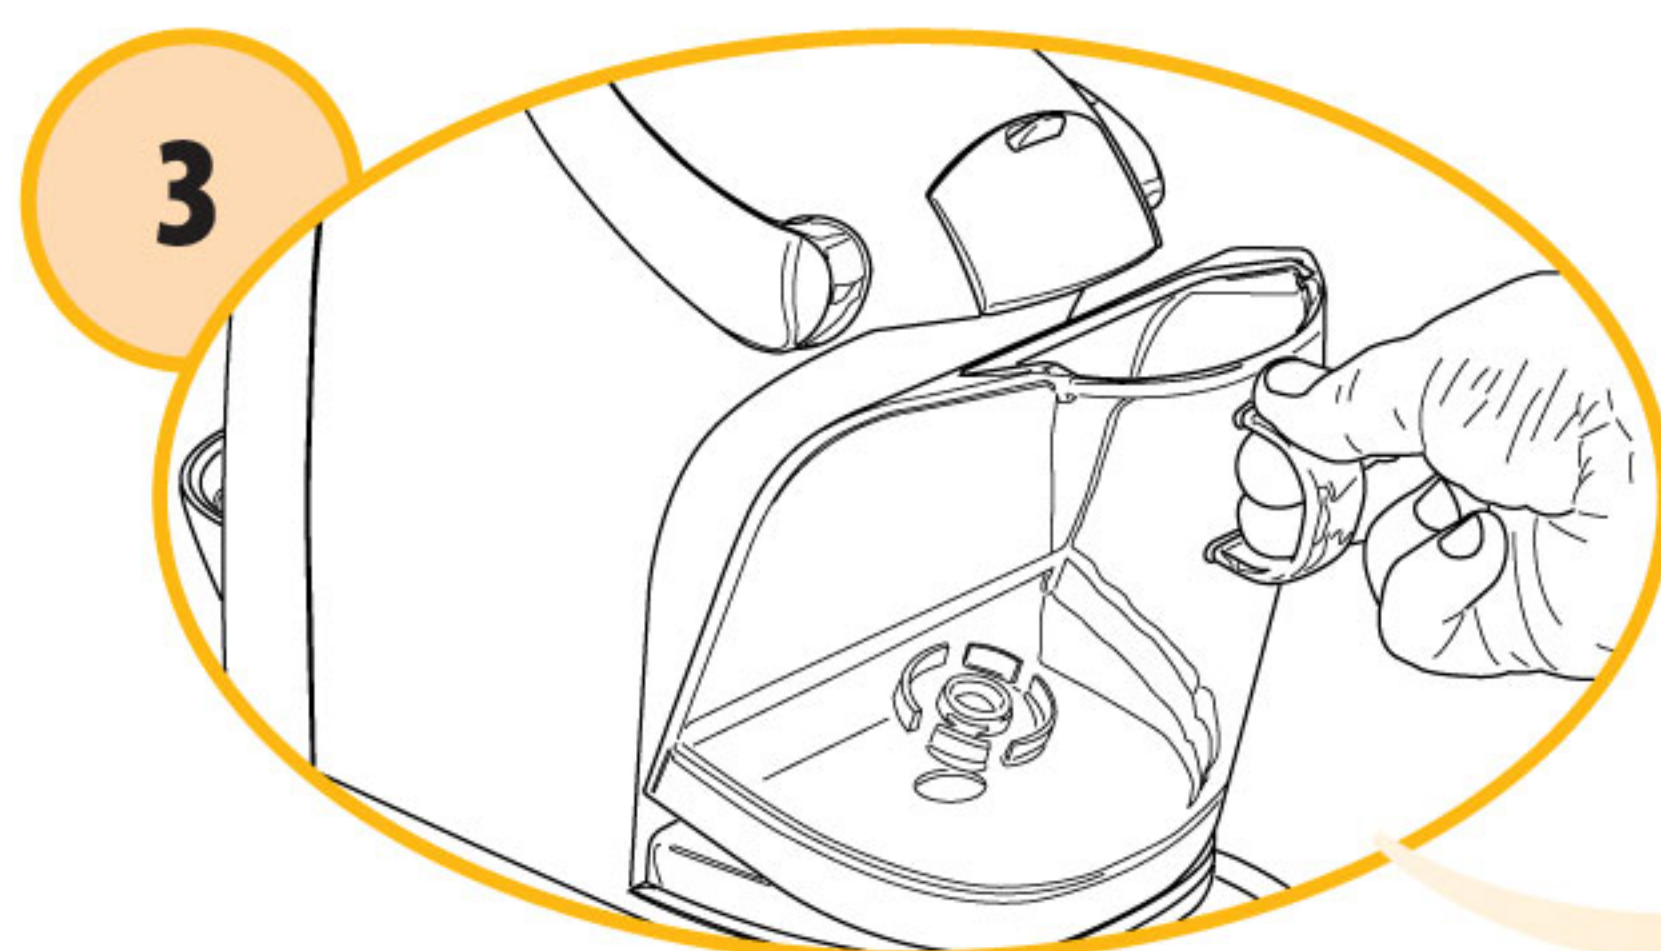


Remove and empty the water tank.




Prepare the descaling solution following the manufacturer's directions and pour a liter of solution into the tank.



Place a container (at least 250 ml) under the coffee dispensing spout.

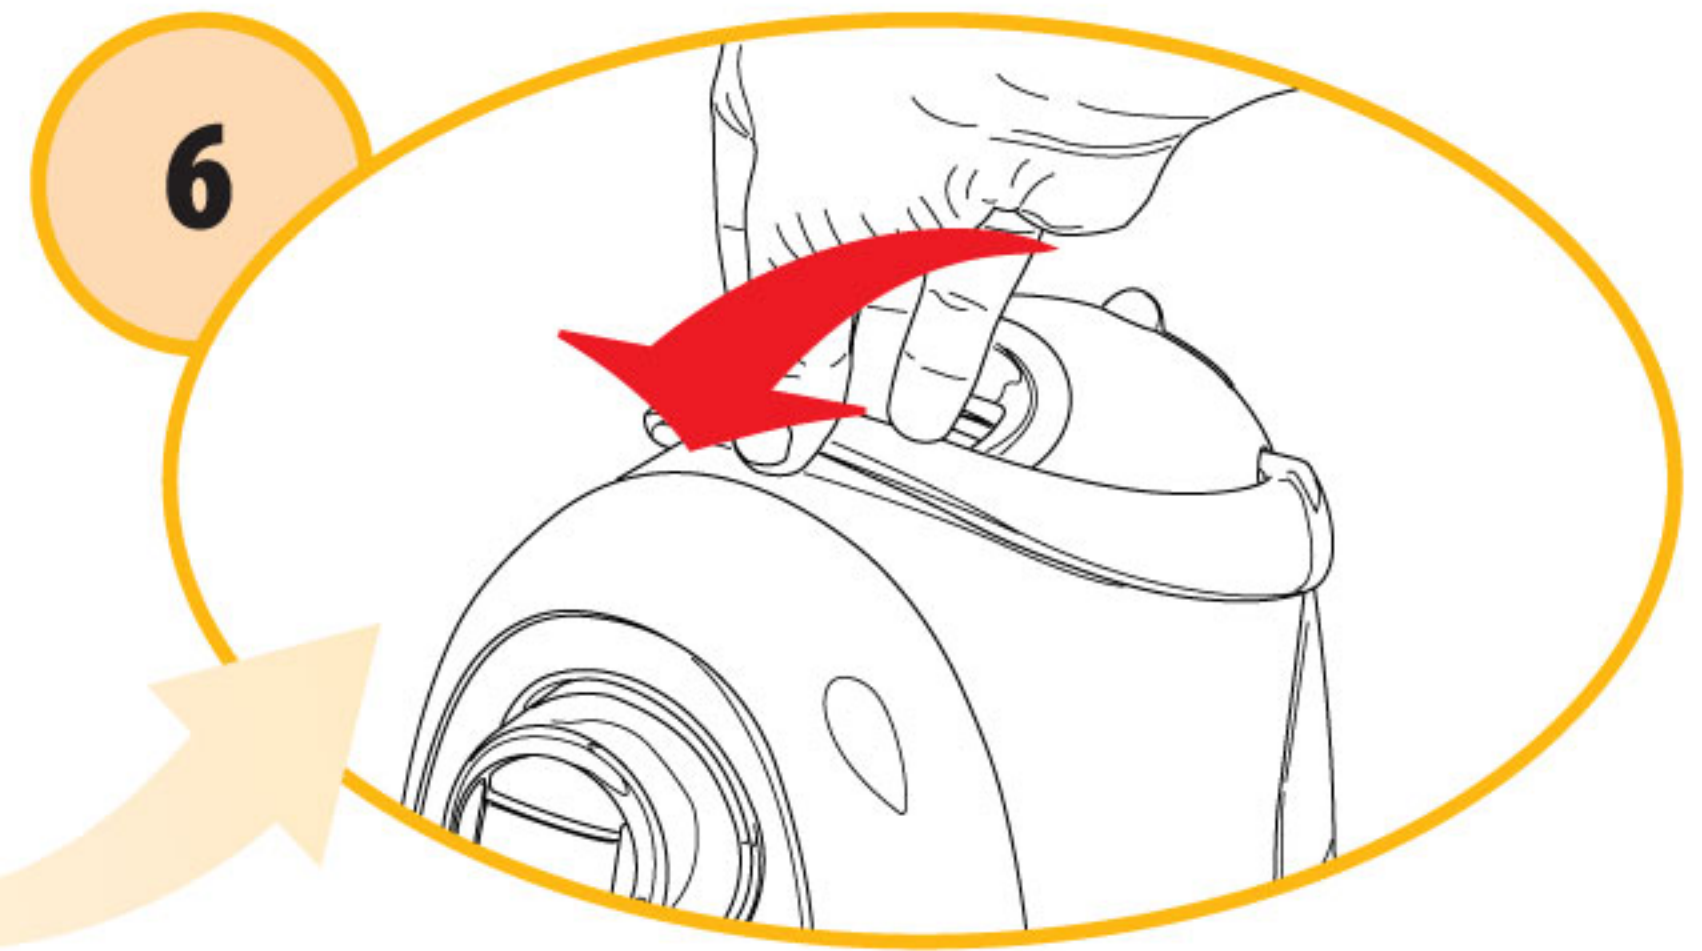


Make sure the lever is lowered.

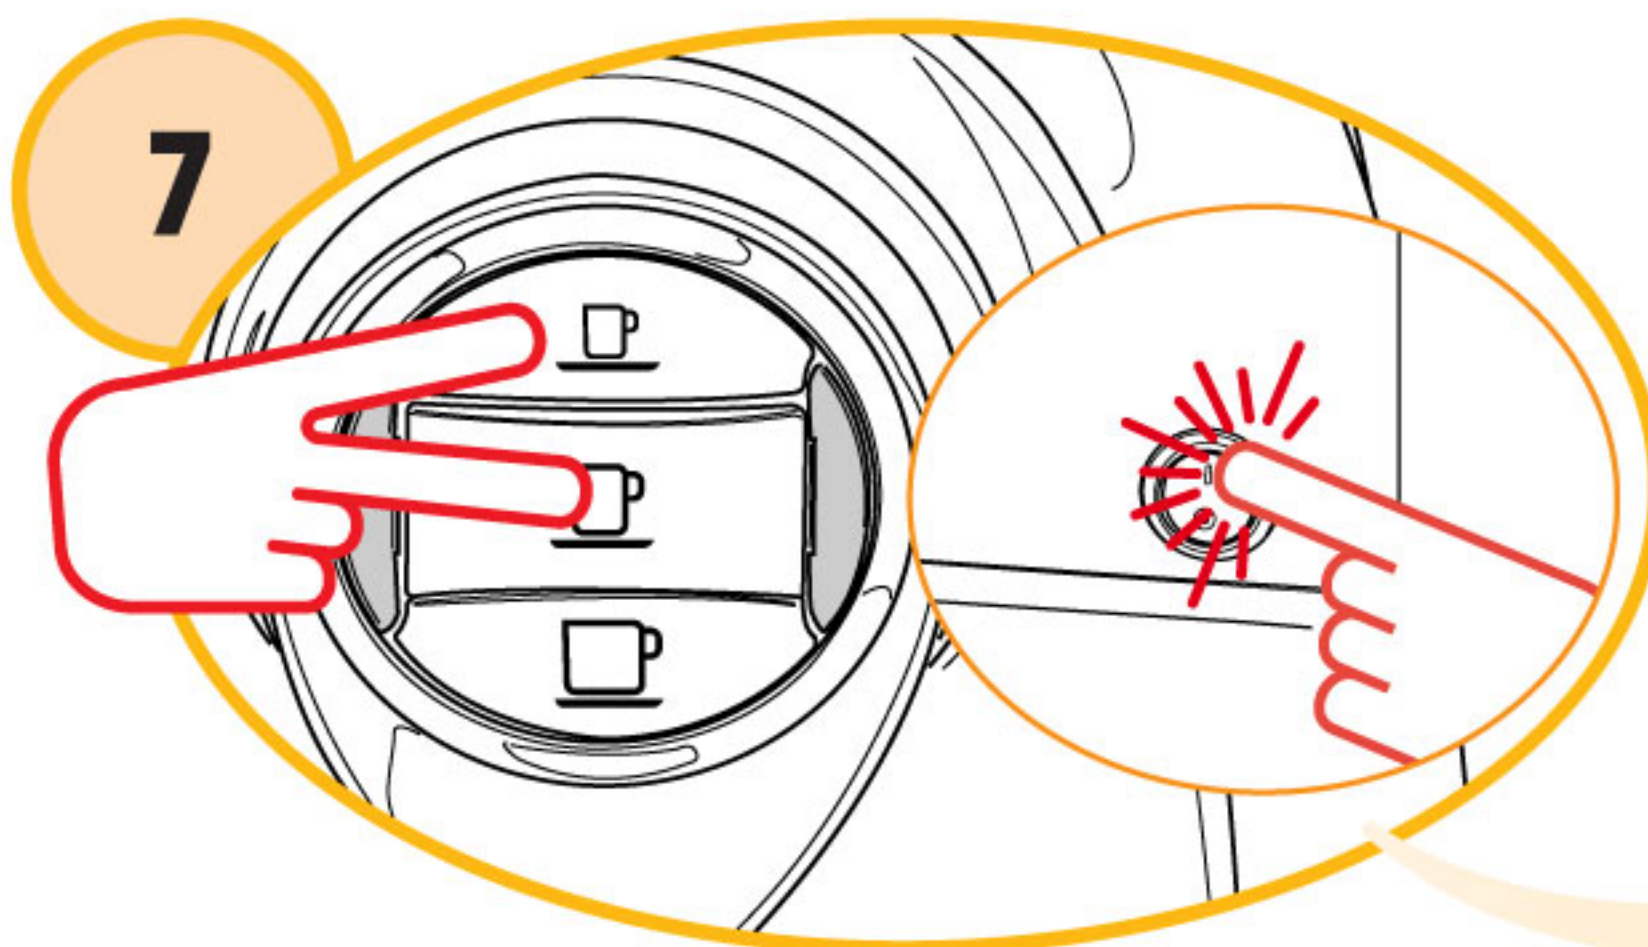

Keep the buttons pressed down and simultaneously turn on the machine by pressing the power on/off switch.




The blue button and the LEDs blink alternately. Press the button to start the descaling cycle.

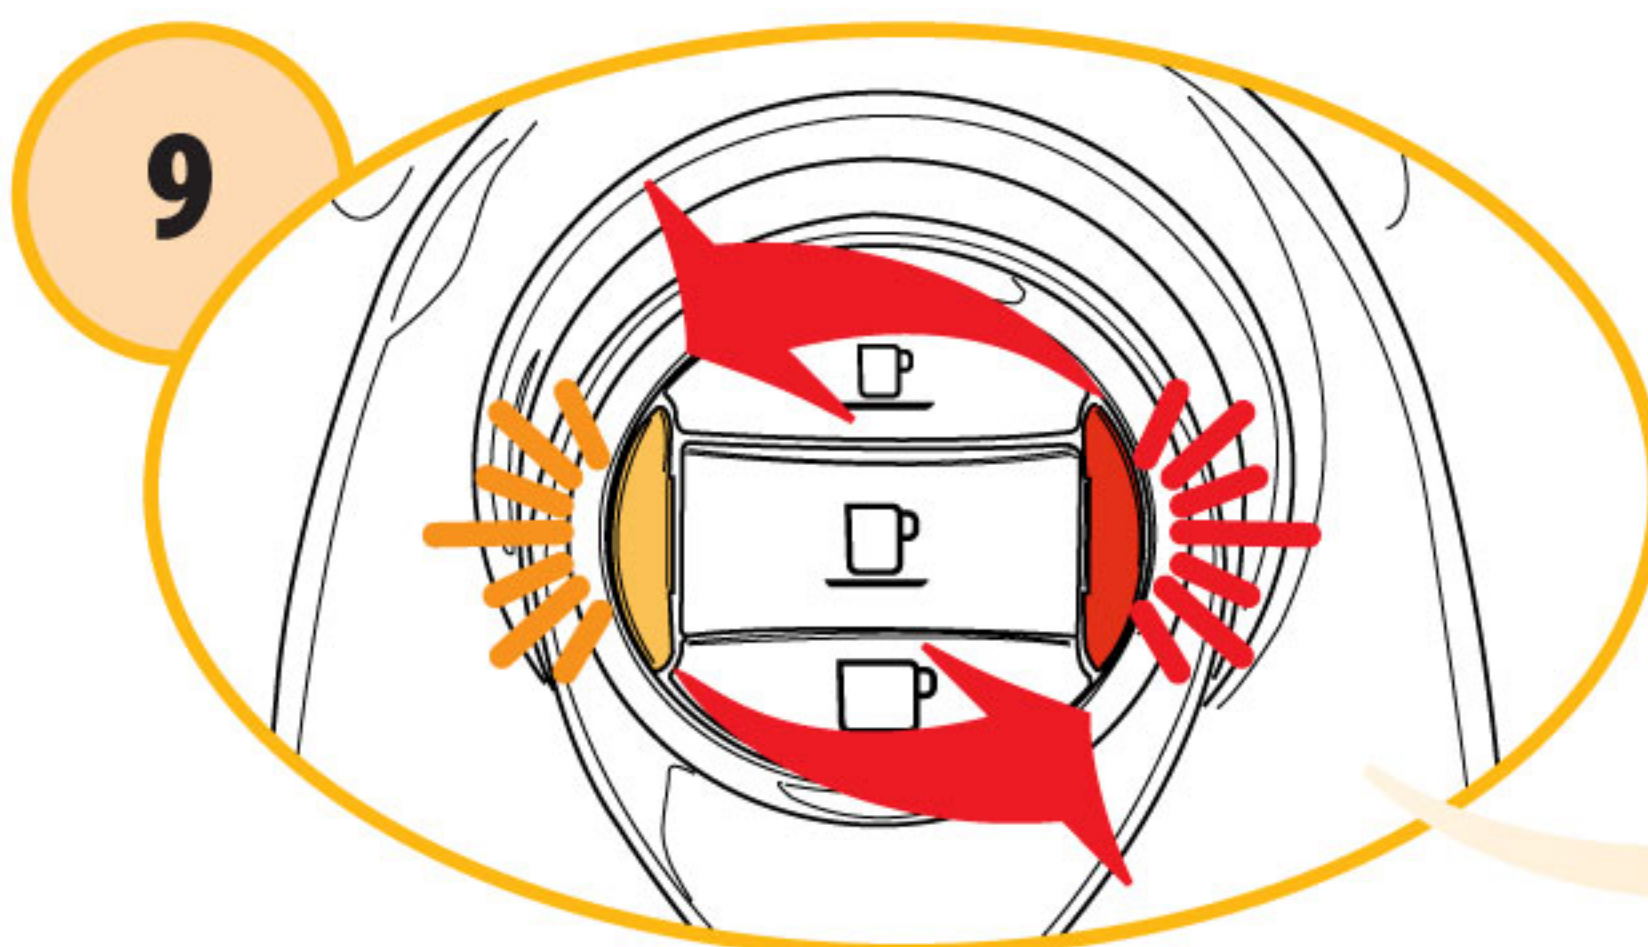

The machine delivers descaling solution at intervals. During this phase the LEDs blink alternately.



If the container fills up, empty it out.

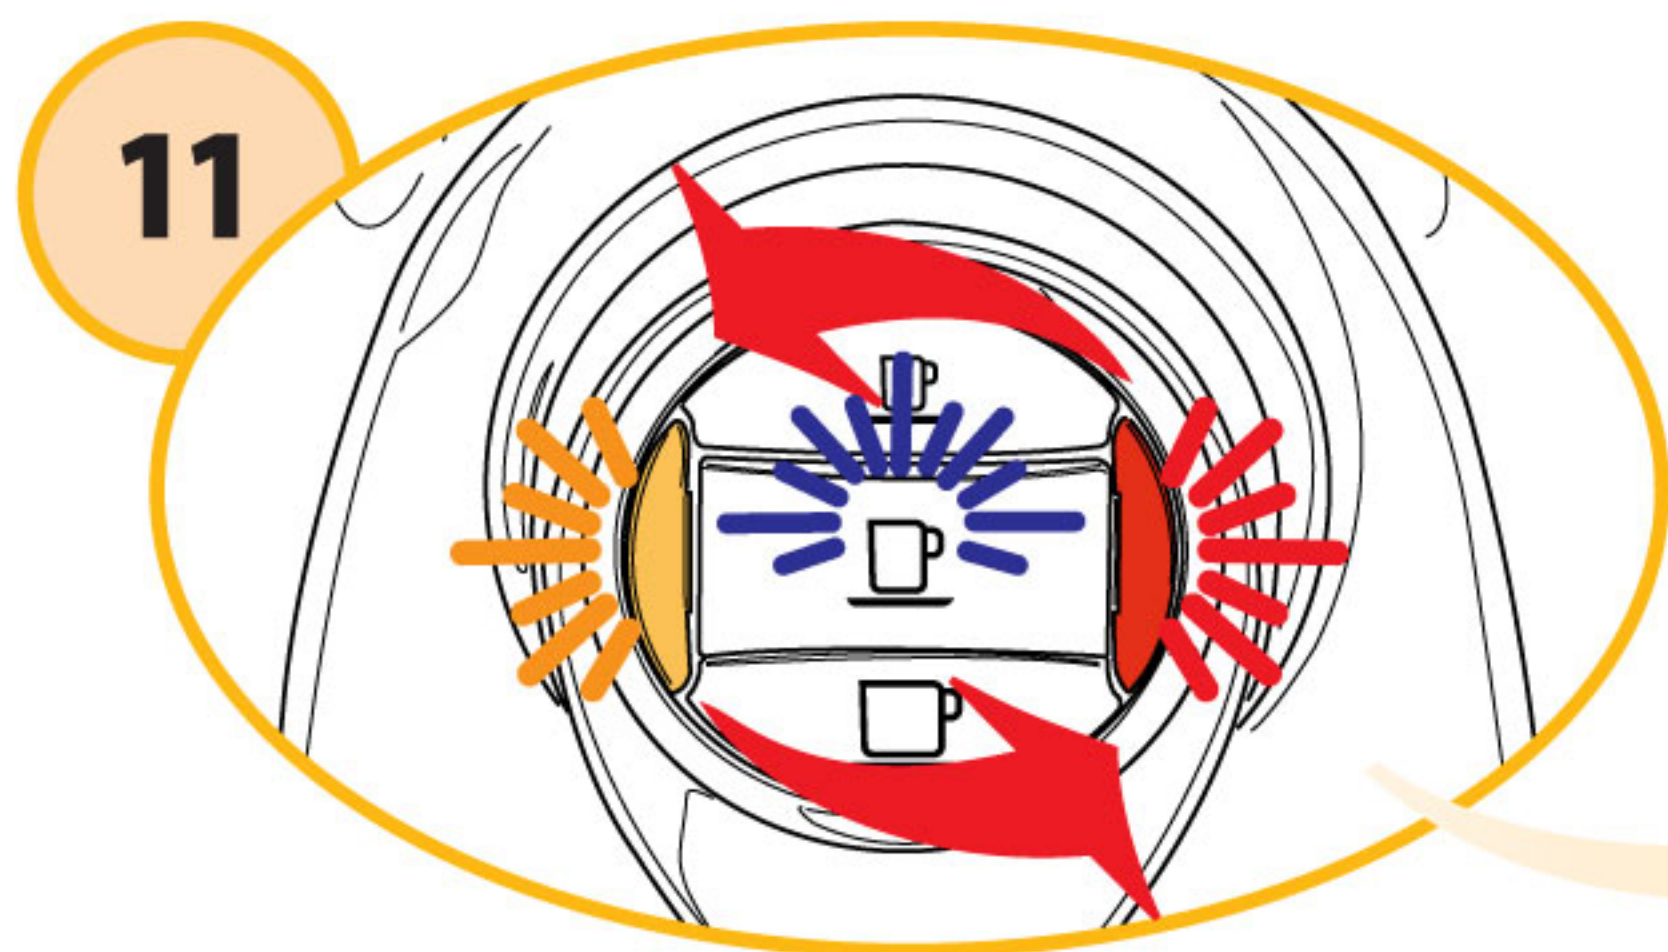

When the cycle is over, the blue button and the LEDs blink alternately.




Carefully rinse out the water tank and fill it with fresh drinking water.



Empty and rinse out the used capsule drawer and drip tray.




The blue button and the LEDs blink alternately. Press the button to start the rinse cycle.

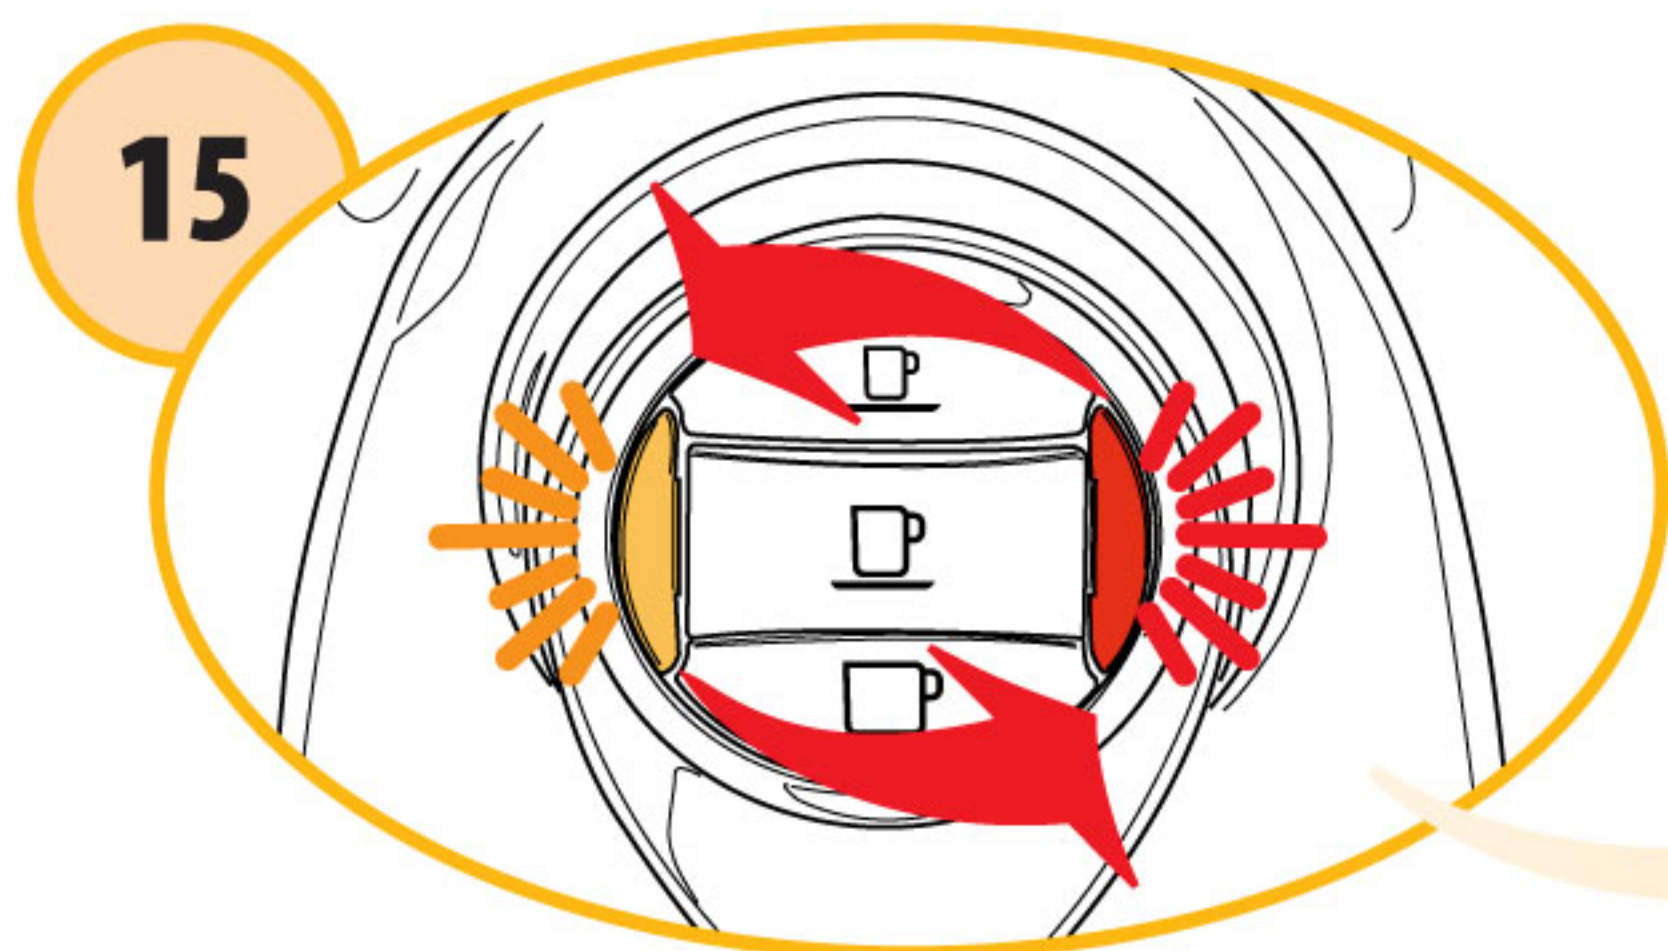

Rinse water will be run through the machine. During this phase the LEDs blink alternately (2 blinks at a time).



If the container fills up, empty it out.

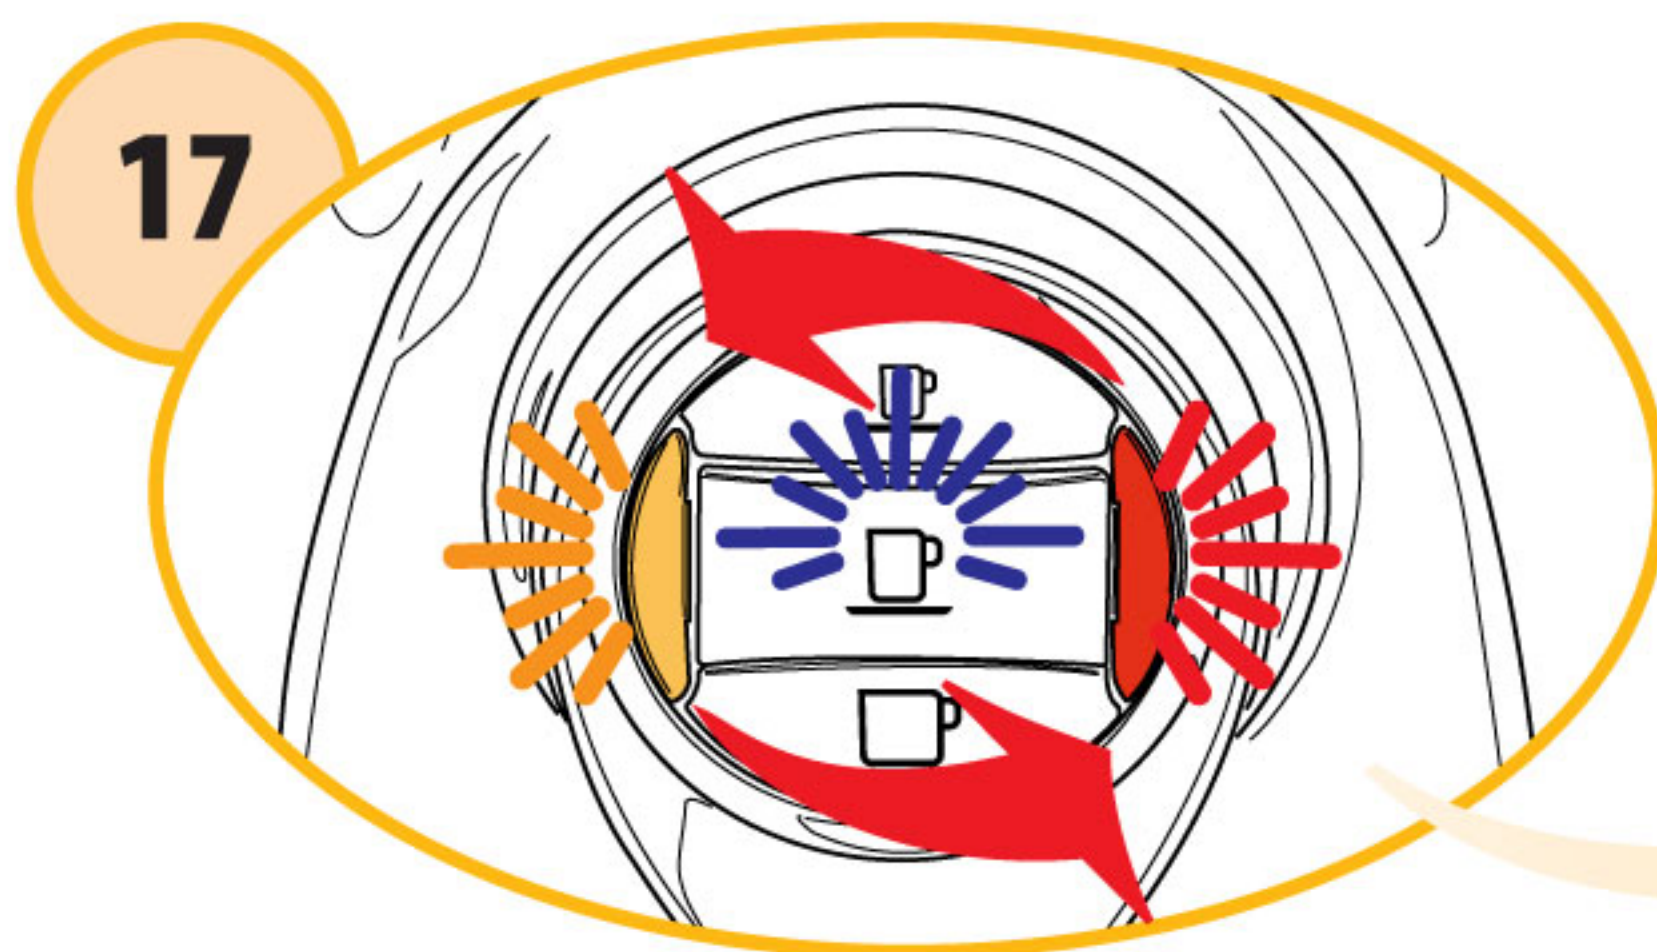


When the rinse cycle is over, the blue button and the LEDs blink alternately. The machine will emit a beep.



Carefully rinse out the water tank and fill it with fresh drinking water.



Empty and rinse out the used capsule drawer and drip tray.

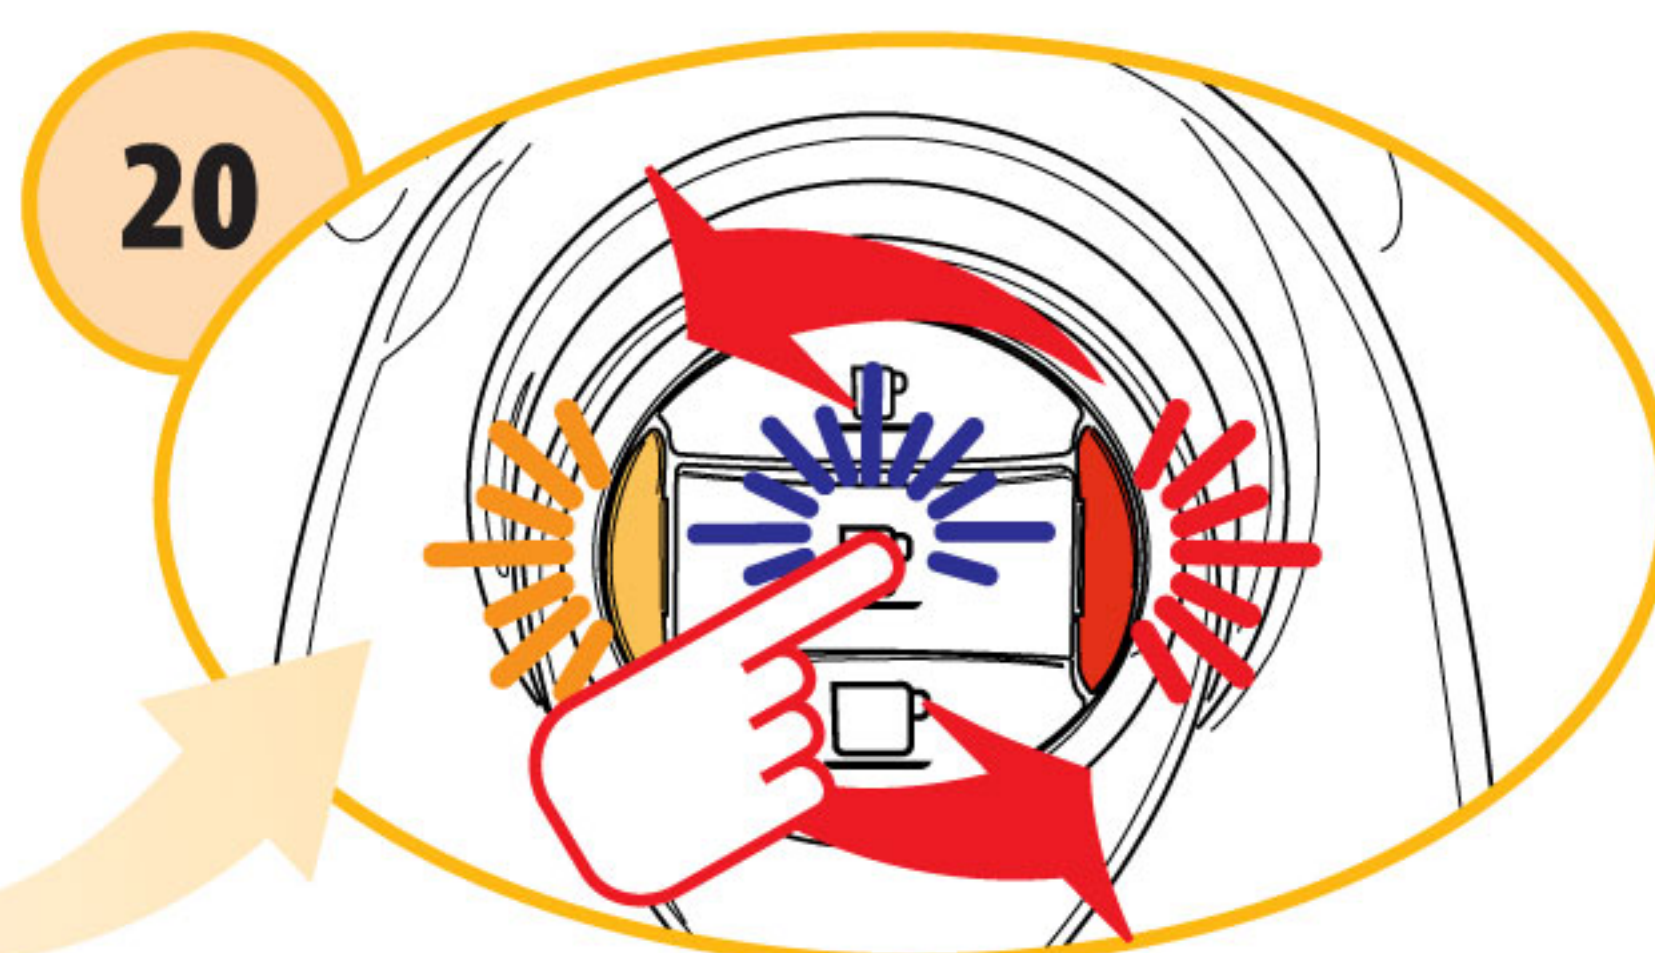

Press the button to quit the cycle.




Use a soft, dampened cloth and a neutral detergent to clean the surfaces of the appliance.

11


Draining the appliance




CAUTION - When the appliance is not used for a long time, it is necessary to drain the water lines. Liquids may freeze and damage the appliance.

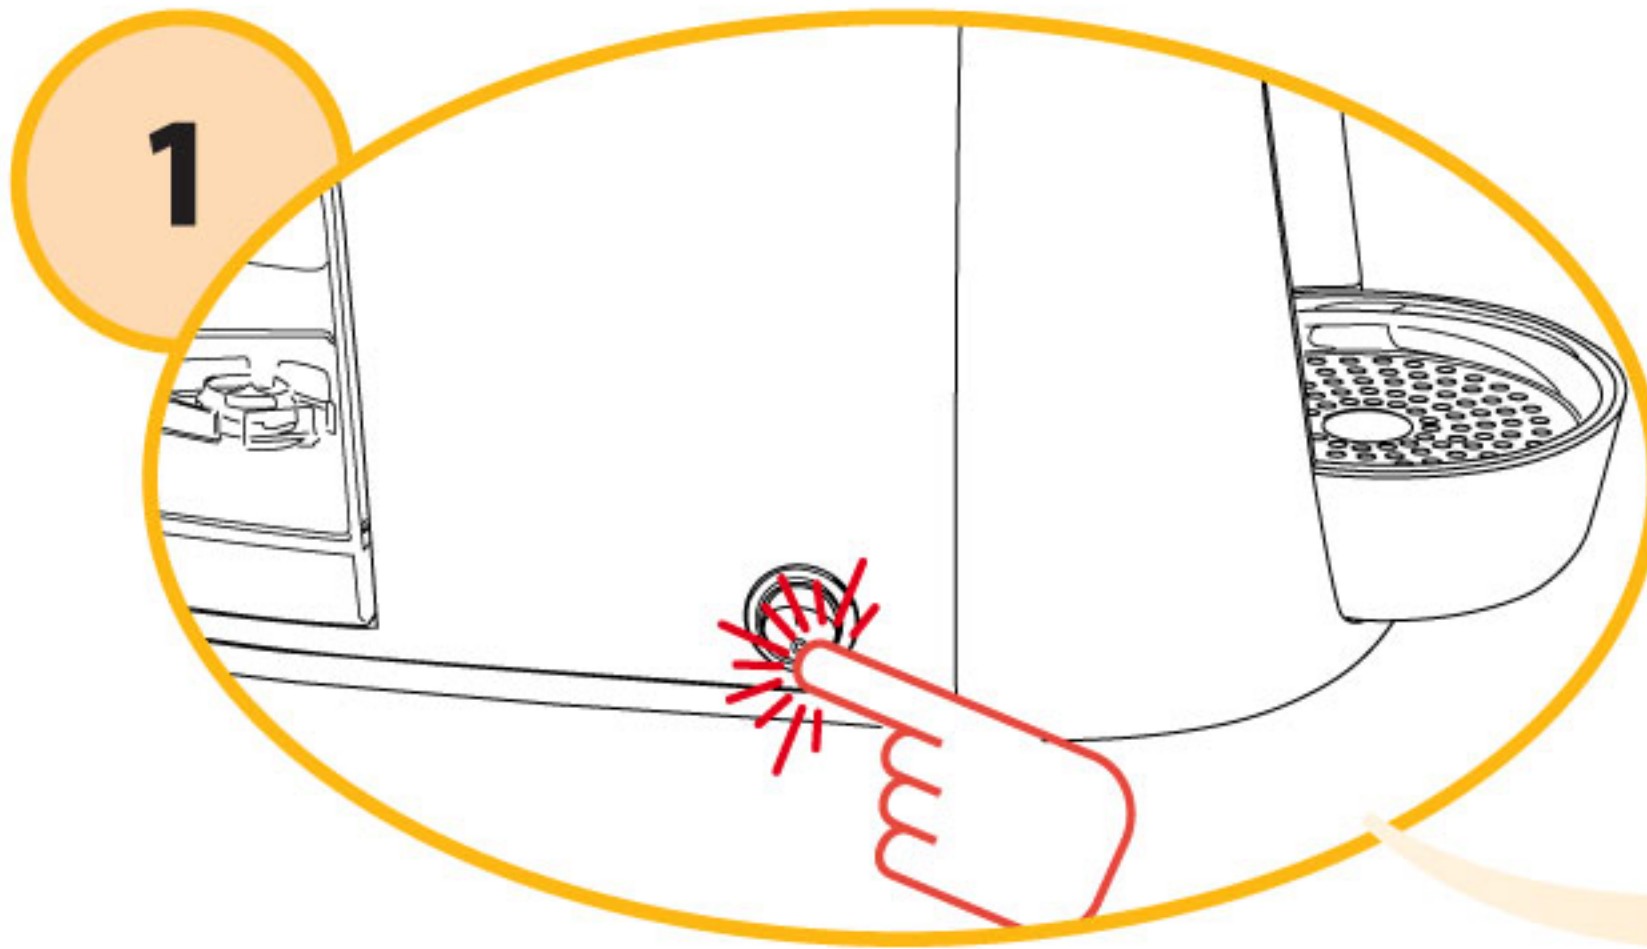


Turn the machine off.

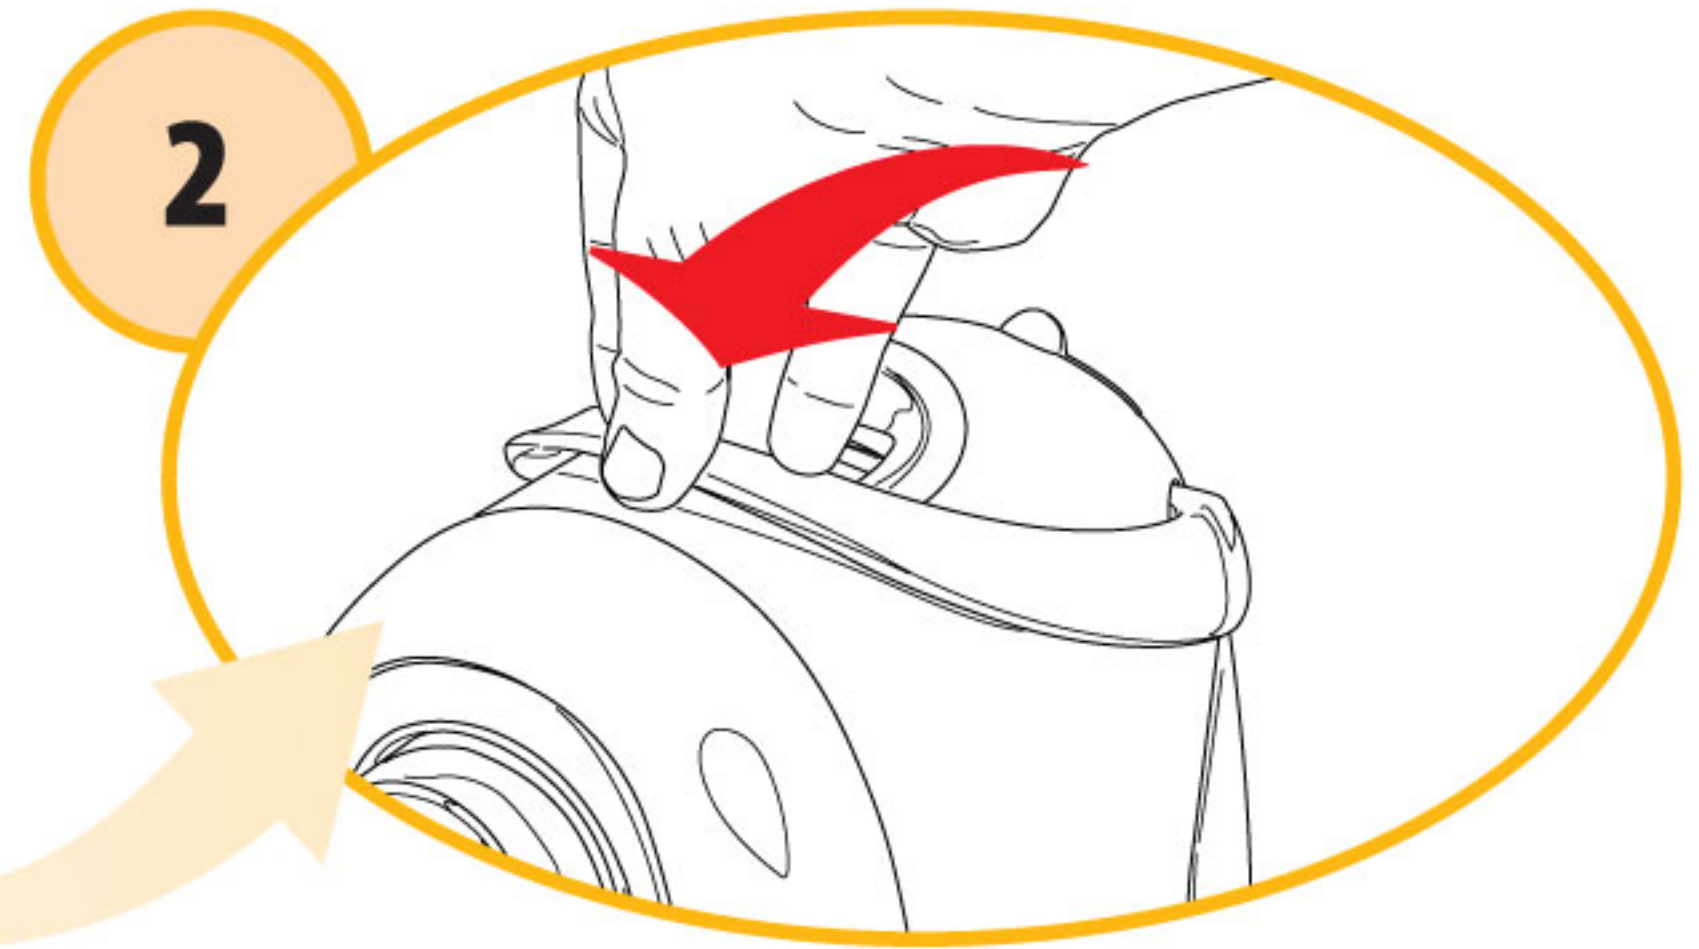


Make sure the lever is lowered.

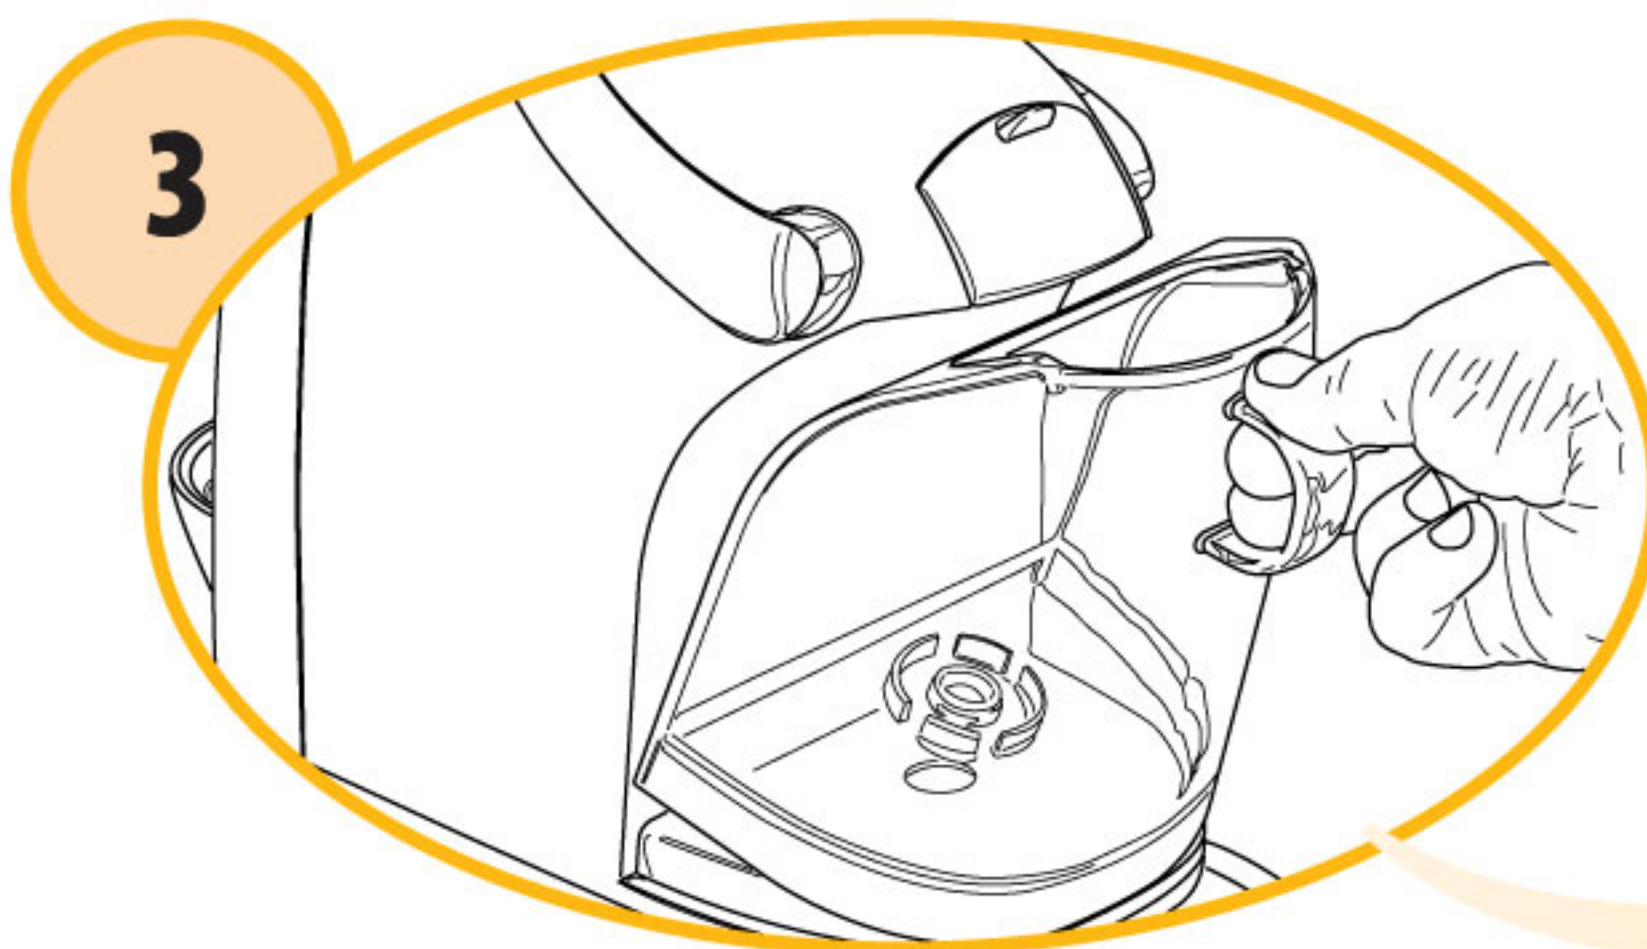


Remove and empty out the water tank.

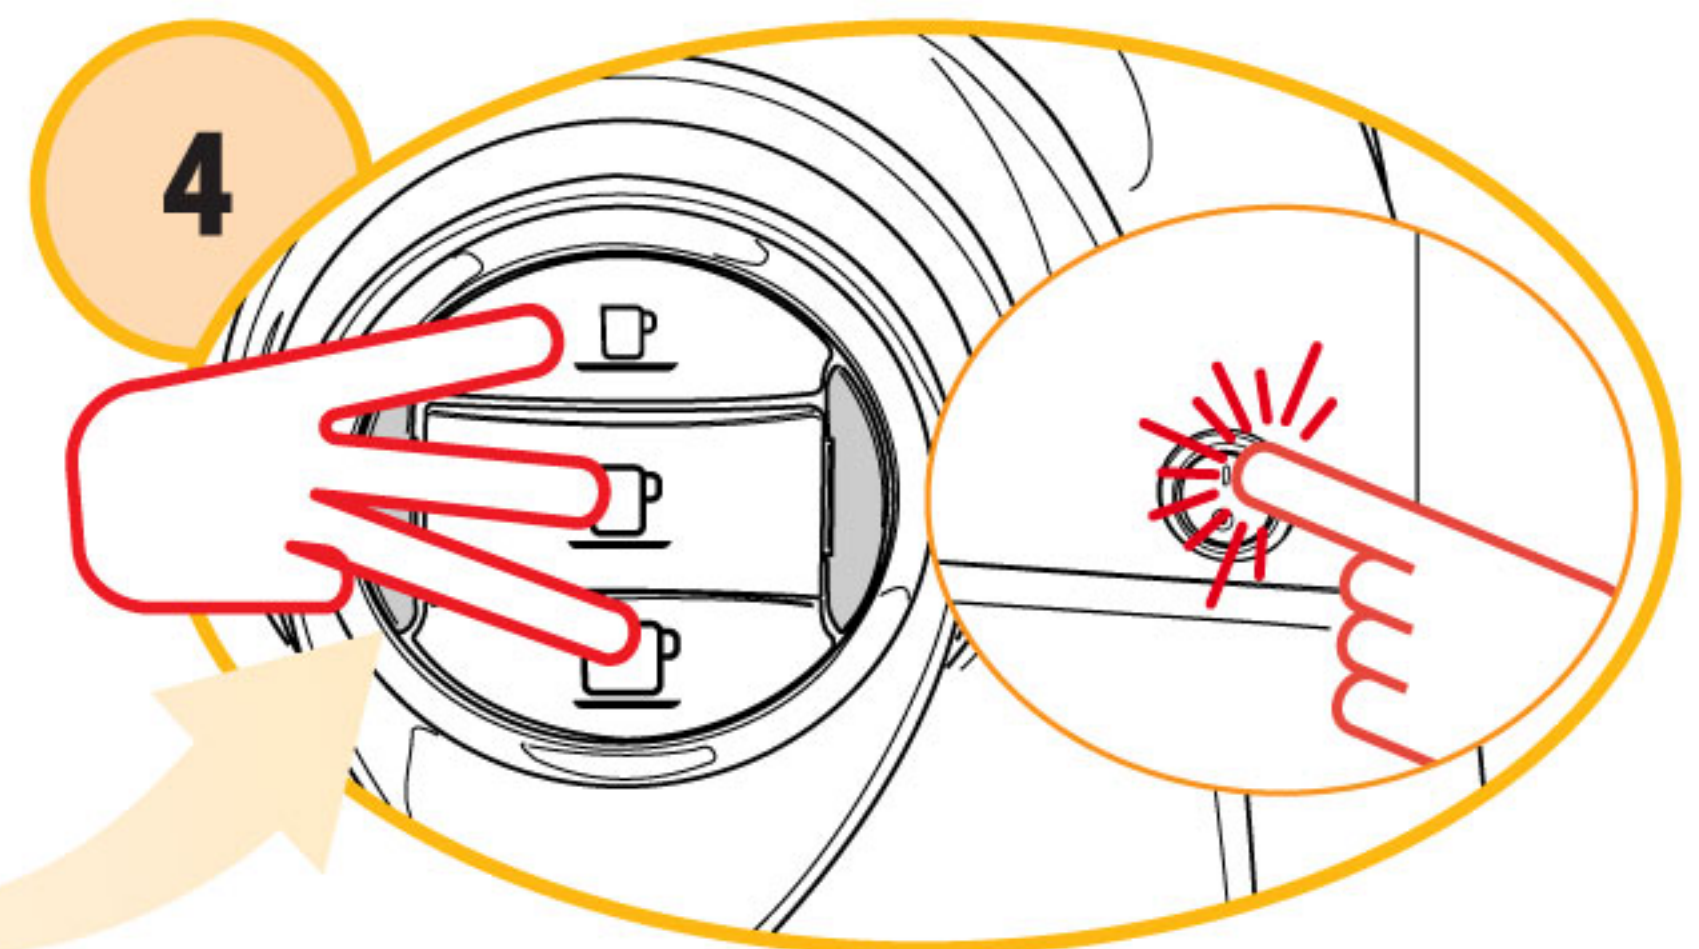

Keep the buttons pressed down and at the same time turn on the machine by pressing the power on/off switch.

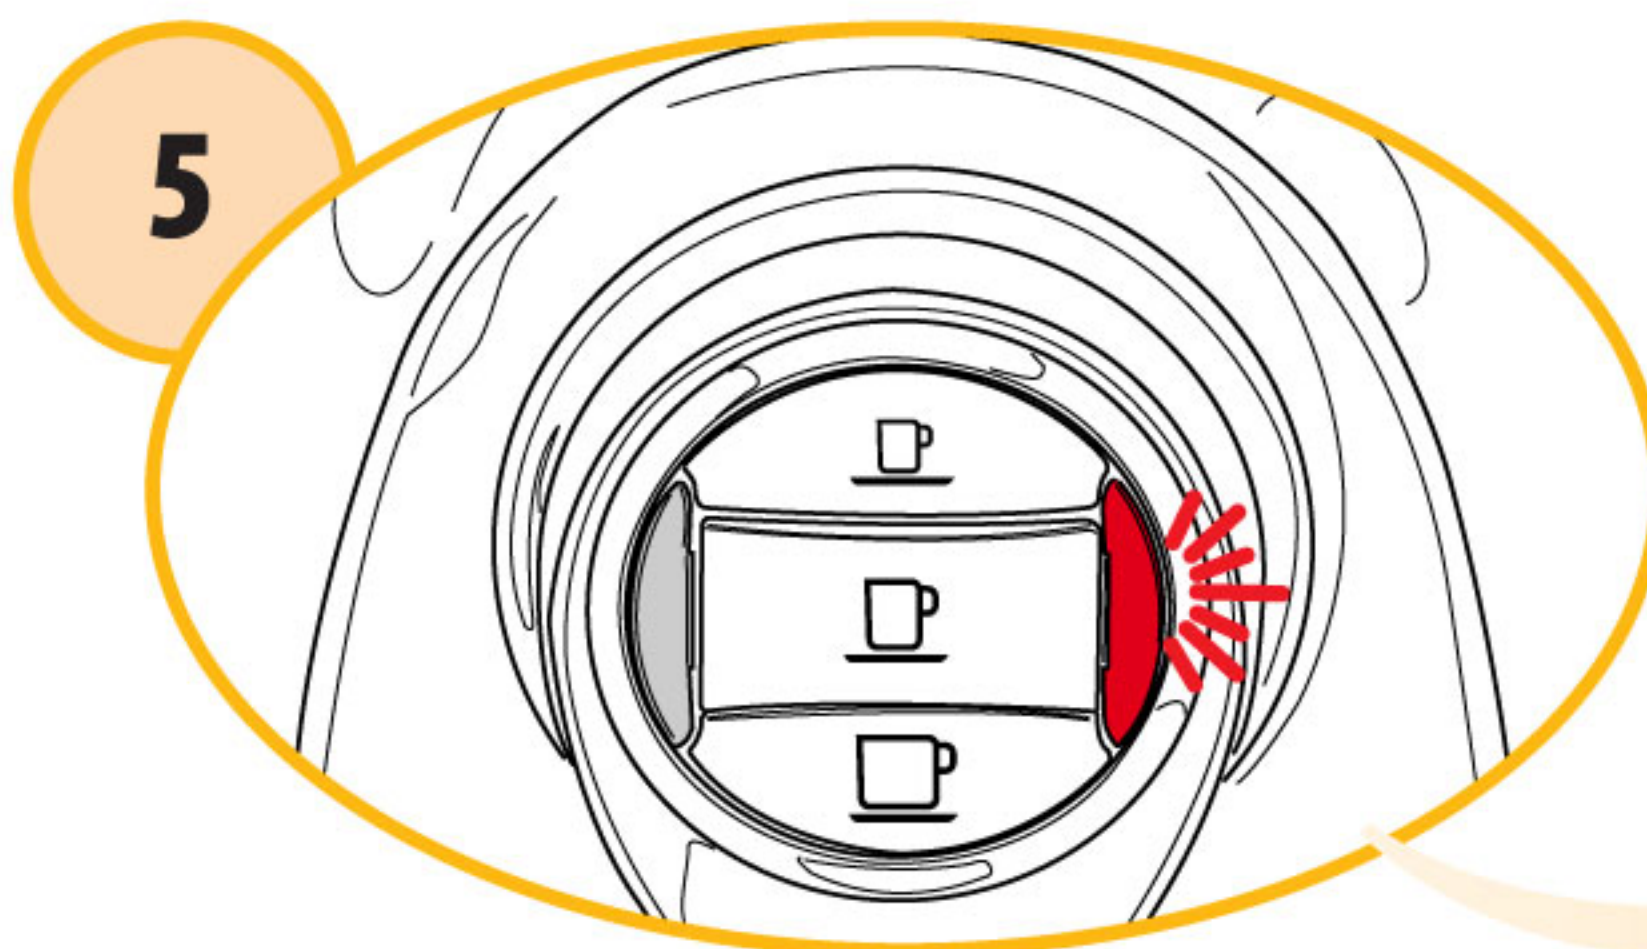

The indicator light will blink and the machine will carry out a drainage cycle. At the end the machine will emit a beep.

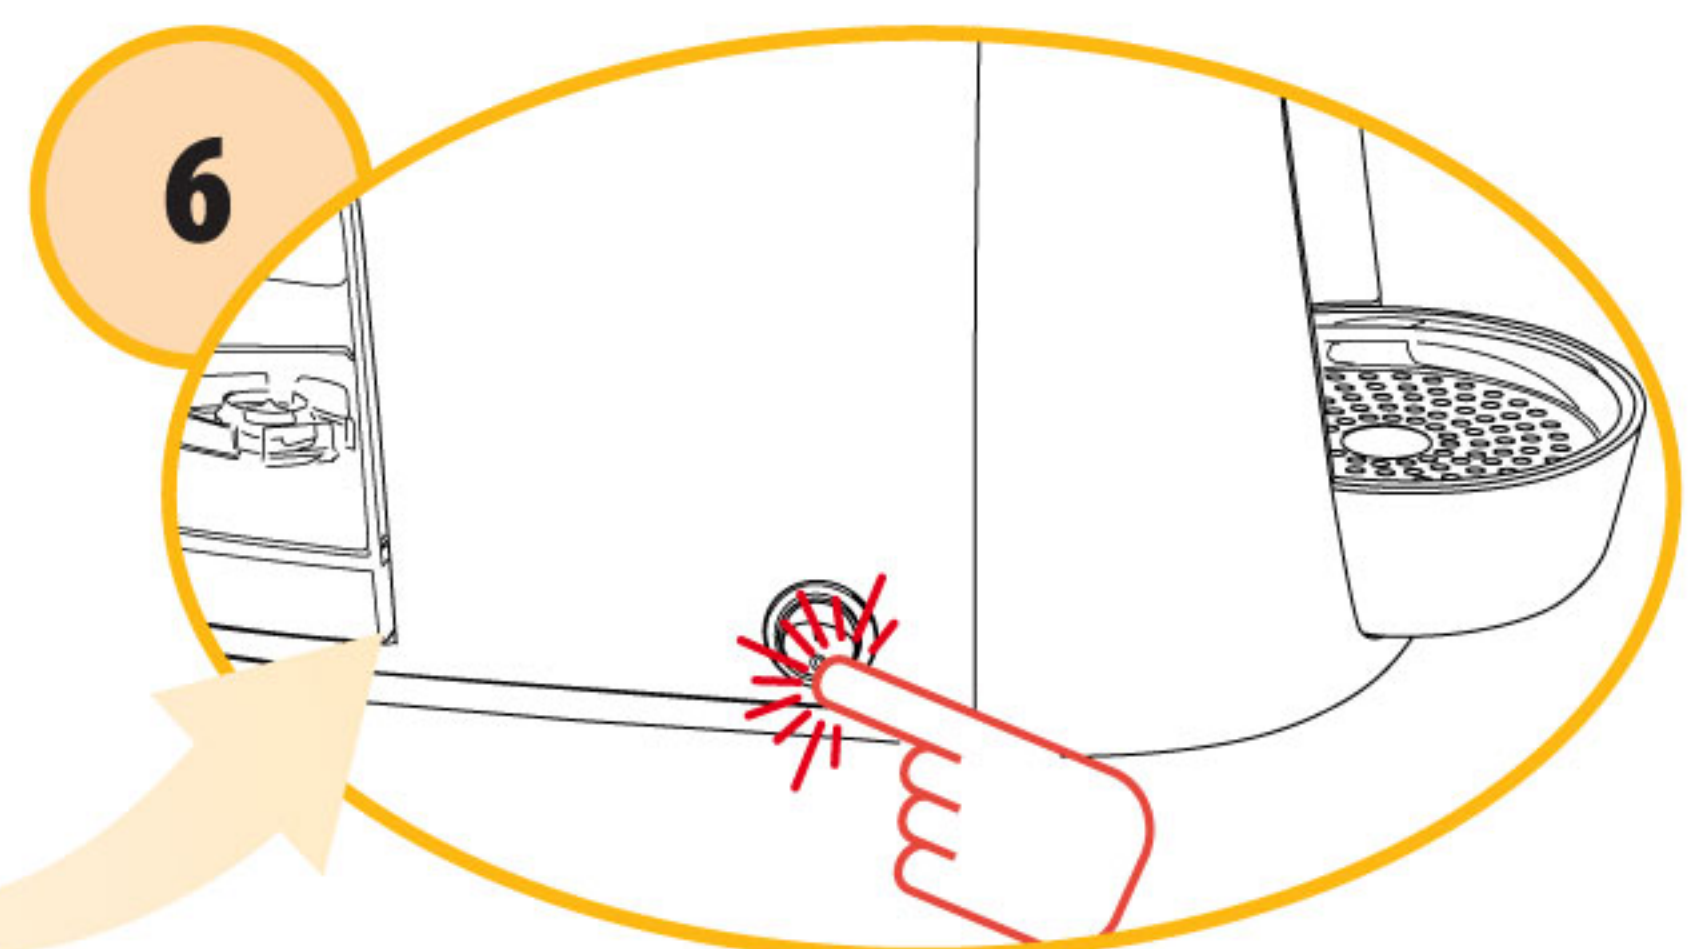

Turn the machine off. The next time you turn it on you will have to carry out a new start-up procedure.


12

Troubleshooting

Problem	Cause	Solution
No coffee is brewed.	The water tank is empty, the alarm indicator light is on and red.	Fill the tank with fresh water. Press the desired coffee button. The appliance will resume brewing.
The coffee is not hot enough.	Cold cups / mugs Scale build-up in machine.	Preheat the cup. Descale the machine.
The lever cannot be lowered.	The used capsule drawer is full. Capsule stuck inside the machine.	Empty out the used capsule drawer. Remove the used capsule.

13

Technical data

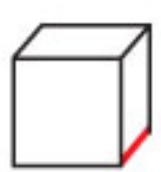~	See the data plate on the bottom of the machine
P	Máx. 15 bar
kg	approx. 4 kg
	1.2 liters
	5 °C - 15 °C
	170 mm
	296 mm
	260 mm

The materials and objects in contact with food products comply with the requirements of European Regulation 1935/2004.



Imported for Map Coffee By Earth Rules Pty. Ltd. 2-4
Buckhurst Street South Melbourne VIC 3205
Phone 1800 239 438 - www.mapcoffee.com.au