

REMINGTON®
Professional

FOIL SHAVER



**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE

2 YEAR WARRANTY

F4900AU, F5800AU, F7800AU

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following.

KEEP AWAY FROM WATER

WARNING – TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:

- The shaver should never be left unattended when plugged into a power outlet, except when charging the shaver.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Use this shaver only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Never operate this shaver if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of this shaver is damaged it must be replaced. It cannot be repaired.
- Keep the cord away from heated surfaces.

- Charge, use and store the product at a temperature between 0°C and 32°C.
- Never insert any object into any opening of this shaver.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use the shaver with a damaged or broken tracks or cutters, as injury may occur.
- For use on facial hair only. Not intended for shaving the hair on your head.
- Do not plug or unplug the shaver with wet hands.
- For household use only.

Remington strongly recommends that an approved Safety Switch (residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

SAVE THESE INSTRUCTIONS

F4900AU, F5800AU, & F7800AU FOIL SHAVER

Use & Care Instruction Manual

Thank you for purchasing your new Remington® Foil Shaver. Inside this manual you will find tips on using and caring for your shaver.



KEY PARTS

1. Foils
2. Intercept trimmer
3. Cutter assembly
4. Hair Pocket
5. Pop up trimmer (rear)
6. On/Off switch
7. LCD Screen
8. Power Port

Also includes:

- Cleaning brush
- Protective head guard
- Power adaptor
- Storage Pouch
- Charging stand (only F7800AU)

SPECIFICATIONS	F4900AU	F5800AU	F7800AU
Power System	Cordless (Rechargeable)	Cord/Cordless	Cord/Cordless
Initial Charge Time	24 hrs	24 hrs	24 hrs
Full Charge Time	16 hrs	2 hrs	2 hrs
Cordless Shave Time	30 min	60 min	60 min
5 Min Quick Charge	No	Yes	Yes
Indicators	Charging	LED charging time indicator	Digital Display
Voltage Type	Worldwide Voltage	Worldwide Voltage	Worldwide Voltage
Washable	Yes	Yes	Yes
Replacement Part No.	SP-300AU	SP-300AU	SP-300AU



Charging &
Low Battery
Indicator



Battery Fuel
Gauge



Digital
Display

Power System: Cordless - shaver can only be used without the power cord.

Cord/Cordless – shaver can be used with or without the power cord.

Quick Charge– Shaver will charge long enough for one shave in 5 minutes.

Indicators: Charging - Light that glows when the shaver is being charged.

LED charging indicator - displays the amount of battery remaining, including low battery.

Digital Display – displays the number of minutes of remaining battery power.

Voltage Type: **Worldwide Voltage** - shaver automatically adapts to an outlet voltage between 100V and 240V. Please note that some countries will require the use of a plug adaptor that is not included with your shaver.

Washable: The head assembly part may be cleaned under water.

HOW TO USE

ADJUSTING TO YOUR SHAVER

As with every shaver, your shave will improve over time. Allow up to four weeks of daily shaving to develop an effective shaving style and for your skin to adjust to the new shaver. The adaptation period may take a little longer if your skin is sensitive, if you are switching from a different method of shaving, or if you alternate between shaving methods.

REMOVING THE PROTECTIVE HEAD GUARD

 
Before operating your shaver, remove the protective head guard, which protects the foils and cutter assembly. It is important to remove it correctly to avoid damaging the clips that hold it to the shaver.

1. Press lightly on the top of the protective head guard.
2. Lift the lower rear edge.
3. Pull the protective head guard away from the shaver. When the shaver is not in use, always keep the protective head guard on the shaver head and keep the trimmer in the OFF position.

CHARGING

Before using, read the important safety instructions in this manual.

1. Ensure the product is switched off. Connect the shaver to the adapter (Diagram A).
2. Connect to the mains (Diagram B) and charge for at least 24 hours when using for the first time (Diagram C). This first charge is important to the shaver's battery life.



3. When plugged, the charging indicator will light up.
4. When empty, the battery should be charged for 2 hours, and will provide 60 minutes of shaving time. (For F4900AU: charge for 16 hours to provide 30 minutes of shaving time)
5. To preserve the life of the batteries, allow them to fully discharge every six months, and then recharge them for 24 hours



CAUTION!

- Make sure the shaver and your hands are dry when charging the shaver.
- Always charge the shaver in a cool, dry place.

SHAVING

To Shave

1. Remove power adaptor from the shaver (Diagram A).
2. Press the power button to activate the shaver for shaving.
3. Pull the trimmer release button to engage the trimmer, and use it to remove long hair first. Then push trimmer downward to lock it in when finished.
4. Use your free hand to stretch your skin so that the hairs stand upright. This encourages your facial hair to stand out, making it easier for them to enter the foil and engage the intercept trimmer (Diagram D).
5. Hold the shaver so that the foils touch your skin simultaneously. The independently floating screens automatically adjust to the contours of your face. Only apply light pressure on the shaving head while shaving and use short, circular strokes (Diagram E).
6. After shaving, turn the shaver off by pressing the power button.

SHAVING TIPS

For A Better Shave

For a smoother, more comfortable, moisture-free shave, use a Remington® Pre-Shave Powder Stick (SP5).

****Remington recommends that you use your new shaver daily for up to three weeks to allow time for your hair and skin to become accustomed to the new shaving system****



- Ensure your skin is dry and free of oils.
- Wait at least 15 minutes after getting up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Always hold the shaver at a right angle to the skin so that both heads are touching the skin with equal pressure.
- Stretch skin with the free hand so hairs stand upright, making it easier for them to enter the cutting chamber.
- Shave with short, circular strokes. The use of short, circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- Do not press hard against the skin in order to avoid damage to foil heads.

TRIM

To Trim

1. Pull trimmer release button to engage trimmer. (Diagram F)
2. Hold the trimmer at a right angle to your skin.
3. Trim long, difficult hairs and side burns. (Diagram G)
4. Close trimmer by pressing down. (Diagram H)



MAINTENANCE

CLEANING & CARE



This shaver is a washable appliance.

The head assembly part may be cleaned under water.

NOTE: **When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.**

For optimal shaver performance, clean your shaver after each use.

CAUTION!

- Shaver can be placed under running water for cleaning only. Never submerge the shaver in water.
- Never clean the shaver or replace the cutters while it is plugged into an electrical outlet.
- Do not remove or replace head assembly while shaver is running as it may cause damage to the unit's foils and cutters.
- To clean the external surfaces of the shaver, use a damp cloth. Do not use strong detergents or other chemicals.
- To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.
- The shaver should not be used until it has dried.

Cover the shaver foils with the protective head guard between uses. When removing the head guard or placing it back onto the shaver, do not apply pressure to the foils as you may damage them.

Daily Cleaning:

1. Grasp the front and back of the cutter assembly and pull away from the shaver body. (Diagram G)
2. Tap the stubble from the foils and cutters.
3. Use the cleaning brush to sweep any loose hairs from the cutters and trimmer. Rinse them in cold or warm water. DO NOT use hot water. DO NOT submerge the shaver in water. (Diagram H & I)
4. After cleaning, replace the hairpocket assembly. (Diagram J)



Monthly Cleaning:

1. Perform the daily cleaning steps 1-3.
2. Place a drop of liquid soap on the inside near each set of cutters. (Diagram K)
3. Brush the soap around vigorously with the supplied cleaning brush. (Diagram L)
4. Add a small amount of water to the cutters.
5. Replace the foil assembly. (Diagram M)
6. Turn on the shaver for approximately 30 seconds.
7. While the shaver is running, rinse the foils under running water. (Diagram N)
8. Turn off shaver.
9. Remove foil assembly.
10. Rinse cutters and foil assembly thoroughly. (Diagram O)
11. Shake off excess water.
12. Replace foil assembly. (Diagram M)
13. Allow shaver to dry before next use.



Lubricate

Remington® Shaver Saver (SP-4) lubricates, cleans and protects your shaver's foil and cutter assembly. The lubricant helps remove hair clippings while reducing wear. Spray on the foil and cutters after each shave to keep your shaver operating at peak performance.

REPLACING YOUR HEADS & CUTTERS

It is very important to replace your foils and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 6 months for optimal performance. Here are some signs of head and cutter wear, indicating that replacement is needed.

Signs that your foils and cutters need replacing:

- Irritation: As foils get worn, you may experience skin irritation. As the foils become excessively worn you may experience some skin irritation or redness.
- Pulling: As the cutters wear, your shave may not feel as close and you may feel your cutter pulling your hair.
- Wear through: You may notice that the cutters have worn through the foils.

TO REPLACE THE FOIL

- Pull the foil assembly up to remove from the hair pocket.
- Insert new foil assembly in hair pocket until it snaps in place.

TO REPLACE THE CUTTERS

- Grasp cutter between thumb and fore finger and pull upward.
- Snap both new cutter assemblies into top of oscillator tips.

STORAGE

When not in use, always unplug the power adaptor from the power outlet. Never wrap the cord of the power adaptor around the unit as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the power plug. If the cord becomes twisted in use, periodically straighten it.



This product is not suitable to use in a bath or shower.

The Shaver conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

MONEY BACK OFFER - AUSTRALIA/NEW ZEALAND ONLY

If within 30 days you are not fully satisfied with your Remington® shaver, just return the shaver with this completed coupon and a copy of your Australian/New Zealand purchase receipt to Remington®. In return, we will send you a cheque for the full purchase price of the shaver. Please allow 6-8 weeks for your cheque to arrive.

Name: _____

Address: _____

City: _____

State: _____ Postcode: _____

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd
ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited,
as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Chifley Business Park

1 Chifley Drive

Mentone, VIC 3194 Australia

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

Building C, Ground Floor

600 Great South Road,

Greenlane, Auckland 1051 New Zealand

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington-products.com.au

REMINGTON®

REMINGTON SERVICE HOTLINE

① Australia 1800 623 118 (toll free)

① New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trademark of Spectrum Brands, Inc. (SBI), or one of its subsidiaries

Manufactured to Spectrum Brands specifications in the PRC

©2012 SBI

Rev.05/12

Part No. T22-0000284