



50" (127 cm) Full HD LED TV

Model Number: ATV50F-415

INSTRUCTION MANUAL

AFTER SALES SUPPORT

  1300 886 649

 www.tempo.org

Model: ATV50F-415 Product Code: 49762 04/2015






Welcome

Congratulations on choosing to buy a BAUHN® product. All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.


We hope you will enjoy using your purchase for many years to come.

Remote Control

- 1 **SOURCE:** Select the input source.
- 2 **NUMBER BUTTONS (0-9):** Select a TV channel directly when watching TV. The channel changes after 2 seconds.
- 3 **-/-- :** Switch the digit.
- 4 **MEDIA:** Select USB mode.
- 5 **◀/▶/▲/▼:** Press the RIGHT/LEFT UP/DOWN buttons to navigate the on-screen menus and adjust the system settings to your preference. Press **OK** to confirm your selection.
- 6 **OPEN TV/RADIO:** Open the disc compartment (DVD)*. Select TV or Radio (DTV).
- 7 **EPG/D.MENU:** Launch the Electronic Program Guide (DTV). Display the disc menu (DVD)*.
- 8 **GOTO:** Start playing from a certain point (DVD)*.
ANGLE: Change the playing angle, if available (DVD)*.
REPEAT: Change repeat mode (DVD)*.
A-B: Repeat playing between A and B (DVD)*.
 : In **TELETEXT** mode, the colour buttons will display the preferred pages.**
- 9 **DISPLAY:** Display information of the current program (DTV).
- 10 **VOL +/-:** Turn the volume up/down.
- 11 **MUTE:** Mute the sound. Press again or press Volume  to restore the sound.
- 12 **◀◀:** Move fast backward.
TEXT: Display Teletext, if available.**
- 13 **◀◀:** Play the previous file.
FAV: Enter the favourite channels list.
- 14 **SLEEP:** Set the TV sleep timer.
- 15 **LANG/AUDIO:** Switch the available sound-track/language (DTV/DVD)*.
- 16 **S-MODE :** Switch the sound mode.
- 17 **SIZE/ZOOM:** Switch Teletext size (TV)*. Shrink/enlarge the picture (DVD)*.

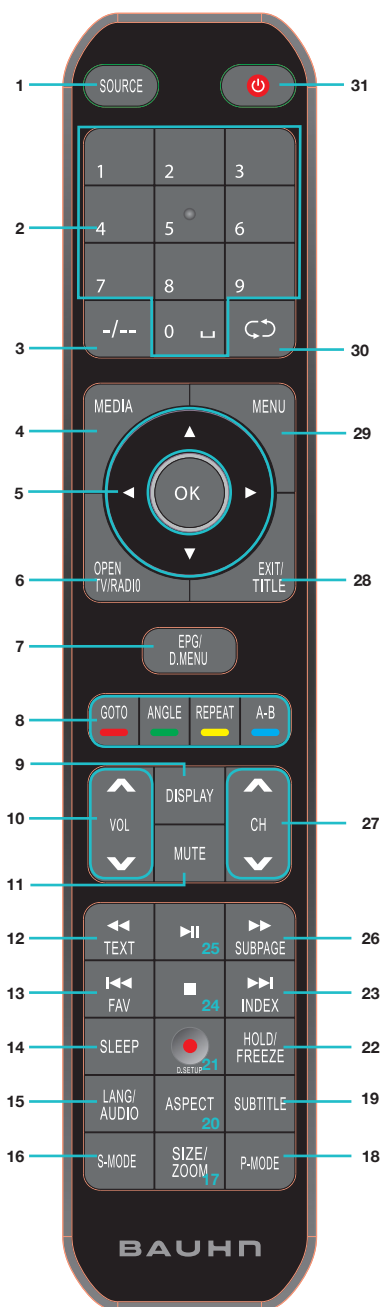

Remote Control (Cont.)

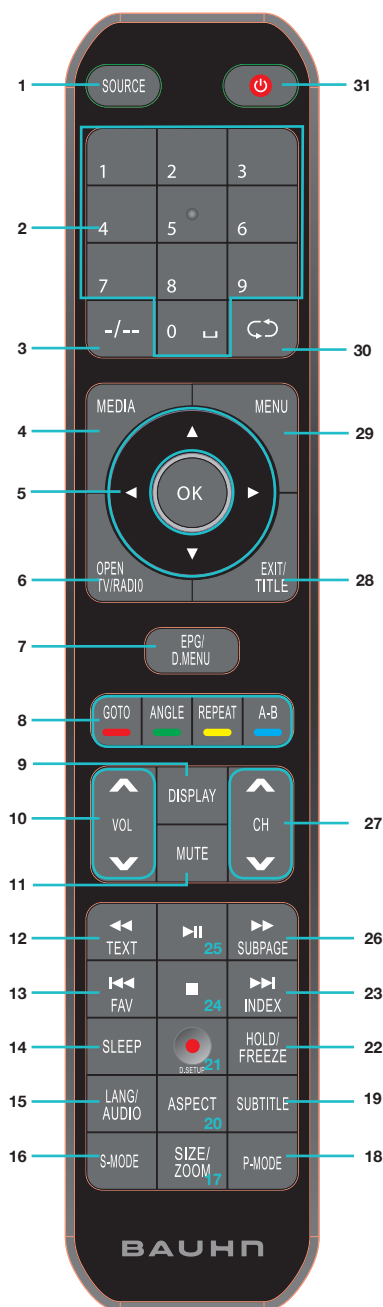

- 18 P-MODE:** Switch the picture mode.
- 19 SUBTITLE:** Enable/disable subtitles.
- 20 ASPECT:** Press repeatedly to select the desired screen aspect ratio.
- 21 ●:** Record program in DTV mode.
D-SETUP: Display the setup menu (DVD)*.
- 22 HOLD/FREEZE:** Freeze the current teletext page.** Freeze a picture screen.
- 23 ►►/INDEX:** Play the next file. Display the record program list (DTV).
- 24 ■:** Stop playing.
- 25 ►||:** Start or pause playing.
- 26 ►►:** Move fast forward.
SUBPAGE: Teletext Subpage*
- 27 CH+/-:** Press to play the next or previous channel; press repeatedly to scan through the channels.
- 28 EXIT/TITLE:** Exit from the main TV menu displayed on the screen. Display the DVD title menu (DVD)*.
- 29 MENU:** Display the main menu; press again to return to the previous menu page.
- 30 ◀◀:** Return to the previous channel.
- 31 POWER:** Set the unit in standby mode; press it again to switch it on.

NOTES:

* DVD related functions are ineffective on the ATV50F-415.

** Teletext or Austext is no longer available, nor is there any plan for a replacement teletext service in Australia. For more information, please visit the websites of the Australian channel providers. However, one teletext option, "closed captions", is still working on most Australian television channels. This service allows you to activate subtitles while watching normal television programs that provide it.

AFTER SALES SUPPORT

1300 886 649

www.tempo.org

Model: ATV50F-415 Product Code: 49762 04/2015



Remote Control (Cont.)

Using the remote control

Inserting batteries

To install the batteries, proceed as follows:

- Open the cover at the back of the remote control unit completely.
- Insert two AAA size batteries according to the polarity markings (+ / -) inside the compartment. Make sure the batteries are correctly aligned and properly pushed into place so they can power the remote control unit.
- Slide the cover back into position.

NOTE: When testing the remote control unit after replacing the batteries, make sure the TV is properly connected to the mains power supply.

Battery service life

- The service life of batteries depends on usage and environmental conditions. They should normally last for about one year.
- If the remote control fails to work even when it is operated near the TV, replace the batteries.



Precautions when using batteries

- Do not use old and new batteries together.
- Do not use different types of battery (for example, Manganese and Alkaline batteries) together.
- Note that there are chargeable and non-chargeable batteries. Do not attempt to charge non-chargeable batteries.
- Remove the batteries from the remote control unit if you do not intend to use the unit for a long time.
- When discarding used batteries, follow any guidelines for recycling and disposal of batteries that apply in your local area.
- Keep batteries away from children and pets.
- Never throw batteries into a fire or expose them to fire or other sources of extreme heat.

Remote Control (Cont.)

Using the remote control


To use the remote control, point it towards the remote sensor at the front of the television.

The remote control has a range of up to approximately six metres (6m) from the TV at an angle of up to 30 degrees each to the right and left of the sensor, as illustrated on the right.

The remote control will not operate if its path is blocked.

NOTES:

- Do not drop, step on or otherwise impact the remote control. This may damage the parts or lead to malfunction
- The operating distance may vary according to the brightness of the room.
- Do not point bright light at the remote control sensor.
- Do not place objects between the remote control and the remote control sensor.
- Do not use this remote control while simultaneously operating a remote control of other devices.

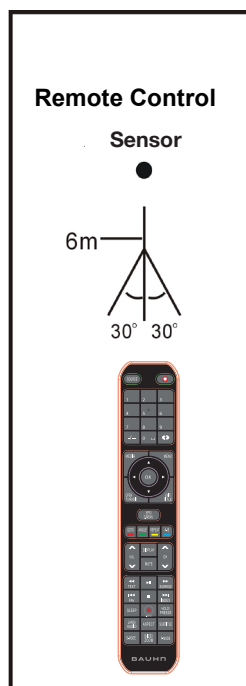




50" (127cm) Full High Definition LED TV

Warranty Details

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

 (AUS) 1300 886 649

 www.tempo.org

Model: ATV50F-415 Product Code: 49762 04/2015






Contents

Welcome	i
Remote Control	ii
Warranty Details	vi
General Safety Instructions	1
Installation	5
Controls and Connections	7
Getting Started	14
Basic Operations	15
Electronic Program Guide (EPG)	17
Recording	18
USB Mode	21
Menus	24
FAQs	37
Specifications	39
Repair and Refurbished Goods or Parts Notice	40

General Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Follow all instructions and take notice of all the warnings.

 CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN		<p>The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert you to the presence of non-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
<p>To reduce the risk of electric shock, do not remove the cover (or back). This unit contains no user-serviceable parts inside. Refer all servicing to qualified service personnel only.</p>		<p>The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.</p>

IMPORTANT WARNINGS AND CAUTIONS!

- Only connect this TV to a mains socket with a protective earthing connection.
- To prevent damage which may result in fire or an electric shock hazard, do not expose this appliance to rain or moisture.
- Do not change or modify the appliance in any way.
- Only use the attachments/accessories specified by the manufacturer.

General Safety Instructions (Cont.)

Installation

Follow instructions: Only install this TV set in accordance with the instructions in this manual. If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling and causing injury, particularly to children.

- This TV is equipped with standard wall-mounting points, and **we recommend that a wall bracket be installed between the TV and the wall to prevent the TV from falling from a cabinet.** (The bracket is not included.)
- To prevent injuries from your television falling, take a few simple precautions:
 - Do not place the TV on tall furniture (e.g., on a cupboard or bookcase) without anchoring both the furniture and the TV to a suitable support.
 - Only use furniture that can safely support the television.
 - Ensure the TV is not overhanging the edge of the supporting furniture.
 - Educate children about the dangers of climbing on furniture to reach TV controls.
 - Do not place the TV on cloth or other materials.
- When deciding on where to put the TV set, make sure the place is:
 - Well ventilated, and away from damp and cold.
 - Protected from overheating and away from direct sunlight.
 - Away from moisture drips or splashes.
 - Protected from excessive dust or grease.
- **Bookcase:** Do not install this equipment in a confined space such as a bookcase or similar unit.
- **Heat:** Do not install the TV set near heat sources such as radiators, stoves or other audio visual equipment (including amplifiers) that produce heat.
- **Water:** Do not place containers with liquids (such as vases) or with small metallic objects on top of the unit. If liquid enters the unit or any metal object falls into the unit, it may result in short-circuit, fire or electric shock.
- **Fire or explosion:** Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the TV set.
- **Antenna:** Install the antenna away from high-voltage power lines and communication cables and make sure it is installed securely. If the antenna touches a power line, contact with the antenna could result in fire, electric shock or serious injury.
- **Ventilation:** Install the unit at an adequate distance from the wall to ensure sufficient ventilation. If the temperature inside the unit rises, it may result in fire.

General Safety Instructions (Cont.)

Electrical safety and cord handling

- **Voltage:** Before installing this TV set, make sure your outlet voltage corresponds to the voltage stated on the appliance rating label.
- **Protect from moisture:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture; do not use it anywhere near water; do not touch the power plug with wet hands.
- **Damage:** Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- **Power outlet:** Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- **Power plug:** Make sure the plug is properly installed before inserting it fully into the outlet. A loose or improperly inserted power plug may cause a fire.
- **Protect the cord:** Do not bend, twist or kink the power cord excessively. Do not allow anything to rest on or roll over the power cord and antenna cable. Doing so may cause a fire or an electric shock. Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- **Disconnect:** Always grasp the plug when disconnecting the power cord. Pulling the cord can damage the internal wire and may cause a fire.
- **Lightning storms:** Unplug this TV during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.

Usage conditions and restrictions

- **Adjustments:** Follow the instructions in this manual when installing and adjusting the TV set. Only adjust those controls that are covered in this manual, as improper adjustment of other controls may result in damage. If this happens, unplug the TV set and have it serviced by appropriately qualified personnel, or phone the after sales support line for advice.
- **Ventilation:** Do not cover the ventilation openings with items such as newspapers, tablecloths, curtains etc. as this could impede ventilation.
- **Cabinet slots:** Do not insert objects of any kind into this unit through the cabinet slots, as they could touch the current-carrying parts or short-circuit parts, resulting in fire, electric shock or damage to the unit.
- **Smoke or odour:** If you notice any unusual odours or smoke around the unit, immediately disconnect the unit from the outlet and contact the service centre. Failure to do so may result in fire or electric shock.

General Safety Instructions (Cont.)

- **When not in use:** When not using the unit for long periods of time, disconnect the power cord from the wall outlet. Dust could accumulate over time on the unit and cause it to generate heat and ignite, or deteriorate insulation, which in turn may result in an electrical fire.
- **Moving:** When moving the unit, be sure to turn it off and unplug it from the wall outlet. Moving the unit with the power cord connected to the outlet may cause damage to the cord, resulting in fire or electric shock.
- **Batteries:** When removing the batteries from the remote control, make sure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery.
- **Usage restriction:** This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the product by a person responsible for their safety.
- **Children:** Supervise young children to ensure they do not play with the TV.

Cleaning and maintenance

- **Unplug:** To reduce the risk of fire and electric shock, always unplug the TV before cleaning.
- **Cleaning:** Only use a soft, dry cloth for cleaning the TV; do not use a damp cloth. Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent or other chemicals. Wipe off any moisture, dirt or dust on the power plug pins with a clean, dry cloth.
- **Repair:** If the unit requires repair, contact the after sales support line; never disassemble or modify the unit or attempt to service it yourself.
- **Service:** Refer all servicing to qualified service personnel. Servicing is required when the TV has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the TV, when the TV has been exposed to rain or moisture, does not operate normally, or has been dropped.

Installation

Your TV is packaged with the stand and the cabinet separated. Before using the TV, install the stand as described below, or if you want to mount it to a wall, see page 6 for mounting advice; the wall mount itself is not supplied.

IMPORTANT!

- Make sure the TV set is unplugged from the power supply before installing or removing the stand.
- The TV panel may be awkward to install on your own. We recommend you ask someone to help with installation and/or removal of the stand.

Attaching the stand

Step 1

Place a soft cushioned material on top of a flat surface to prevent damaging the screen panel. Then place the TV screen flat on top, with the screen side facing down, as illustrated on the right (1).

Step 2


Align the screw holes on the stand's neck and the rear cover of the TV, as illustrated on the right (2).

Step 3

Tighten the screws (supplied) with a screwdriver to affix the stand to the panel, as illustrated on the right (3).

CAUTION!

Do not apply excessive force as this may damage the screw holes.

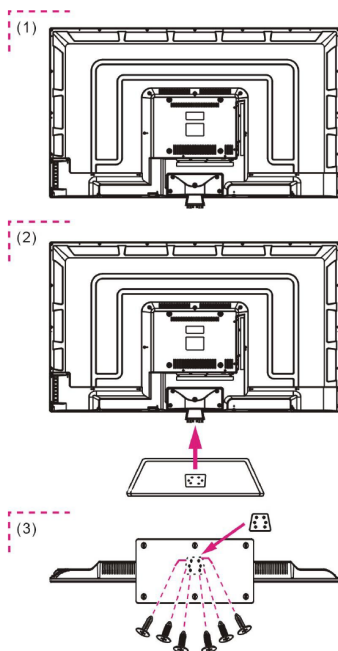


Installation (Cont.)

Wall-mounting instructions

IMPORTANT!

- Make sure the TV set is unplugged from the power supply before wall-mounting it and removing the stand.
 - We recommend you contact a professional for assistance when wall-mounting the TV. We assume no liability for any eventual damage to the product or injury to yourself if you mount the TV on your own.
-
- The TV set is equipped with holes on the back panel for use with wall-mounting brackets (not included). Please use the illustration below as a reference when buying wall-mounting brackets.
 - Use four standard M6*10mm screws (or longer, depending on the mounting bracket) to mount this TV.


Back of the TV

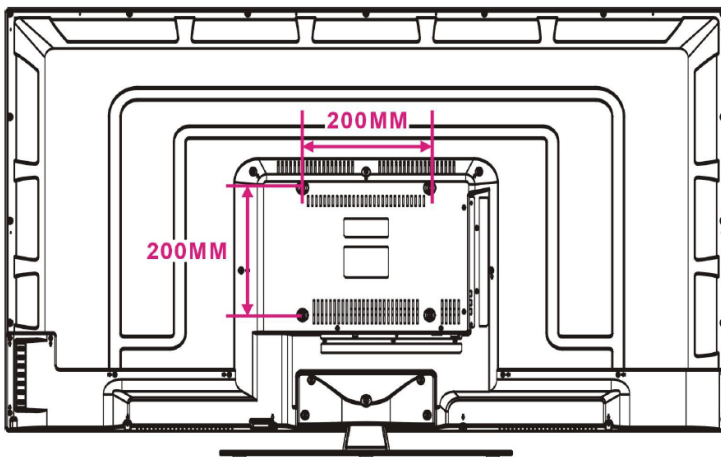


NOTE: The screws in the package are for securing the TV stand only. If you are wall-mounting the TV, please consult a qualified installer for further instructions on bracket support and wall support.

Controls and Connections

Front View

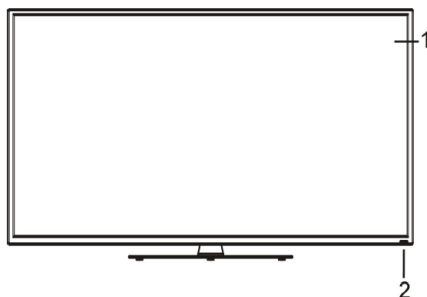

Back View


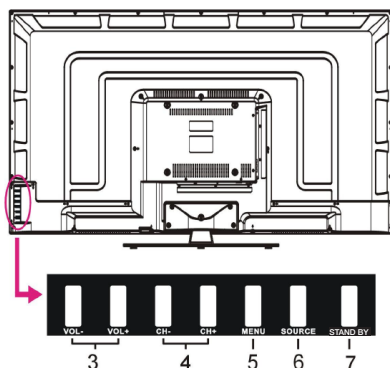


1. **LCD Display Screen**
2. **IR (infra-red) sensor for remote control**
Power Indicator: In standby mode the indicator light is red; when switching on the unit the indicator light will illuminate blue.
3. **VOL + / -** : Decrease/increase the volume level or move left/right
4. **CH + / -** : Select the previous/next channel or move up/down
5. **MENU**: Enter the settings menu
6. **SOURCE**: Select the input source
7. **STANDBY**: Turn the TV on/off

NOTE: See page 8 for a detailed description of all sockets on the back panel.

Controls and Connections (Cont.)

Main unit back view controls and sockets

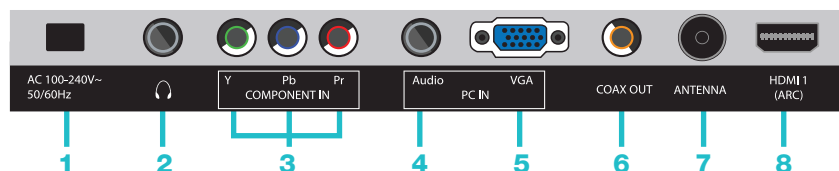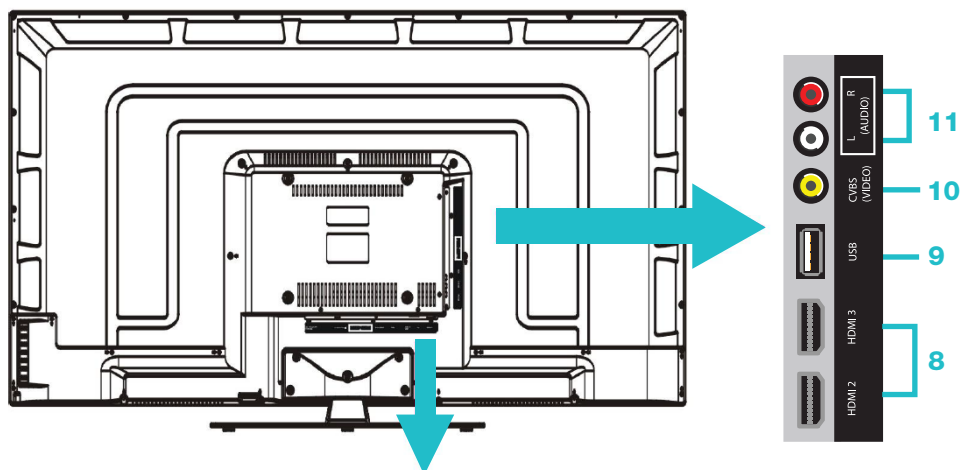


- 1 POWER input
- 2 HEADPHONES output
- 3 YPbPr input (Component): supports both SD (Standard Definition) and HD (High Definition) picture quality
- 4 PC AUDIO input
- 5 PC (VGA) input: connect to a PC or other device with a VGA interface
- 6 Coaxial S/PDIF output: connect to an external digital audio device
- 7 ANTENNA input: for connection of the external antenna
- 8 HDMI inputs: provides an all digital video/audio connection between the TV and any HDMI device, such as a DVD player, gaming console or A/V receiver
- 9 USB input: connect a USB storage device for PVR recording and multimedia file playback
- 10 Video input (Composite): supports SD picture quality connections
- 11 AUDIO R/L input: shared between Composite and Component video

Controls and Connections (Cont.)

IMPORTANT!


- Ensure all cables are disconnected from the main unit before connecting the TV to an AC power source.
- Read through the instructions before connecting the TV to other equipment.

Connecting to an AC power source

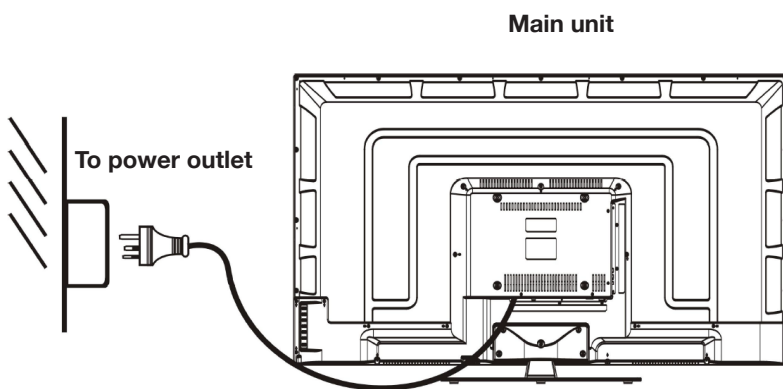


Connecting an external antenna

For best picture quality, we recommend connecting the TV set to an external antenna.

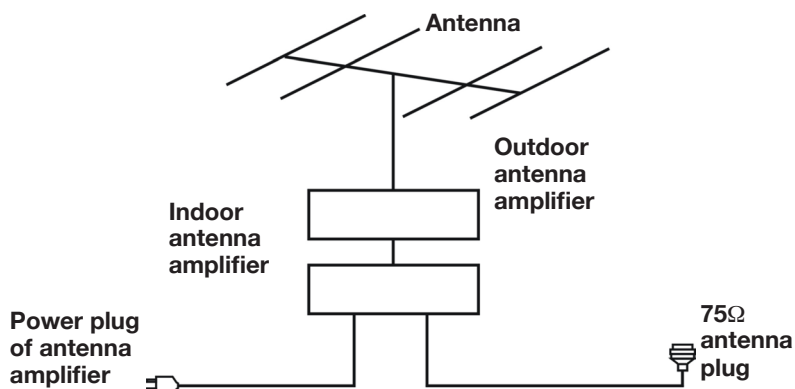

Controls and Connections (Cont.)


Composite video (CVBS) connection

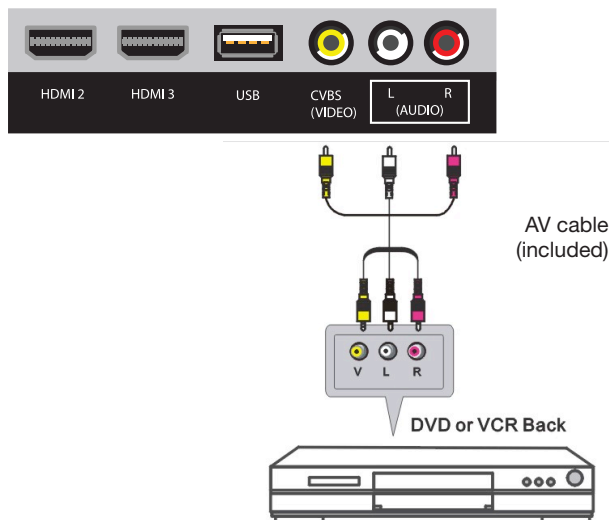


For basic connection, use the composite Audio L/R (white/red) and CVBS (yellow) cable to connect the unit with other devices.

Controls and Connections (Cont.)

HDMI connection

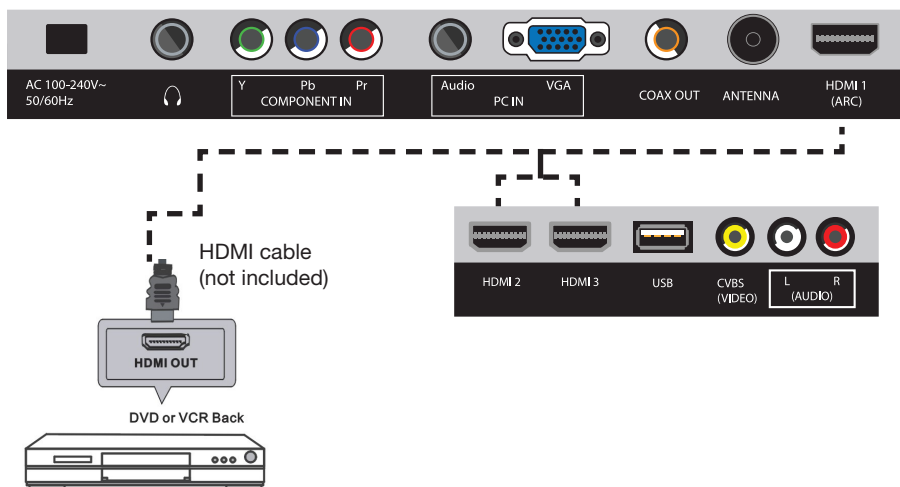

PC/VGA connection

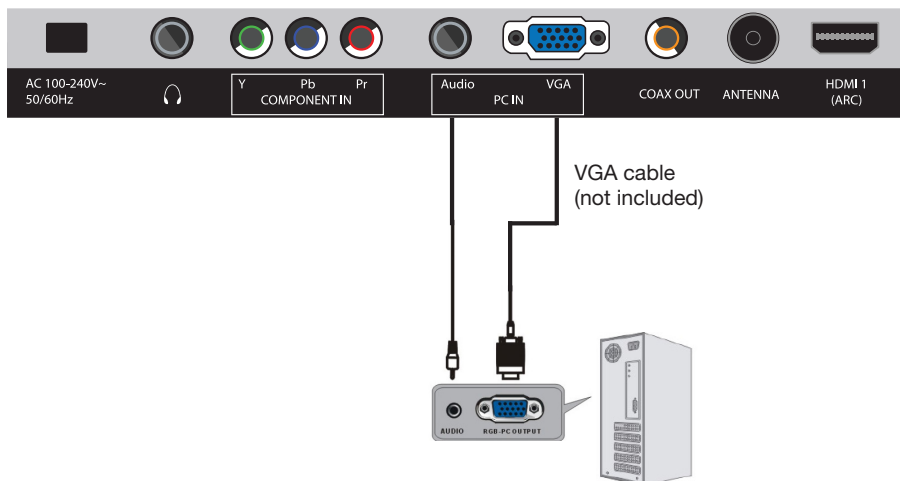



Controls and Connections (Cont.)

Coaxial (S/PDIF) connection



Use a coaxial cable to connect the unit with an amplifier or other audio decoding device for coaxial audio signal output.
(Coaxial cable is not included).

 
Component (YPbPr) connection

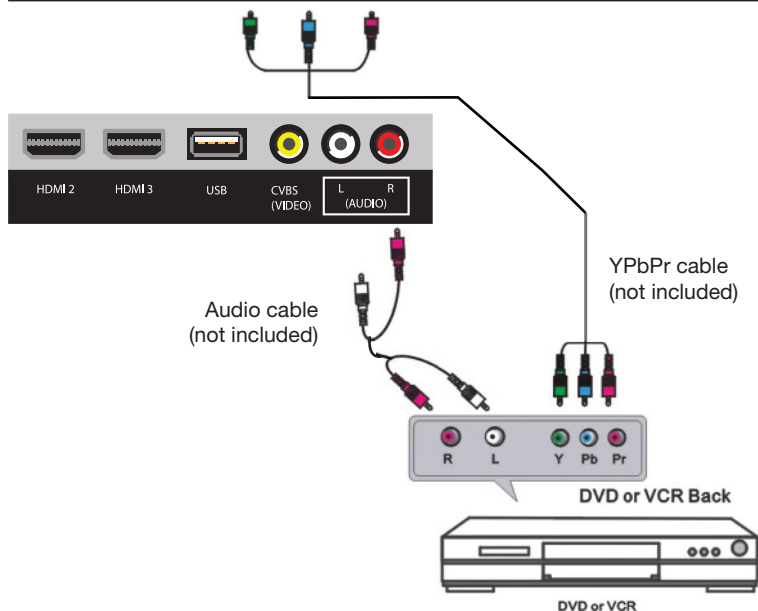


Controls and Connections (Cont.)

USB connection

Insert a USB memory device into the USB port for PVR recording, time-shifting and playback of video/music/photo multimedia files.

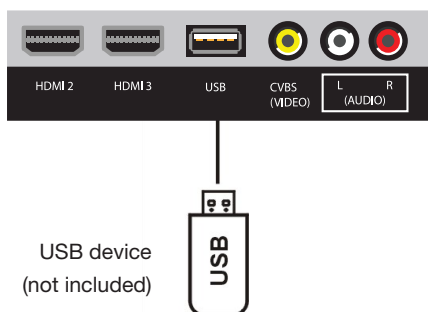

Earphone connection

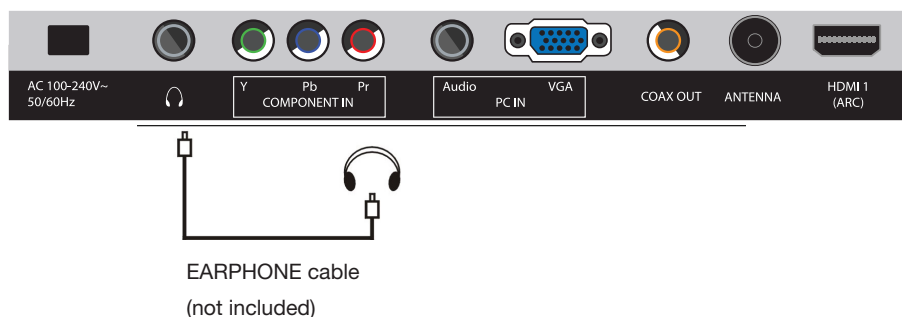

Getting Started

IMPORTANT! Make sure all relevant equipment is properly connected (as illustrated on the previous pages) before connecting the unit to a wall socket and turning on the power.

Powering the TV

To turn the power on or off:

- Plug the power cord into a suitable power point, then turn on the power at the outlet.
- Press the POWER button, on the right lower side of the back panel (or on the remote control, making sure to aim it at the sensor at the front of the TV); the indicator will glow blue. Press it again to power off (standby mode); the indicator will glow red.

First use

When you switch on the TV for the first time, the First Time Setup menu will be displayed on the screen, as illustrated below.



- **OSD language:** Use the ◀/▶ buttons to select your OSD language and then use the ▼ button to go to the next item.
- **Country:** Use the ◀/▶ buttons to select the country you are living in and then use the ▼ button to go to the next item.
- **Auto scan:** Use the ◀/▶ buttons to select the type of scan (ATV, DTV, DTV + ATV) and then use the ▼ button to go to the next item.
- Press **OK** to begin scanning for stations.
- To exit channel tuning, press the EXIT button and use the ◀/▶ buttons to select YES; select NO to continue tuning.
- When auto searching is complete, your TV will show the first channel found.

Basic Operations

Selecting an input source

- Press the SOURCE button at the right lower side of the back panel, or on the remote control, to display the input source list.
- Press the ▲/▼ buttons to select the desired input source, and then press OK to confirm your selection from the following options: DTV, ATV, AV, YPbPr, HDMI, PC, USB.

NOTE: When you switch on this TV for the first time, you need to select the language and the country to auto-search for all the DTV programs in your area. See opposite for instructions.

Channel selection

- Press the CH+/- button to select the next/previous channel.
- Alternatively, press the number buttons to select a channel directly (press the -/-- button repeatedly to select the first or second digit).

Volume control

- Press the VOL+/- button to adjust the volume level.
- Press the MUTE button to mute the sound, press it again to restore sound.

Picture and sound mode

- Press the P-MODE button on the remote control repeatedly to select the picture mode directly (available options: Standard, Mild, Personal, Dynamic).
- Press the S-MODE button on remote control repeatedly to select the sound mode directly (available options: Standard, Music, Personal, Movie).

Sleep time setting

- Press the SLEEP button on the remote control repeatedly to select the desired sleep time directly (available options: Off, 5min, 15min, 30min, 60min, 90min, 120min, 240min).

Video and audio settings

- Press the ASPECT button repeatedly to select the desired video size directly from the following options: Auto, 4:3, Just scan, 16:9, Zoom1, Zoom2 (Available sizes may vary for different input sources.)

NOTE: If there is no signal, pressing this button will be ineffective and the available video size may be different for different input sources.

- Press the AUDIO button repeatedly to select the desired audio language.





NOTE: The channel you are watching must support multi-audio languages.

Information display

- Press the DISPLAY button to display information about the current program.

Basic Operations (Cont.)

Favourites list

- While viewing a channel, press the FAV button on the remote control to enter the Favourites List menu.
- Press the ◀/▶ to select the favourite category and ▲/▼ buttons to select the channel and press OK to watch it.
- To add a channel to Favories list:
- Navigate to Menu > Channel > Favourite Manager and click OK.
- Press the  /  /  /  buttons to add channels to favourite category 1/2/3/4 respectively.
- Press the EXIT button to save the changes and exit.

Quick select

- While viewing a channel, press the OK button to enter the Channels List directly.
- Press the ▲/▼ buttons to select the channel and press OK to watch it.

Teletext

- Press the TEXT button on the remote control to view the available teletext information. Press OK to hide the information.


NOTE: See the note on page iii for important information about teletext services in Australia.

TV/Radio (for DTV mode only)

- Press the TV/RADIO button on the remote control to switch the unit between TV and radio mode.

Subtitle

- Press the SUBTITLE button on the remote control to enter the subtitle menu.
- NOTE:** The channel you are watching must support multi-subtitles.

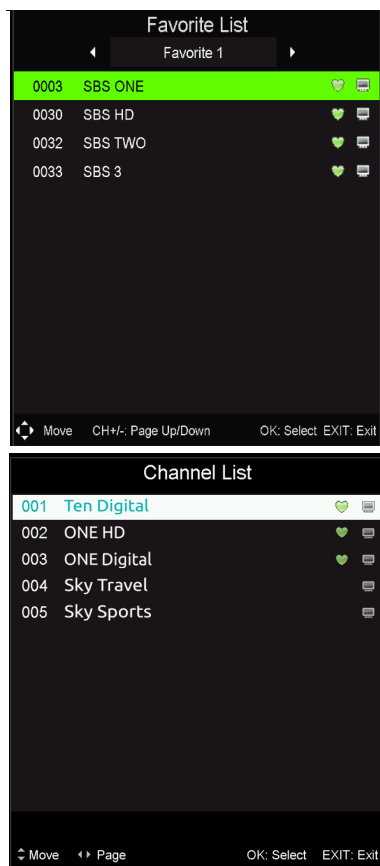


Electronic Program Guide (EPG)

Freeze

- During normal playback, press the FREEZE button on the remote control to hold the picture, press it again to resume normal playback.

EPG TV Guide (for DTV mode only)

EPG stands for Electronic Program Guide. It is supplied by the program providers and offers information about the programs to be broadcast. You can access it in digital mode by pressing the EPG button on the remote control.

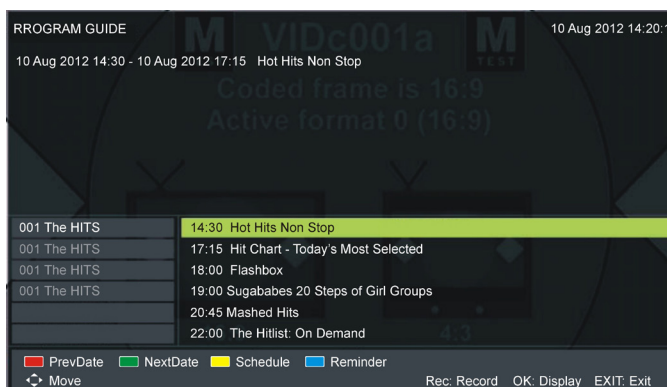

- Press the EPG button to display the EPG interface (above). The area at the top will display information about the selected program or channel, and the columns below will display the list of available channels and their programs at various timeslots.
- Before you can view any EPG information, you have to 'activate' every channel for which you want to view program information. To do this, use the ▲ / ▼ buttons to select a channel in the left column, then press OK to confirm.
- Press the ◀/▶ buttons to switch between columns.
- Press the ▲/▼ buttons to select a different channel/program in the list.
- Press the ■ RED button to display the TV guide of the previous day.
- Press the ■ GREEN button to display the TV guide of the next day.
- Press the ■ YELLOW button to enter the schedule list page.
- Press the ■ BLUE button to schedule a reminder for the selected program.
- Press the ■ RECORD button to schedule a recording for the selected program.
- Press the OK button to display full program information.
- Press EXIT to exit the EPG menu.

Recording



One-touch recording (in DTV mode only)

IMPORTANT!


Before you can record with this TV set (including time-shift recording), you must have inserted a FAT32 formatted USB storage device into the USB port.



- First, insert your USB memory device into the USB port.

When watching a program in DTV mode:

- Press the  RECORD button on the remote control to start recording directly. Press it again to display information about the current recording.
- Press the  STOP button to display a dialogue box: select Yes to stop recording, select No to dismiss the dialogue box.
- When a program is being recorded in the background (while the TV is in standby mode), the LED light will flash blue and red.

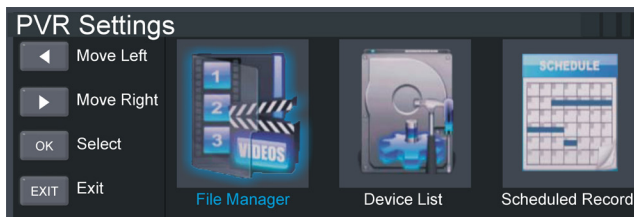To watch a recorded program:



- Press the INDEX button on the remote control to display the PVR Settings page. (Alternatively, go to the Setup Menu and select PVR Settings.)
- Highlight File Manager and press OK to enter it (see page 34).
- Use the / buttons to select a recorded file and press OK to start playback in full screen mode.

Scheduled Recording (in DTV mode only)

See instructions under EPG on the previous page or press the INDEX button, select Schedule Recording and follow the instructions on page 35.

Recording (Cont.)

Time-shift recording and playback (in DTV mode only)

IMPORTANT!


Before you can record with this TV set (including time-shift recording), you must have inserted a FAT32 formatted USB storage device into the USB port.

The time-shift function allows you to pause the live TV signal, then resume playback at your convenience.

- First, insert your USB memory device into the USB port.

When watching a program in DTV mode:

- Press the **⏸** button on the remote control to initiate time-shift mode and pause the program.
- Press the **⏸** button again to resume playback; the tool bar pictured below will appear on the screen.

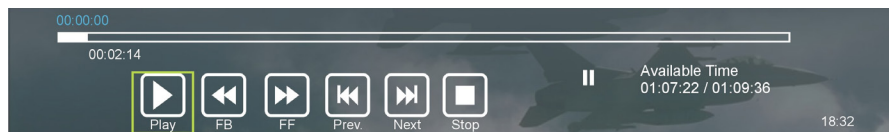

- Use the **◀▶** buttons to select Play, then and press OK to play the program in time-shift mode.
- Use the **◀▶** keys, then press OK to select a function such as Fast Forward from the on-screen toolbar.
- To stop time-shift, press the **■** STOP button on the remote control to display a dialogue box, then select Yes to exit time-shift mode and return to live TV signal, or select No to dismiss the dialogue box.

NOTE: The USB storage device will not retain recorded data after exiting the time-shift function

Recording (Cont.)

Important notes


When using the USB/Media function, remember the following important points:

- We strongly recommend you back up all data in the USB storage device to another storage device so you do not risk losing any data in case of an unexpected device failure or accident. **We do not assume liability for any loss of data due to misuse or malfunction. Data backup is your personal responsibility.**
- You cannot change to a channel from another broadcaster or select another function while in recording mode.
- If the signal is interrupted or removed while in recording mode, the recording will stop until the signal is established. This may cause you to lose program content.
- Do not turn the TV off during recording, otherwise the TV will exit the time-shift function and turn to standby mode.
- The file recorded can only be used in this TV. Do not copy it to any other device.
- When you are in time-shift recording mode, you may experience some difficulty with a scheduled recording at different times without removing the USB recording device. You will need to remove the USB device as it is required to reset after each recording to protect the device from damage. If you see the message 'DISK NOT READY' displayed, remove the device, reconnect and proceed with your recording.
- Some USB storage devices may not be compatible for smooth operation with this TV.
- For large file sizes and large capacity storage devices, the loading speed may be longer. The recognition speed of a USB storage device may vary depending on the device.
- When connecting or disconnecting the USB storage device, ensure the TV is not in USB mode, otherwise the USB device or the files stored in it may be damaged.
- Only use a USB storage device formatted in a FAT32 file system provided with the Windows operating system. If it is formatted by a different utility program that is not supported by Windows, it may not be recognised.
- Ensure any USB devices connected to the TV do not use/exceed 500mA power rating.
- If an "Unsupported File" message is displayed, the file format or codec is unsupported or corrupted.

USB Mode


Media playback

- First, insert a USB memory device into the USB port.
- Press the SOURCE button on the back panel, or on the remote control, to switch the unit to USB mode. (Alternatively, press the MEDIA button on the remote control to enter USB mode directly.)
- Press the ▲ / ▼ / ◀ / ▶ buttons to move the cursor.
- Press the EXIT button to return to the previous menu page.

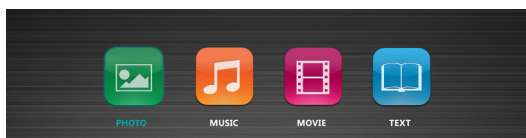

Photo

 - Press the ◀ / ▶ buttons to select Photo in the main menu, then press OK to enter it. Photos files can only be played in this menu category.
- Use the ▲ / ▼ / ◀ / ▶ buttons to select the desired folder or file, then press OK to open the folder or start playing the file.



When playing photo files:

- Press the DISPLAY button on the remote control to hide/display the on-screen tool bar.
- Press OK repeatedly to switch between Slide Show and Single View.
- Press the ◀ / ▶ buttons to play the previous/next file.
- Press the ▲ / ▼ buttons to rotate a photo clockwise/counterclockwise.

NOTE: You can rotate a photo only when slide show is paused.


- Press the  BLUE button on the remote to display the Quick Menu, press it again to dismiss the menu.

- **Interval Time:** Set the slide show interval time.

- **Repeat:** Select the repeat mode.

- **Slide Show Effect:** Select the slide show effect.


- **Background Music:** Turn on/off background music.

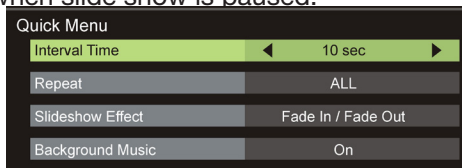


USB Mode (Cont.)


Music

- Press the ◀/▶ buttons to select Music in the main menu, then press OK to enter it. Music files can only be played in this menu category.
- Use the ▲/▼/◀/▶ buttons to select the desired folder or file, then press OK to open the folder or start playing the file.

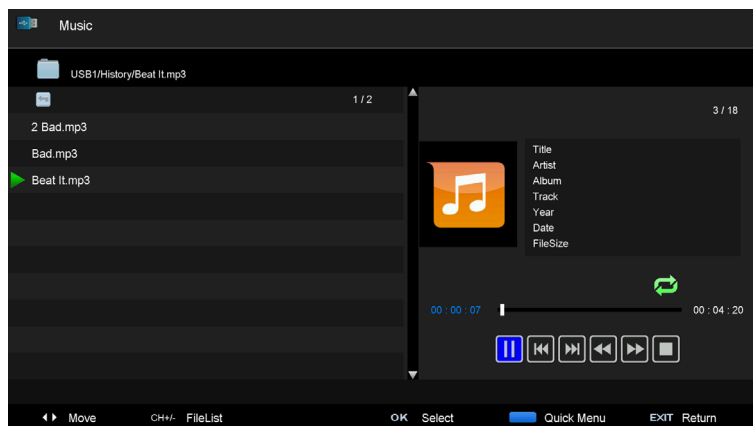

When playing music files:

- Press the CH+/- button on the remote control to switch between Player and File List.
- Press the  BLUE button on the remote control to display the Quick Menu, press it again to dismiss the menu.

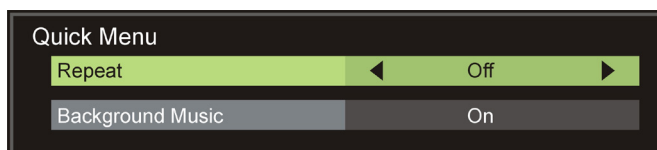


Repeat: Select the repeat mode.

Background Music: Turn on/off background music.

USB Mode (Cont.)

Movie

 - Press the ◀/▶ buttons to select Movie in the menu, then press OK to enter. Movie files can only be played in this menu category.
- Use the ▲/▼/◀/▶ buttons to select the folder or file, then press OK to open the folder or start playing the file.




When playing movie files:

- Press the DISPLAY button on the remote control to hide/display the tool bar.
- Press the ◀/▶ buttons to select the preferred option, then press OK to confirm.

Text







- Press the ◀/▶ buttons to select Text in the main menu, then press OK to enter.
- Use the ▲/▼/◀/▶ buttons to select the folder or file, then press OK to open the folder or start playing the file.

When playing text files:

- Press the ◀/▶ buttons to display the previous/next page.
- Input your desired page using the number buttons, then press OK to go to the desired page.
- Press the  BLUE button on the remote to display the Quick Menu, press it again to dismiss the menu.
 - **Repeat:** Select the repeat mode.
 - **Background Music:** Turn on/off background music.
 - **Encode Type:** Select the encode type.



Remote operations when playing multimedia files:

- Press the  button to play or pause playing.
- Press the  button to stop playing.
- Press the  button to move fast backward.
- Press the  button to move fast forward.
- Press the  button to play the previous file.
- Press the  button to play the next file.

NOTE: To play your multimedia files, make sure you have selected the correct icon in the main media playback menu.

Menus

This TV set contains different settings menus where you can program your preferred settings. Once you have programmed any settings, the unit will retain them in its memory until you change them, even when switching the unit to standby mode. This means you can always operate the system under the same conditions.

Menu navigation



- Press the MENU button on the back panel, or on the remote control, to display the main menu.
- Press the ◀/▶ buttons to select different submenus.
- Press OK or ▶ to enter the submenu page.
- Press the ▲/▼ buttons to select the preferred option.
- Press the ◀/▶ buttons to adjust the value.
- Press the MENU button to return to the previous menu page.
- Press the EXIT button to exit the menu page.

There are menus for television operation in DTV and ATV mode (pages 25-32), for PC mode (page 36).

- Press the SOURCE button on the back panel, or on the remote control, to display the input source list.
- Press the ▲/▼ buttons to select the desired input source from the options available.

NOTE: When you switch on this TV for the first time, you need to select the language and the country to auto-search for all the available channels in your area. See page 14 for first time installation instructions.

Menus (Cont.)

Picture menu (DTV & ATV mode)

Picture Mode: Available options: Standard, Mild, Personal, Dynamic.

Brightness / Contrast / Sharpness / Saturation: These values can be adjusted from 0-100.
NOTE: When these values are adjusted, picture mode will automatically switch to Personal.



Hue: Use this item to adjust the colour tone (for NTSC system only) from -50 to 50.

Color Temp: Use this item to adjust the optimum colour temperature for suitable viewing. Available options: Normal, Cool, Warm.

Aspect Ratio: Use this item to adjust the video size. Available options: Auto, 4:3, Just scan, 16:9, Zoom1, Zoom2

Screen Mode (HDMI mode only)

The item is used to adjust the screen mode in HDMI mode.

Available options: Auto, Video, PC.

NOTE: If there is no signal, pressing the ASPECT button on the remote control will not work. The available video size may be different in different input sources.

Advanced Settings:

NR (Noise Reduction):

Available options:

Off, Weak, Medium, Strong.

MPEG NR (MPEG Noise Reduction):

Available options: Off, Weak, Medium, Strong.

Dynamic Contrast:

Available options: Off, Weak, Medium, Strong



Menus (Cont.)

Sound menu (DTV & ATV mode)



Sound Mode: Available options: Standard, Music, Personal, Movie.

Treble / Bass: Use these items to adjust the levels of higher-pitched sounds (Treble) and lower-pitched sounds (Bass) from -50 to 50.

NOTE: When the Treble or Bass values are changed, sound mode will automatically switch to Personal.

Balance: Use this item to adjust the audio output between the left and right speaker from -50 to 50.

Surround Sound: Use this item to turn on/off Surround Sound simulation.

EQ Setting: Use this item to set the equalizer. Available EQ Modes: Off, Rock, Pop, Jazz, User.

AVL (Auto Volume Level): Use this item to turn on/off AVL.

S/PDIF: Use this item to select the SPDIF audio output type.
Available options: Off, Auto, PCM.

AD (Audio Description): Press the OK button (or the ► button) to enter this item. Then you can set the AD switch to ON or OFF.

NOTE: Audio description for visual representation works only with programs that contain related narration information (for people with vision impairments).

Sound Type: Use this item to select the desired sound Type.
Available options: Stereo, Dual I, Dual II, Mixed.



Menus (Cont.)

Channel menu (DTV & ATV mode)



Auto Scan

- Press OK or ► to enter. Then select your country, scan type and start scanning.

Manual Scan

- Press OK or ► to enter. Then select digital or analog manual scan.

Digital Manual Scan

- Press OK or ► to enter.

Digital Scan: Press ◀ / ▶ to select the channel.

Start: Start scanning.

Frequency: This is not user adjustable.

Strength: This displays the signal strength of the current channel. It is not user adjustable.

Analog Manual Scan

- Press OK or ► to enter.

Analog Scan: Press ◀ / ▶ to fine tune.

Channel to Save: Select the channel number to be saved.

Colour System: Select the colour system (PAL in Australia).

Sound System: Select the sound system.

AFC: Turn on/off automatic fine tuning.

Start: Start scanning.


NOTE: Colour System, Sound System and AFC can only be adjusted if there is a signal.



Menus (Cont.)

Channel Edit

- Press OK or ► to enter.
- Press the ▲ / ▼ button to highlight the desired channel.
- Press the ■ RED button on the remote control to delete the highlighted channel.
- Press the ■ GREEN button on the remote control to skip the highlighted channel.
- Select the channel you wish to move. Press the ■ BLUE button on the remote control to enter Move mode.
Use the ▲ / ▼ buttons to select the preferred position, then press the ■ BLUE button again to move the channel.

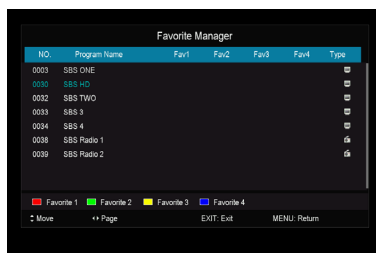

Favourite Manager


- Press OK or ► to enter.
- Press the / button to highlight the desired channel.
- Press ■ / ■ / ■ / ■ button on the remote control to add the channel to favourite category 1/2/3/4 respectively.

Signal Information

This item is used to display signal details, such as Channel Number, Frequency, Quality and Strength.

Menus (Cont.)

Lock menu (DTV & ATV mode)

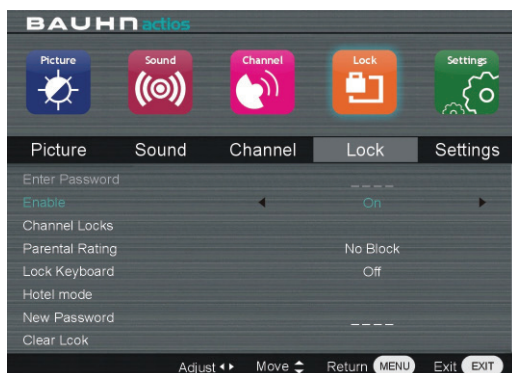

- Press OK or ► to enter.
- Input the factory default password “0000” using the number buttons on the remote control.
- Press the ▲ / ▼ button to select the preferred item.
NOTE: If you forget the password, please use the master password “4711”.

Enable

- Use this item to enable/disable the lock system.

Channel Locks

- Press OK or ► to enter.
- Press the ▲ / ▼ button to select the channel you want to lock.
- Press OK repeatedly to lock/unlock the highlighted channel.

Parental Rating

- Use this item to select the desired program rating. Available options:
No Block, Block G+, Block PG+, Block M+, Block MA+, Block AV+,
Block R+, Block All+.


Lock Keyboard

- Use this item to turn on/off the key lock on this unit.

Menus (Cont.)

Hotel Mode

- Press OK or ► to enter.
- Press the ▲ / ▼ button to select the desired item.
- Press the ◀ / ▶ button to adjust the value.
- Press OK or ► to enter the submenu.
- Press the MENU button to return to the previous page.

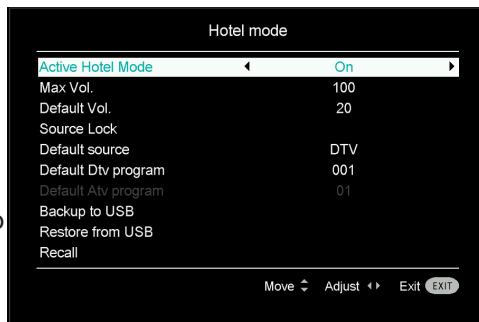

Active Hotel Mode: Turn on/off Hotel Mode.

Max Vol.: Set the maximum volume level.

Default Vol.: Set the default volume level.

Source Lock: Turn on/off the lock of available sources.

Default source: Set the default source.

Default DTV program: Set the default digital program.

Default ATV program: Set the default analog program.

Backup to USB: Backup the data to USB memory device.

Restore from USB: Restore data from USB memory device and then your TV will switch to STANDBY mode.

Recall: Recall the default settings of Hotel Mode.

New Password


- Input your new password using the number buttons on the remote control and confirm it again to set your private password.

Clear Lock

- Use this item to clear your current lock settings.

Menus (Cont.)

Setup menu (DTV & ATV mode)

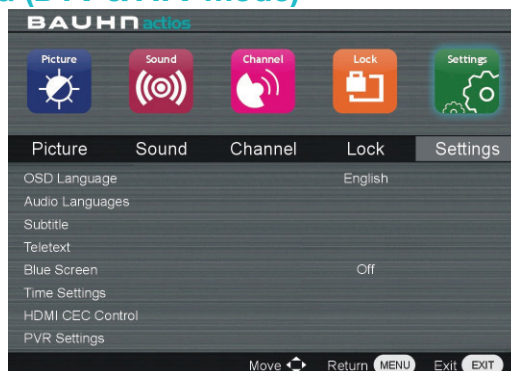

OSD Language

- Use this item to select the desired on-screen display language.

Audio Languages

- Press OK or ► to enter. Then you can select the desired primary and secondary audio language (only adjustable if there is a signal).

Subtitle

- Press OK or ► to enter. Then you can select the desired primary and secondary subtitle language and turn on/off the Hearing Impaired function when this mode is on (only adjustable if there is a signal).

Teletext

- Press OK or ► to enter. Then you can select the desired digital Teletext language and decoding page language. (See the note on page iii for more information about Teletext in Australia.)

Blue Screen

- When there is no signal, you can turn on/off blue screen to replace the default no signal message screen.

Time Settings

- Press OK or ► to enter.
- Press the ▲ / ▼ button to select the desired item.
- Press the ◀ / ▶ button to adjust the value.
- **OSD Time:** This item is used to select desired OSD menu duration. Available options: Off, 10/20/30/60 seconds.

Sleep Timer: This item is used to adjust the Sleep Timer.

Available options: Off, 5/15/30/60/90/120/240 minutes.

Menus (Cont.)

Auto Sleep: This item is used to select desired Auto Sleep (standby) duration. Available options: Off, 3/4/5 hours.

Time Zone: This item is used to select desired time zone.

Time: Press OK or ► to enter it.

Press the ▲ / ▼ button to select the desired item.

Press the ◀ / ▶ button to adjust the value.

Auto Sync: Synchronise the time with your channel if Auto Sync is on.



When Auto Sync is off, you can adjust the Date and Time.

To adjust the date and (or) time:

- Highlight the date and (or) time and press OK to enter the adjusting page.
- Press the ▲ / ▼ button to adjust it.
- Press OK to confirm the setting; press EXIT to cancel it.

HDMI CEC Control

- To use the HDMI CEC function, make sure the HDMI device (amplifier, etc.) is connected correctly.
- Press the SOURCE button on the unit or remote control to select HDMI input source.

HDMI CEC Control: This item is used to turn on/off HDMI CEC (Consumer Electronic Control).

ARC: This item is used to turn on/off Audio Return Channel. When ARC is on, the TV can return the audio to the connected HDMI device (amplifier, etc.).

CEC Menu Control: Press OK or ► to enter it.

Menus (Cont.)



- Home menu: Display the Home menu of the connected CEC device.
- Option: Display the Option menu of the connected CEC device.
- Content: Display the Content menu of the connected CEC device.

Device List: Shows the list of device(s) that are connected to the TV.

Menus (Cont.)

PVR Settings


File Manager

- Press the ▲/▼ button to select a recorded file.
- Press the ■ RED button on the remote control to play the highlighted file from the beginning.
- Press the ■ GREEN button to delete the highlighted file.
- Press the ■ YELLOW button to delete all recorded files.
- Press the ■ BLUE button to zoom in/out.



Device List

- In this item you can check the available space and file system of your memory device connected to USB port.
- Press the ■ RED button on the remote control to format your USB memory device.

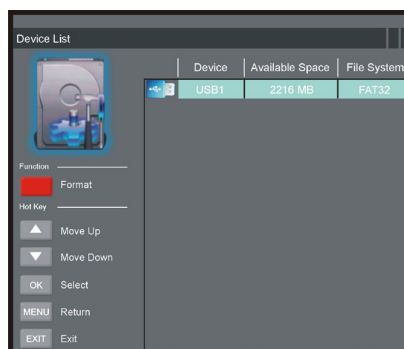

Menus (Cont.)

Scheduled Record




- Press the ■ GREEN button to delete the highlighted option.
- Press the ■ YELLOW button to delete all.
- Press the ▲ / ▼ button to select a schedule.
- Press OK to edit the highlighted Scheduled Recording.

Frequency: Press the ◀ / ▶ buttons to select the desired mode: Off, Once, Daily, Weekly, Weekday.

Channel: Press the ◀ / ▶ buttons to select the desired channel.

Start Time: Press the ▲ / ▼ / ◀ / ▶ buttons to select the desired start date and time of the recording.

End Time: Press the ▲ / ▼ / ◀ / ▶ buttons to select desired end date and time of your scheduled recording.

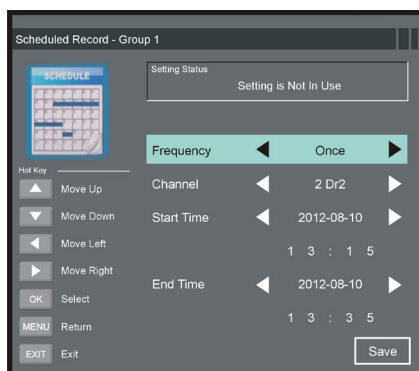

NOTE: After successful completion, select “Save” to save the settings.

First Time Setup

This item is used to recall the First Time Setup page (see page 14 for details).

Reset

This item is used to reset to factory default settings.


Software Update (USB)

This item is used to update software through USB memory device.

Menus (Cont.)

PC Mode

- Connect a personal computer to this unit and power on both the computer and this unit.
- Press the SOURCE button on the back panel, or on the remote control, to select PC input source.
- Press the MENU button to display the main menu, then select Picture using the ◀/▶ buttons.
- Use the ▲/▼ buttons to highlight PC Setup, then press OK or ▶ to enter.
- Press the ▲/▼ buttons to select the preferred item.
- Press OK or ▶ to enter the submenu, press the ◀/▶ buttons to adjust the value.

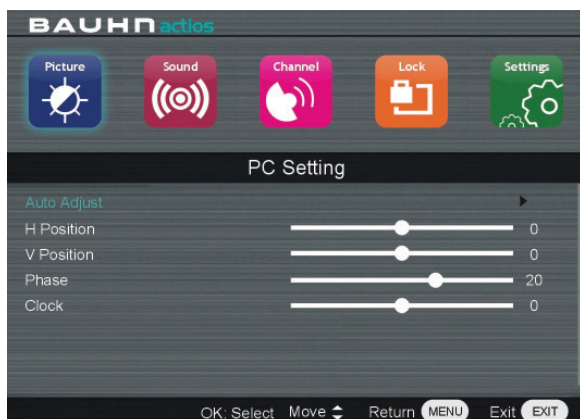

Auto Adjust

Use this item to adjust the PC screen automatically.

H Position

Use this item to adjust the horizontal position value from -30 to 30.

V Position

Use this item to adjust the vertical position value from -30 to 30.

Phase

Use this item to adjust the phase value from 0 to 31.

Clock

Use this item to adjust the signal transfer speed from -30 to +30.

NOTE: For other menu operations in PC mode, please refer to the menu operations of DTV mode.

NOTE: A signal must be connected in order to change these settings.

FAQs

If you experience any problems with your TV, check the list below and take any necessary steps before calling for service. If none of the solutions help you solve the problem, turn the power off and contact the after sales support line for advice.

General problems with the TV set

Problem	Solution
No power.	Insert the power plug securely into the power outlet.
No picture.	Ensure that the equipment is connected properly. <ul style="list-style-type: none">•Adjust the antenna or use an external antenna.•Relocate the unit near a window (if inside a building).•Move the TV set away from any product that causes interference.•Auto-tune the unit again.•Try another channel.
No sound or distorted sound.	<ul style="list-style-type: none">•Ensure that the equipment is connected properly.•Ensure that the input setting for the TV is correct.•Ensure the audio settings are properly set.•Ensure the volume is not muted. If it is, press the MUTE button to restore the sound.•If earphones are connected, unplug them.•Adjust the volume to a suitable level by pressing the VOL+/VOL- button.
No operations can be performed with the remote control unit.	<ul style="list-style-type: none">•Check the batteries are correctly installed.•The batteries may be exhausted: replace them.•Make sure to point the remote control at the remote control sensor and try it again.•Make sure to use the remote control at a distance of no more than 6m from the sensor.•Remove any obstacles between the remote control and remote control sensor.
No key operation (by the main unit and/or the remote control) is effective.	Disconnect the power plug and then reconnect it. (The unit may not be operating properly due to lightning, static electricity or some other factors.)
Noise or other interface	Electronic equipment near the unit is causing interface. Relocate the unit or move the equipment.

FAQs (Cont.)

Problems relating to the USB device

Problem	Solution
My TV does not recognise my USB device or my external hard disk.	<p>Please refer first to the instructions describing how to use USB devices with this unit.</p> <p>If the problem still occurs, your device may not be compatible. This machine has been tested with the majority of Flash memory-based devices and hard disks (Music/Movie players with HDD) on the market; however, it may not be compatible with certain devices, in particular external self-powered hard disks.</p>

Specifications

Display Device	50inch Full High Definition LED TV	
Resolution	1920 x 1080	
Display Colours	16.7M	
Contrast Ratio	4000 : 1	
Aspect Ratio	16 : 9	
Multimedia Playback Format under USB Mode	Movie	AVI, MPEG, MPEG-4, TS, MKV, RMVB
	Music	MP3, WAV, AAC
	Photo	JPG/JPEG
	Text	TXT
Power Source	AC 100~240V, 50~60Hz	
Power Consumption	<110W	
Dimensions	With stand: 1134 x 250 x 704 mm (w x d x h)	
	Without stand: 1134 x 92 x 662 mm (w x d x h)	
Weight	With stand: 13.96kg	
	Without stand: 11.74kg	



50" (127cm) Full High Definition LED TV

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. **We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 886 649 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252
PO BOX 6056 Frenchs Forest, Sydney, Australia NSW 2086
Tempo Help Desk: 1300 886 649 (Aust)
(Operating Hours: Mon-Fri 08:30AM to 06:00PM EST)
Email: info@tempo.org

AFTER SALES SUPPORT

  1300 886 649

 www.tempo.org

Model: ATV50F-415 Product Code: 49762 04/2015



This page has been left blank intentionally.

This page has been left blank intentionally.



Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on 1300 886 649 before returning it to the store for a refund.