



## 65" 4K Ultra High Definition LED LCD Smart TV

**Model Number: ATVS65-815**

### INSTRUCTION MANUAL

**AFTER SALES SUPPORT**

  1300 886 649

 [www.tempo.org](http://www.tempo.org)

Model: ATVS65-815 Product Code: 51718 09/2015




# Welcome

Congratulations on choosing to buy a BAUHN® product. All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.


We hope you will enjoy using your purchase for many years to come.

# Remote Control

- 1 **POWER:** Set the unit on standby mode; press it again to switch it on.
- 2 **TV/RADIO:** Select TV or Radio (DTV).
- 3 **P-MODE:** Switch the picture mode.
- 4 **NUMBER BUTTONS (0-9):** Select a TV channel directly when watching TV. The channel changes after 2 seconds.
- 5 **MENU:** Display the main menu; press again to return to the previous menu page.
- 6 **SOURCE:** Select the input source.
- 7 **TITLE:** Display the DVD title menu (DVD\*).
- 8 **◀/▶/▲/▼:** Press the RIGHT/LEFT UP/DOWN buttons to navigate the on-screen menus and adjust the system settings to your preference. Press **OK** to confirm your selection.
- 9 **RETURN:** Return to the previous channel.
- 10 **SMART HUB:** Enter the Smart Hub menu.
- 11 **EXIT:** Exit from the main TV menu displayed on the screen. Display the DVD title menu (DVD\*).
- 12 **INFO:** Display information of the current program (DTV).
- 13 **VOL +/-:** Turn the volume up/down.
- 14 **D-SETUP:** Display the setup menu (DVD)\*.
- 15 **▲:** Load/unload a disc (DVD)\*.
- 16 **⏸:** Start or pause playing.
- 17 **●:** Record program in DTV mode.
- 18 **■:** Stop playing.
- 19 **Red, Green, Yellow, Blue:** In HbbTV mode, press the colour buttons to access HbbTV applications (Freeview plus catchup TV programs).
- 20 **MUTE:** Mute the sound. Press again to restore the sound.
- 21 **S-MODE:** Switch the sound mode.
- 22 **INDEX:** Play the next file. Display the record program list (DTV).

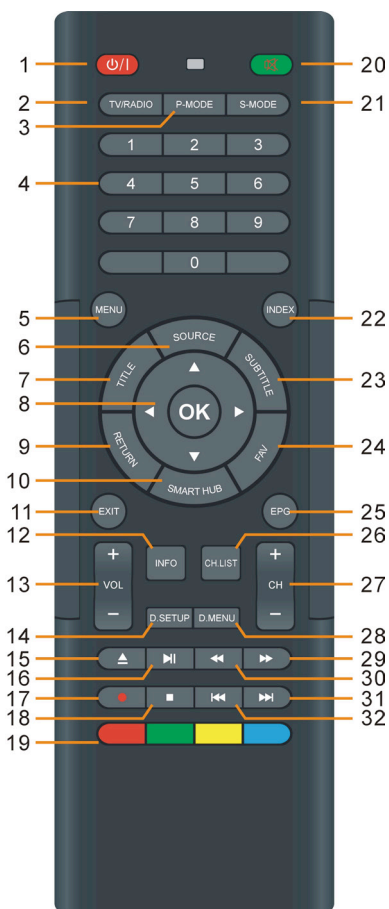

# Remote Control (Cont.)

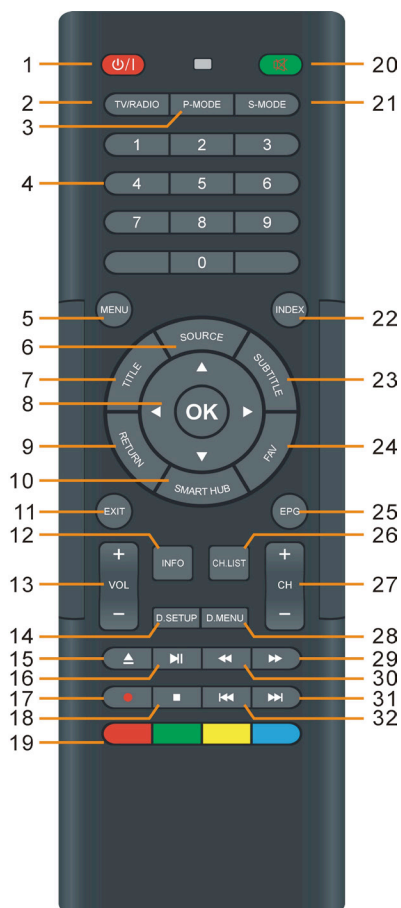

- 23 SUBTITLE:** Enable/disable subtitles.\*\*
- 24 FAV:** Enter the favourite channels list.
- 25 EPG:** Launch the Electronic Program Guide (DTV).
- 26 CH. List:** Press to play the next or previous channel; press repeatedly to scan through the channels.
- 27 CH+/-:** Press to play the next or previous channel; press repeatedly to scan through the channels.
- 28 D.MENU:** Display the disc menu (DVD)\*.
- 29 ►►:** Move fast forward.
- 30 ◀◀:** Move fast backward.
- 31 ►►:** Play the next file.
- 32 ◀◀:** Play the previous file.

## NOTES:

\* DVD related functions are ineffective on the ATVS65-815.

\*\*Teletext or Austext is no longer available, nor is there any plan for a replacement teletext service in Australia. For more information, please visit the websites of the Australian channel providers. However, one teletext option, “closed captions”, is still working on most Australian television channels. This service allows you to activate subtitles while watching normal television programs that provide it.

# Remote Control (Cont.)

There is a built-in keyboard on the back of the remote control for easy operation (for Smart Hub).



## Tips:

- When using the QWERTY keyboard, do not cover the area where the IR sensors are marked above.
- To enter UPPERCASE letters, press the 'Caps' button first, followed by the chosen letter button.
- To enter the numbers and characters shown on the keys in yellow, press the 'Alt' button first, followed by the chosen letter button.
- The 'Del' button on the keyboard performs the backspace function.
- As an alternative to the remote control keyboard, you can use the on screen keyboard.

# Remote Control (Cont.)

## Using the Remote Control

To use the remote control, point it towards the remote sensor at the front of the TV.

The remote control has a range of up to approximately five metres (5m) from the TV at an angle of up to 30 degrees each to the right and left of the sensor, as illustrated on the right.

The remote control will not operate if its path is blocked.

## NOTES:



- Do not drop, step on or otherwise impact the remote control as this may damage the parts or lead to a malfunction.
- The operating distance may vary according to the brightness of the room.
- Do not point bright lights at the remote control sensor.
- Do not place objects between the remote control and the remote control sensor.
- Do not use this remote control while simultaneously operating a remote control of other devices.

## Remote Control Preparation

- Install the batteries in the back of the remote control, ensuring to match up the polarity markings (+/-).
- The batteries should last for around one year. The service life of the batteries will depend on how often they are used.
- If the remote control does not work when operated near the TV, replace the batteries.

## NOTE:

- Remove the batteries if the remote control is not going to be used for a long time.

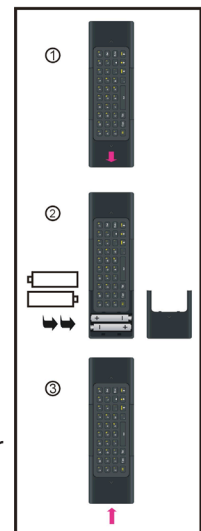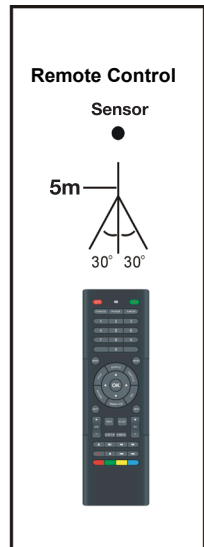



## 65" 4K Ultra High Definition LED LCD Smart TV

# Warranty Details


---

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

---

#### AFTER SALES SUPPORT

 (AUS) 1300 886 649

 [www.tempo.org](http://www.tempo.org)

Model: ATVS65-815 Product Code: 51718 09/2015



# Contents




Welcome	i
Remote Control	ii
Warranty Details	vi
General Safety Instructions	1
Installation	5
Controls and Connections	7
Getting Started	14
Basic Operations	18
Electronic Program Guide (EPG)	20
Recording	21
Smart Hub	24
Media Mode	28
Menus	31
FAQs	53
Specifications	65
Repair and Refurbished Goods or Parts Notice	56



# General Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Follow all instructions and take notice of all the warnings.

 <b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>		<p>The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert you to the presence of non-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
<p>To reduce the risk of electric shock, do not remove the cover (or back). This unit contains no user-serviceable parts inside. Refer all servicing to qualified service personnel only.</p>		<p>The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.</p>

## IMPORTANT WARNINGS AND CAUTIONS!

- Only connect this TV to a mains socket with a protective earthing connection.
- To prevent damage which may result in fire or an electric shock hazard, do not expose this appliance to rain or moisture.
- Do not change or modify the appliance in any way.
- Only use the attachments/accessories specified by the manufacturer.

# General Safety Instructions (Cont.)

## Installation

**Follow instructions:** Only install this TV set in accordance with the instructions in this manual. If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling and can cause injury, particularly to children.

- This TV is equipped with standard wall-mounting points, and **we recommend that a wall bracket be installed between the TV and the wall to prevent the TV from falling from a cabinet.** (The bracket is not included.)
- To prevent injuries from your television falling, take a few simple precautions:
  - Do not place the TV on tall furniture (e.g., on a cupboard or bookcase) without anchoring both the furniture and the TV to a suitable support.
  - Only use furniture that can safely support the television.
  - Ensure the TV is not overhanging the edge of the supporting furniture.
  - Educate children about the dangers of climbing on furniture to reach TV controls.
  - Do not place the TV on cloth or other materials.
- When deciding on where to put the TV set, make sure the place is:
  - Well ventilated, and away from damp and cold.
  - Protected from overheating and away from direct sunlight.
  - Away from moisture drips or splashes.
  - Protected from excessive dust or grease.
- **Bookcase:** Do not install this equipment in a confined space such as a bookcase or similar unit.
- **Heat:** Do not install the TV set near heat sources such as radiators, stoves or other audio visual equipment (including amplifiers) that produce heat.
- **Water:** Do not place containers with liquids (such as vases) or with small metallic objects on top of the unit. If liquid enters the unit or any metal object falls into the unit, it may result in short-circuit, fire or electric shock.
- **Fire or explosion:** Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the TV set.
- **Antenna:** Install the antenna away from high-voltage power lines and communication cables and make sure it is installed securely. If the antenna touches a power line, contact with the antenna could result in fire, electric shock or serious injury.
- **Ventilation:** Install the unit at an adequate distance from the wall to ensure sufficient ventilation. If the temperature inside the unit rises, it may result in fire.

# General Safety Instructions (Cont.)

## Electrical Safety and Cord Handling

- **Voltage:** Before installing this TV set, make sure your outlet voltage corresponds to the voltage stated on the appliance rating label.
- **Protect from moisture:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture; do not use it anywhere near water; do not touch the power plug with wet hands.
- **Damage:** Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- **Power outlet:** Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- **Power plug:** Make sure the plug is properly installed before inserting it fully into the outlet. A loose or improperly inserted power plug may cause a fire.
- **Protect the cord:** Do not bend, twist or kink the power cord excessively. Do not allow anything to rest on or roll over the power cord and antenna cable. Doing so may cause a fire or an electric shock. Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- **Disconnect:** Always grasp the plug when disconnecting the power cord. Pulling the cord can damage the internal wire and may cause a fire.
- **Lightning storms:** Unplug this TV during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.

## Usage Conditions and Restrictions

- **Adjustments:** Follow the instructions in this manual when installing and adjusting the TV set. Only adjust those controls that are covered in this manual, as improper adjustment of other controls may result in damage. If this happens, unplug the TV set and have it serviced by appropriately qualified personnel, or phone the after sales support line for advice.
- **Ventilation:** Do not cover the ventilation openings with items such as newspapers, tablecloths, curtains etc. as this could impede ventilation.
- **Cabinet slots:** Do not insert objects of any kind into this unit through the cabinet slots, as they could touch the current-carrying parts or short-circuit parts, resulting in fire, electric shock or damage to the unit.
- **Smoke or odour:** If you notice any unusual odours or smoke around the unit, immediately disconnect the unit from the outlet and contact the service centre. Failure to do so may result in fire or electric shock.

# General Safety Instructions (Cont.)

- **When not in use:** When not using the unit for long periods of time, disconnect the power cord from the wall outlet. Dust could accumulate over time on the unit and cause it to generate heat and ignite, or deteriorate insulation, which in turn may result in an electrical fire.
- **Moving:** When moving the unit, be sure to turn it off and unplug it from the wall outlet. Moving the unit with the power cord connected to the outlet may cause damage to the cord, resulting in fire or electric shock.
- **Batteries:** When removing the batteries from the remote control, make sure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery.
- **Usage restriction:** This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the product by a person responsible for their safety.
- **Children:** Supervise young children to ensure they do not play with the TV.

## Cleaning and Maintenance

- **Unplug:** To reduce the risk of fire and electric shock, always unplug the TV before cleaning.
- **Cleaning:** Only use a soft, dry cloth for cleaning the TV; do not use a damp cloth. Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent or other chemicals. Wipe off any moisture, dirt or dust on the power plug pins with a clean, dry cloth.
- **Repair:** If the unit requires repair, contact the after sales support line; never disassemble or modify the unit or attempt to service it yourself.
- **Service:** Refer all servicing to qualified service personnel. Servicing is required when the TV has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the TV, when the TV has been exposed to rain or moisture, does not operate normally, or has been dropped.

# Installation

Your TV is packaged with the two stand legs separate from the cabinet. Before using the TV, install the stand as described below, or if you want to mount it to a wall, see page 6 for mounting advice; the wall mount itself is not supplied.


## IMPORTANT!

- Make sure the TV set is unplugged from the power supply before installing or removing the stand.
- The TV panel may be awkward to install on your own. We recommend you ask someone to help with installation and/or removal of the stand.

## Attaching the Stand


### Step 1

Place a soft cushioned material on top of a flat surface to prevent damaging the screen panel. Then place the TV screen flat on top, with the screen side facing down, as illustrated on the right (1).

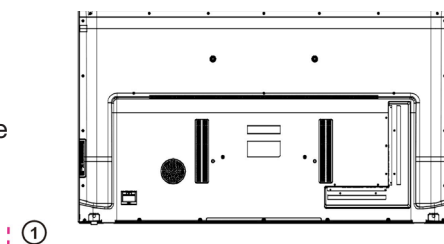


### Step 2

Note the L and R markings and the arrow (pointed towards the front of the TV) on the stand legs. Align the stand leg to the installation point, as illustrated on the right (2).

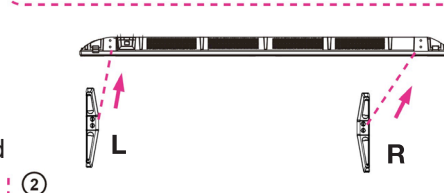

### Step 3

Tighten the screws (supplied) with a screwdriver to affix the stand to the panel, as illustrated on the right (3).

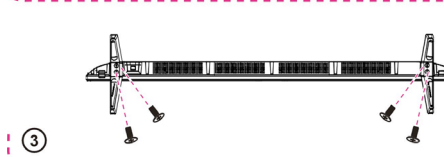

## CAUTION!

- Do not apply excessive force as this may damage the screw holes.
- Unplug the power plug first when installing or removing the TV Stand.
- To avoid any damage to this TV, we recommend you ask someone to help with installation and/or removal of the stand.


# Installation (Cont.)

## Wall-Mounting Instructions

### IMPORTANT!

- Make sure the TV set is unplugged from the power supply before removing the stand and mounting it to a wall.
  - We recommend you contact a professional for assistance when wall-mounting the TV. We assume no liability for any damage to the product or injury to yourself if you mount the TV.
- 
- The TV set is equipped with holes on the back panel for use with wall-mounting brackets (not included). Please use the illustration below as a reference when buying wall-mounting brackets.
  - Use four standard M8\*14mm screws (or longer, depending on the mounting bracket) to mount this TV.


### Back of the TV

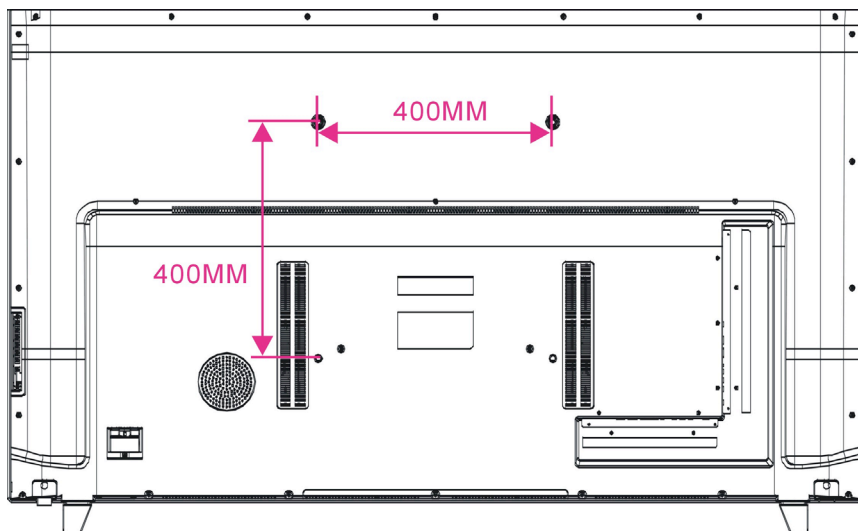


**NOTE:** The screws in the package are for securing the TV stand only. If you are wall-mounting the TV, please consult a professional installer for further instructions on bracket support and wall support.

# Controls and Connections

## Front View

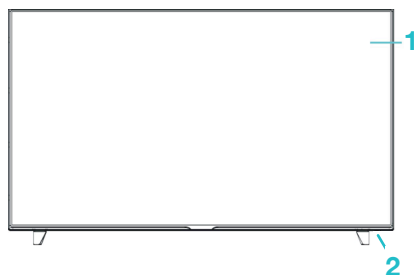

## Back View

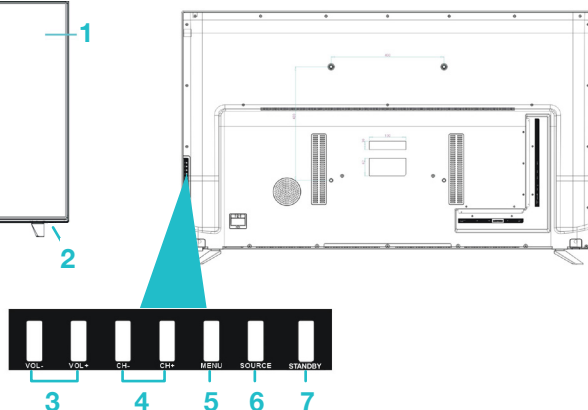


1. **LCD Display Screen**
2. **IR (infra-red) Sensor for Remote Control**  
**Power Indicator:** In standby mode the indicator light is red; when switching on the unit the indicator light will illuminate blue.
3. **VOL + / -** : Increase/decrease the volume level or move left/right.
4. **CH + / -** : Select the next/previous channel or move up/down.
5. **MENU**: Enter the settings menu.
6. **SOURCE**: Select the input source.
7. **STANDBY**: Turn the TV on/off.

**NOTE:** See next page for a detailed description of all the sockets on the back panel.

# Controls and Connections (Cont.)

## Main Unit Back View Controls and Sockets

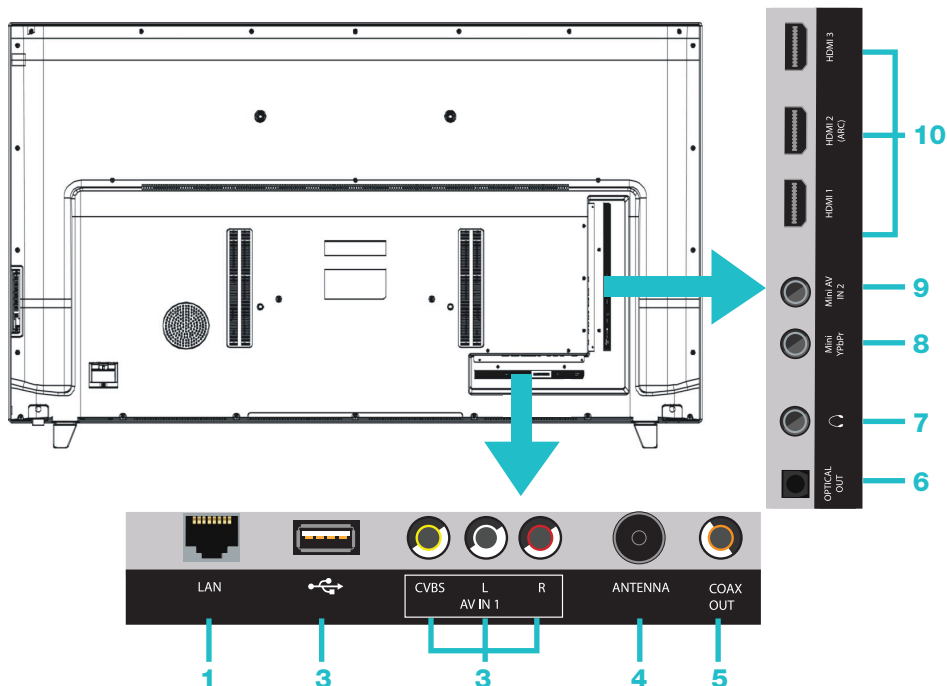

- 1 **LAN INPUT** (Local-Area Network): For connecting to the internet.
- 2 **USB INPUT:** Connect a USB storage device for PVR recording and multimedia file playback.
- 3 **VIDEO INPUT (COMPOSITE):** Supports SD picture quality connections.
- 4 **ANTENNA INPUT:** For connection of the external antenna.
- 5 **COAXIAL S/PDIF OUTPUT:** Connect to an external digital audio device.
- 6 **OPTICAL S/PDIF OUTPUT:** Connect to an external digital audio device.
- 7 **HEADPHONES OUTPUT**
- 8 **MINI Y/Pb/Pr INPUT (COMPONENT):** Supports both SD (Standard Definition) and HD (High Definition) picture quality.
- 9 **MINI VIDEO INPUT (COMPOSITE):** Supports SD picture quality connections.
- 10 **HDMI INPUTS:** Provides an all digital video/audio connection between the TV and any HDMI devices, such as a DVD player, gaming console or A/V receiver.




# Controls and Connections (Cont.)

## IMPORTANT!


Read through the instructions before connecting the TV to other equipment.

## Connecting to an AC Power Source

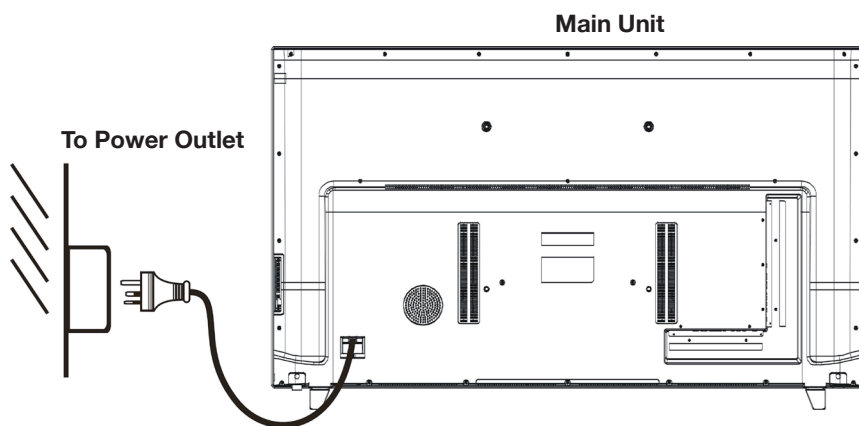


## Connecting an External Antenna

For the best picture quality, we recommend connecting the TV set to an external antenna.

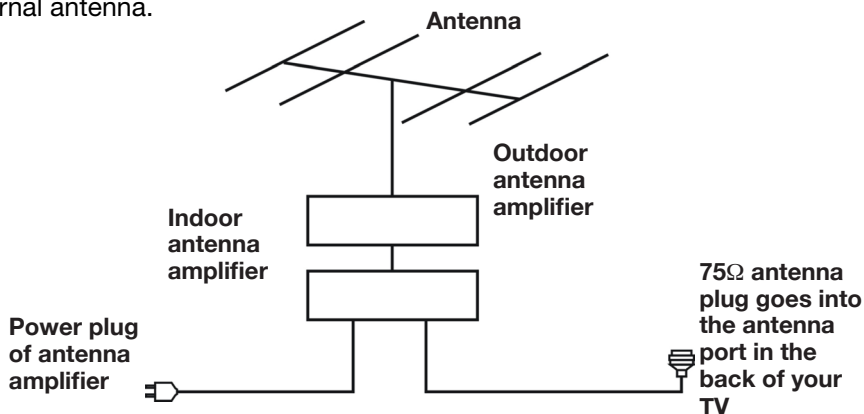


# Controls and Connections (Cont.)

## Composite Video (CVBS) Connection - AV IN 1

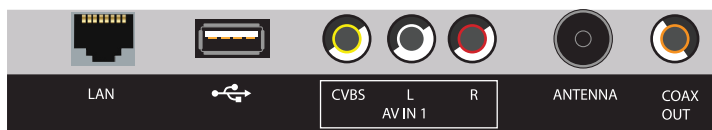

For basic connection, use the composite Audio L/R (white/red) and CVBS (yellow) cable to connect the unit with other devices.

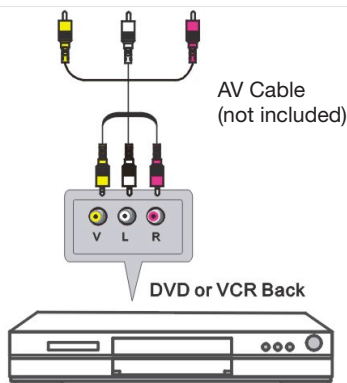

## Composite Video (CVBS) Connection - AV IN 2




Connect the Mini AV cable (supplied) to the AV IN 2 socket. Then connect the other end to your external device.



**NOTE:** Mini AV cable's L/R audio connections are shared between Y/Pb/Pr as well.


# Controls and Connections (Cont.)

## HDMI Connection

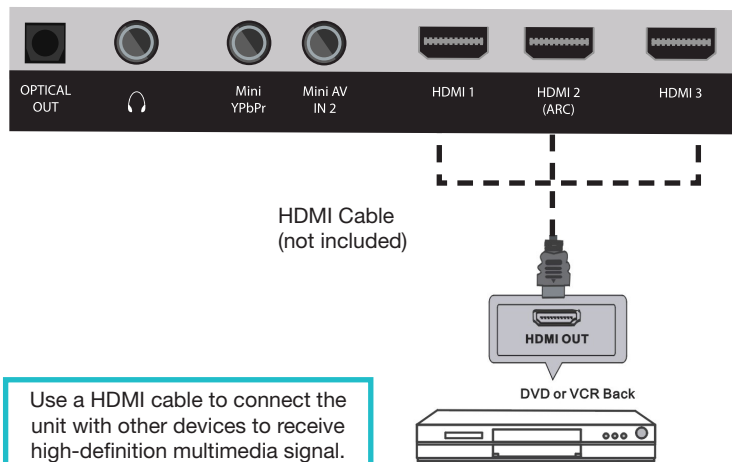


## USB Connection

Insert a USB memory device into the USB port for PVR recording, time-shifting and playback of video/music/photo multimedia files.

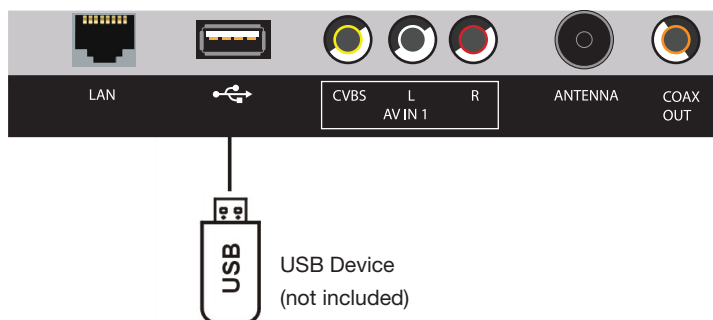

# Controls and Connections (Cont.)

## Component (YPbPr) Connection

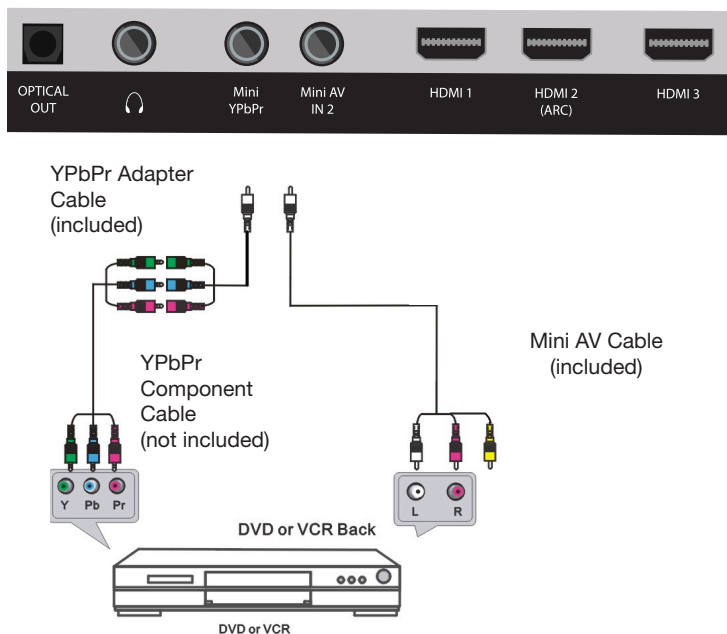


- Your TV contains a mini YPbPr terminal. You will need to use the special adapter cable (supplied) with a 3.5mm head on one end and 3 female RCA terminals on the other end to connect the TV with external devices.
- Then use a YPbPr component cable (not supplied) complete with green, blue and red terminals to connect to your external device.
- For sound, first connect the mini AV cable (supplied) to the AV IN 2 socket. Then connect the white and red jacks on the other end to your external device.



YPbPr Adapter  
Cable  
(included)

# Controls and Connections (Cont.)

## Internet Connection

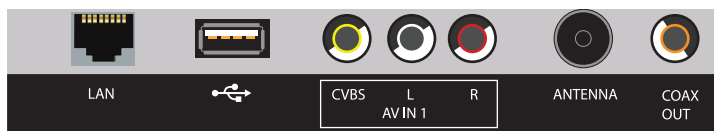

LAN Cable  
(not included)




Use a RJ45 LAN cable (not included) to connect this TV with the available network.

## Earphone Connection



Earphone Cable  
(not included)

## Coaxial (S/PDIF) Connection

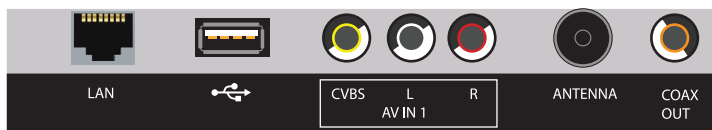

Use a coaxial cable to connect the unit with an amplifier or other audio decoding device for coaxial audio signal output.  
(Coaxial cable is not included.)

# Getting Started

**IMPORTANT!** Make sure all relevant equipment is properly connected (as illustrated on the previous pages) before connecting the unit to a wall socket and turning on the power.

## Powering the TV

To turn the power on or off:

- Plug the power cord into a suitable power outlet, then turn on the power at the outlet.
- Press the **POWER** button, on the right lower side of the back panel (or on the remote control, making sure to aim it at the sensor at the front of the TV); the indicator light will glow blue. Press it again to power off (standby mode); the indicator light will glow red.

## Installation Guide

When you switch on the TV for the first time, the First Time Setup menu will be displayed on the screen, as illustrated below.



### Step One:

**OSD Language:** Use the **▼/▲** buttons to select your OSD language and then press the **OK** button to go to the next step.

# Getting Started (Cont.)


## Step Two:

**Country:** Use the **▲/▼** buttons to select the country you are living in and then press the **OK** button to go to the next step. Press the **MENU** button to go to the previous step.



## Step Three:


**Environment:** Use the **▲/▼** buttons to select the environment of your new TV and then press the **OK** button to go to the next step. Press the **MENU** button to go to the previous step.

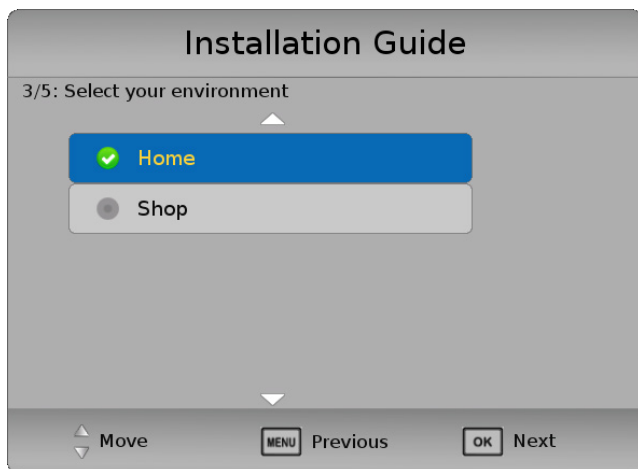

# Getting Started (Cont.)

## Step Four:

**Network:** Select Start and press **OK** to begin the network setup. Press the ► button to select Skip and press **OK** to cancel the network setup and move to the next step. Press the **MENU** button to go to the previous step. You can configure the network settings later via the TV's menu. See page 40 for detailed network setup instructions.

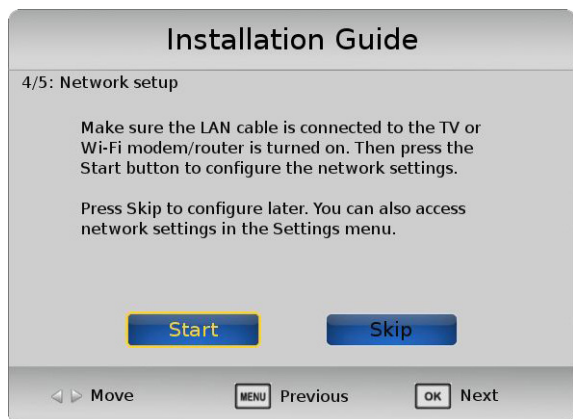

## Step Five:

**Tuner:** Use the ▲/▼ buttons to select the type of scan (DTV+ATV, ATV, DTV ) and then press the **OK** button to go to the next step. Press the **MENU** button to go to the previous step.





# Getting Started (Cont.)

## Step Six:

The settings confirmation page will be displayed on the screen, as illustrated below. Press the **MENU** button to go back to previous steps. Press the **OK** button to begin scanning for TV stations. To exit channel tuning, press the **EXIT** button. When auto searching is complete, your TV will show the first channel found.

Installation Guide	
When you have completed all the options, then press OK button to begin auto tuning.	
OSD Language	English
Country	Australia
Environment	Home
Network Setup	..
Tuner Type	DTV
<input type="button" value="MENU"/> Previous	<input type="button" value="OK"/> Start
<input type="button" value="EXIT"/> Quit	

# Basic Operations

## Selecting an Input Source

- Press the **SOURCE** button at the lower-right side of the back panel, or on the remote control, to display the input source list.
- Press the **▲/▼** buttons to select the desired input source, and then press **OK** to confirm your selection from the following options: DTV, ATV, AV1, AV2, YPbPr, HDMI1, HDMI2, HDMI3, MEDIA.

**NOTE:** When you switch on this TV for the first time, you need to go through the first time installation and auto-search for all the DTV programs in your area.

## Channel Selection

- Press the **CH+/-** button to select the next/previous channel.
- Alternatively, press the number buttons to select a channel directly.

## Volume Control

- Press the **VOL+/-** button to adjust the volume level.
- Press the **MUTE** button to mute the sound, press it again to restore sound.

## Picture and Sound Mode

- Press the **P-MODE** button on the remote control repeatedly to select the picture mode directly (available options: Standard, Movie, User, Eco, Dynamic).
- Press the **S-MODE** button on the remote control repeatedly to select the sound mode directly (available options: Standard, Music, Movie, Sports, User).

## Information Display

- Press the **INFO** button to display information about the current program.

# Basic Operations (Cont.)


## Favourites List

- While viewing a channel, press the **FAV** button on the remote control to enter the Favourites List menu.
- Press the **▲/▼** buttons to select the channel and press **OK** to watch it.
- To add a channel to the Favourites List, go to SMART HUB > select 'Channels' and press **OK** > Select 'Program Edit' and press **OK**. Press the **▲/▼** buttons to select a channel and press the **FAV** button.
- Press the **FAV** button again to remove a favourite channel from the list.



## Quick Select

- While viewing a channel, press the **CH.LIST** button to enter the Channels List directly.
- Press the **▲/▼** buttons to select the channel and press **OK** to watch it.

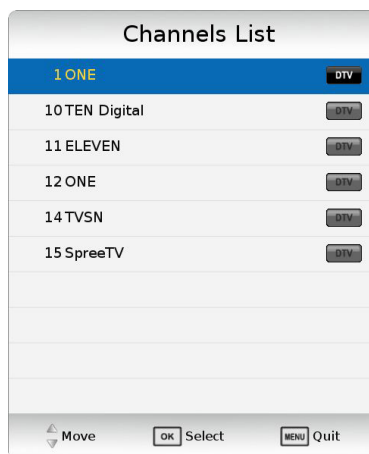

## TV/Radio (for DTV mode only)

- Press the **TV/RADIO** button on the remote control to switch the unit between TV and Radio mode.

## Subtitles

- Press the **SUBTITLE** button on the remote control to enter the subtitle menu.
- NOTE:** The program you are watching must support subtitles.



# Recording

## IMPORTANT!


Before you can record with this TV set (including time-shift recording), you must have inserted a FAT32 formatted USB storage device into the USB port. USB storage devices do not come with TV.

- First, insert your USB memory device into the USB port.

### *When Watching a Program in DTV Mode:*

- Press the **RECORD** button on the remote control to start recording directly. Press the **RECORD** button to minimize the information bar at the bottom of the screen. Press the **RECORD** button again to display information about the current recording.
- Press the **STOP** button to display a dialogue box: select Yes to stop recording, select No to dismiss the dialogue box.

### *To Watch a Recorded Program:*

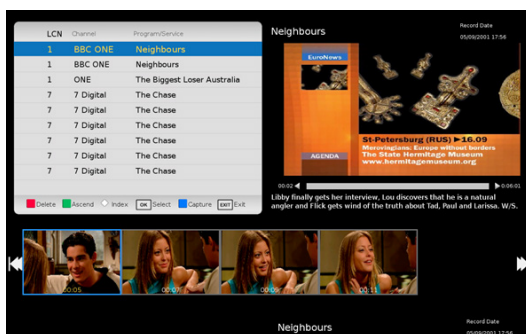

- Press the **INDEX** button on the remote control to display the PVR Settings page. (Alternatively, go to MENU > PVR > RECORDED LIST.)
- Use the **▲/▼** buttons to select a recorded file and press **OK** to start playback in full screen mode.

## Scheduled Recording (in DTV mode only)

See the instructions under EPG on the previous page.

# Recording (Cont.)

## Time-Shift Recording and Playback (in DTV mode only)

### IMPORTANT!

Before you can record with this TV set (including time-shift recording), you must have inserted a FAT32 formatted USB storage device into the USB port.


USB storage devices do not come with TV

The time-shift function allows you to pause the live TV signal, then resume playback at your convenience.

- First, insert your USB memory device into the USB port.

### *When Watching a Program in DTV Mode:*

- Press the **⏸** button on the remote control to initiate time-shift mode and pause the program; the tool bar pictured below will appear on the screen.
- Press the **⏸** button again to resume playback.

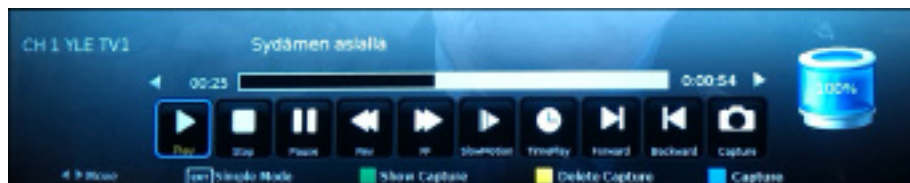

- Use the **◀/▶** buttons, then press **OK** to select a function such as Fast Forward from the on-screen tool bar.
- To stop time-shift, press the **■ STOP** button on the remote control to display a dialogue box, then select Yes to exit time-shift mode and return to live TV signal, or select No to dismiss the dialogue box.

**NOTE:** The USB storage device will not retain recorded data after exiting the time-shift function.

# Recording (Cont.)

## Important Notes

When using the USB/Media function, remember the following important points:

- We strongly recommend you back up all data in the USB storage device to another storage device so you do not risk losing any data in case of an unexpected device failure or accident. We do not assume liability for any loss of data due to misuse or malfunction. Data backup is your personal responsibility.
- You cannot change to another channel or select another function while in recording mode.
- If the signal is interrupted or removed while in recording mode, the recording will stop until the signal is established. This may cause you to lose program content.
- The file recorded can only be used in this TV. Do not copy it to any other device.
- When you are in time-shift recording mode, you may experience some difficulty with a scheduled recording at different times without removing the USB recording device. You will need to remove the USB device as it is required to reset after each recording to protect the device from damage. If you see the message 'DISK NOT READY' displayed, remove the device, reconnect it, and proceed with your recording.
- Some USB storage devices may not be compatible for smooth operation with this TV.
- For large file sizes and large capacity storage devices, the loading speed may be longer. The recognition speed of a USB storage device may vary depending on the device.
- When connecting or disconnecting the USB storage device, ensure the TV is not in USB mode, otherwise the USB device or the files stored in it may be damaged.
- Only use a USB storage device formatted in a FAT32 file system provided with the Windows operating system. If it is formatted by a different utility program that is not supported by Windows, it may not be recognised.
- Ensure any USB devices connected to the TV do not use/exceed a 500mA power rating.
- If an "Unsupported File" message is displayed, the file format or codec is unsupported or corrupted.

# Smart Hub

Press the **SMART HUB** key on the remote control. Here you can run the apps installed and access input sources and menu options. Press the **▲/▼/◀/▶** buttons to select these functions.



## Smart TV Applications

- Web Browser
- YouTube
- Facebook
- Twitter
- Picasa
- AccuWeather
- TerraTV

## Input Source Options

- DTV
- ATV
- AV1
- AV2
- YPbPr
- HDMI 1/2/3
- USB (MEDIA)
- Miracast
- DLNA



# Smart Hub

## Quick Links

1. **Recording:** Access the list of recorded programs (USB hard disk must be connected).
2. **Video:** Access the video player in MEDIA mode.
3. **Photo:** Access the photo player in MEDIA mode.
4. **Music:** Access the music player in MEDIA mode.
5. **Channels List:** Access the channel list.
6. **EPG:** Access the Electronic Program Guide (EPG).
7. **Settings:** Access the TV general settings menu.
8. **Picture:** Access the picture menu settings.
9. **Sound:** Access the sound menu settings.
10. **Channels:** Access the TV channels menu settings.

## Miracast

The Miracast feature enables you to echo the display from a compatible device like a smartphone or tablet on the TV screen by connecting your mobile device directly to the TV wirelessly. In order to use this feature, your device must support Wi-Fi Display technology.

- To start using the Miracast feature, go to SMART HUB and press OK on Miracast.
- Turn on the Wi-Fi on your smartphone or tablet. (Refer to your device's user manual for information on how to turn on Wi-Fi.)
- Your mobile device will display a list of available devices. Choose 'My TV' then click on it to connect. If the mobile device prompts for a password, enter BAUHN.
- Your mobile device will connect to the TV and will display the device screen on the TV.

# Smart Hub

## Hyperlink

The Hyperlink feature allows you to share media files on your DLNA-enabled media PC, smart phone or tablet on the TV.

- In order to use this function, your shared media PC or smart device and the TV must be connected to the same local network. Also your device must have built-in media share capability or have a third-party DLNA/UPnP media server installed.
- To start using the Hyperlink feature, start the DLNA/UPnP media server on your device.
- Start the Hyperlink application on the TV from the SMART HUB page.
- Your TV will automatically connect to the shared media device. To choose a different device, press the **RED** button. A list of available devices will be displayed.
- Select your preferred media device from the list and press **OK**.
- Then select from either Movie, Music or Photo and press **OK** to enter it. You will only see supported media files under each category.
- Select the files you want to play and press the **PLAY** button.

# Smart Hub (Cont.)

## FreeviewPlus

FreeviewPlus is a new service provided by most of the free-to-air broadcast networks to enable you to access Catch Up services on the TV. In order to access FreeviewPlus interactive applications, you are required to have a good broadband connection.

Once you're connected to the internet, press the:

- **GREEN** button on your remote to launch FreeviewPlus.
- **RED** button on your remote to launch broadcast network content and services.

Then follow the on-screen instructions to navigate through the applications.


### NOTE:


- Catch Up TV provided by the Freeview networks may vary by region. Please go to [www.freeview.com.au/freeviewplus/check-services/](http://www.freeview.com.au/freeviewplus/check-services/) to check the availability of services in your area.
- Your home network must have broadband Internet access. Contact your Internet Service Provider (ISP) if you have problems maintaining a fast connection that is reliable.
- Accessing Internet content may incur access or data fees from third parties such as your ISP.
- Since all content is downloaded over the internet, there may be a delay in loading the content.
- If any of your other network connected devices such as computers, gaming consoles and network hard drives are transferring large amounts of data across your network (such as a file transfer, online gaming, or other instances of video streaming), loading times of interactive applications, sound and picture quality may be compromised.

To turn off FreeviewPlus, go to SMART HUB > CHANNELS and set the HbbTV setting to OFF.

## Media Mode

## Media Playback

- First insert a USB memory device into the USB port.
- Press the **SOURCE** button on the back panel, or on the remote control, to switch the unit to MEDIA mode.
- Press the ▲ / ▼ / ◀ / ▶ buttons to move the cursor.
- Press the **EXIT** button to return to the previous menu page.
- Press the  **RED** button to change the device.

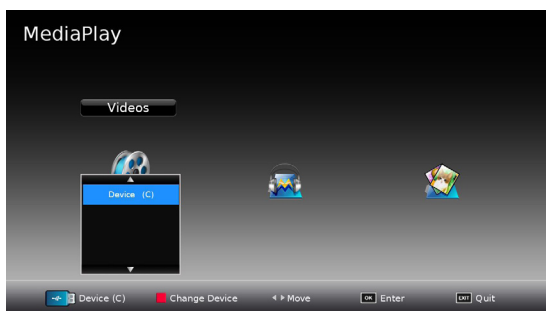


## Photo

- Press the ◀/▶ buttons to select Photo in the main menu, then press **OK** to enter it. Photo files can only be played in this menu category.
- Use the ▲/▼/◀/▶ buttons to select the desired folder or file, then press **OK** to select files and press **Full** button to play files in full screen.

### ***When Playing Photo Files:***


- Press the **MENU** button on the remote control to hide/display the on-screen tool bar.
- Use the **◀ / ▶** keys, then press **OK** to select a function such as Previous, Next, Rotate and Enlarge from the on-screen tool bar.
- Press the **STOP** or **EXIT** buttons to exit playback & go back to file list page.

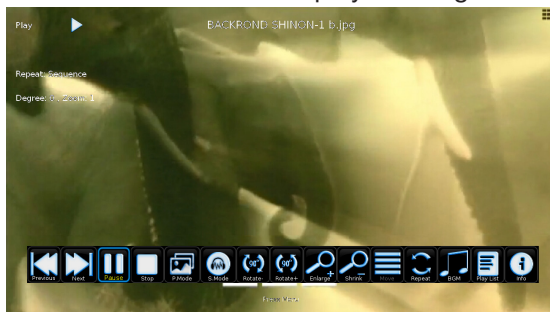

# Media Mode (Cont.)

## Music

- Press the ◀/▶ buttons to select Music in the main menu, then press **OK** to enter it. Music files can only be played in this menu category.
- Use the ▲/▼/◀/▶ buttons to navigate to the desired folder or file, then press **OK** to select and press the ▶ **PLAY** button for playback.

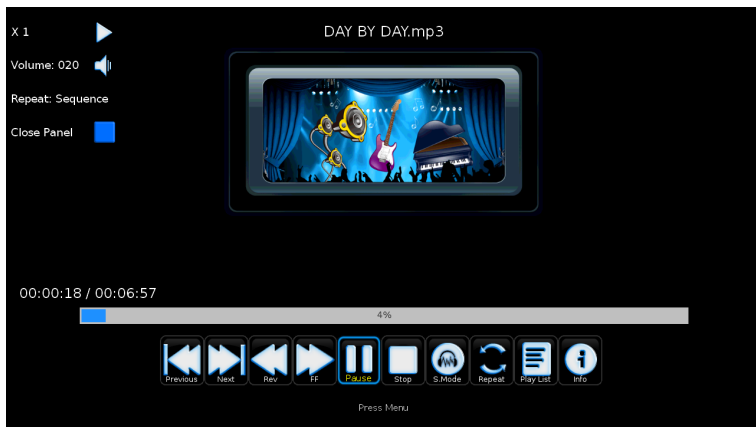

### *When Playing Music Files:*

- Use the ◀/▶ buttons, then press **OK** to select your desired function. The functions available are: Previous, Next, Rewind, Fast Forward, Pause, Stop, S.Mode, Repeat, Playlist and Info.

# Media Mode (Cont.)

## Movie

- Press the ◀/▶ buttons to select Movie in the menu, then press **OK** to enter. Movie files can only be played in this menu category.
- Use the ▲/▼/◀/▶ buttons to navigate to the folder or file, then press **OK** to select and press the ▶ **PLAY** button for playback.



### *When Playing Movie Files:*

- Press the **MENU** button on the remote control to hide/display the tool bar.
- Press the ◀/▶ buttons to select the preferred function, then press **OK** to confirm.

### *Remote Operations when Playing Multimedia Files:*

- Press the ▶|| button to play or pause playing.
- Press the ■ button to stop playing.
- Press the ◀◀ button to move fast backward.
- Press the ▶▶ button to move fast forward.
- Press the ◀◀ button to play the previous file.
- Press the ▶▶ button to play the next file.

**NOTE:** To play your multimedia files, make sure you have selected the correct icon in the main media playback menu.

# Menus


This TV set contains different settings menus where you can program your preferred settings. Once you have programmed any settings, the unit will retain them in its memory until you change them, even when switching the unit to standby mode. This means you can always operate the system under the same conditions.

## Menu Navigation

- Press the **MENU** button on the back panel, or on the remote control, to display the main menu.
- Press the ◀/▶ buttons to select different sub-menus.
- Press **OK** or ► to enter the sub-menu page.
- Press the ▲/▼ buttons to select the preferred option.
- Press the ◀/▶ buttons to adjust the value.
- Press the **MENU** button to return to the previous menu page.
- Press the **EXIT** button to exit the menu page.

# Menus (Cont.)

## Time

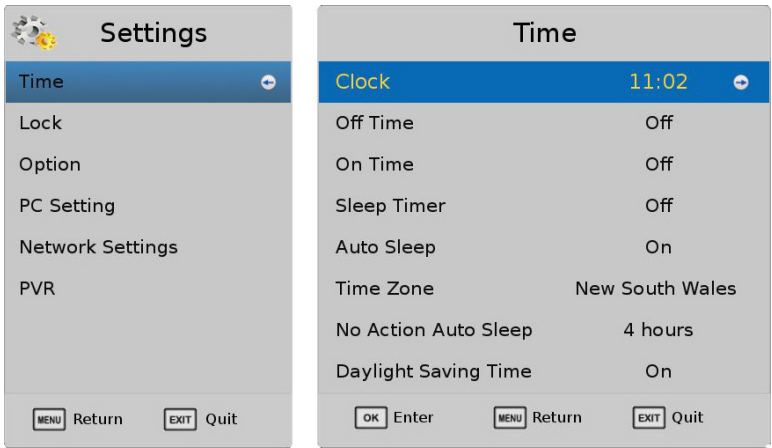

Item	Support Mode	Explanation
<b>Clock</b>	Hour : Min	It shows the current time information.
<b>Off Time</b>	Off > Once > Everyday > Mon-Fri > Mon-Sat > Sat-Sun > Sunday	Set Off time. You can set the Hour and Minute.
<b>On Time</b>	Off > Once > Everyday > Mon-Fri > Mon-Sat > Sat-Sun > Sunday	Set On time. You can set Hour, Minute, Source, Channel, Volume.
<b>Sleep Timer</b>	Off > 10min > 20min > 30min > 60min > 90min > 120min > 180min > 240min	Set the timer in Minutes for when you would like the TV to power off.




## Menus (Cont.)

<b>Auto Sleep</b>	On/Off	TV will go into standby in 10min if there is no signal coming in or no operation. In "PC" mode, auto sleep timer is 1 minute.
<b>Time Zone</b>		Select your time zone.
<b>No Action Auto Sleep</b>	Off > 1hour > 2hour > 3hour	TV will go into Standby if there is no operation.
<b>Daylight Saving Time</b>	On/Off	Option to turn daylight saving time On or Off.

# Menus (Cont.)

## Lock

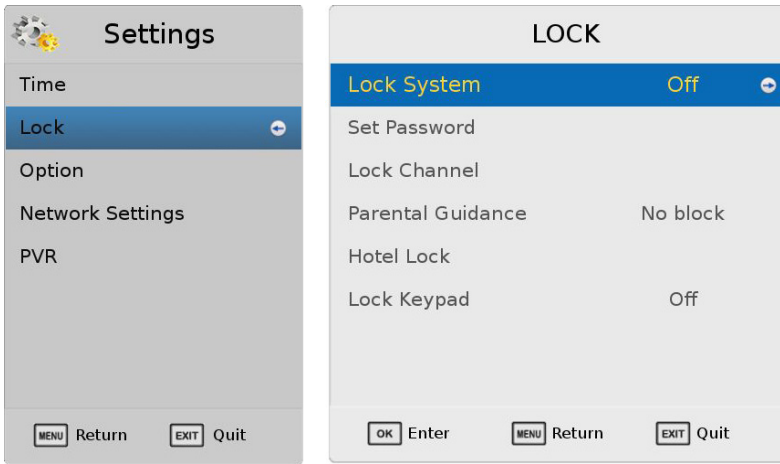



Item	Support Mode	Explanation
Lock System	On/off	A password is required to enter the sub-menu. The password default is 0000.
Set Password		Set personal password.
Lock Channel		Press green (LOCK), then the lock icon will appear on selected channel, and the channel is locked.
Parental Guidance	No block Block G and above Block PG and above Block M and above Block MA and above Block AV and above Block R and above Block all	Set parental guidance.

## Menus (Cont.)

<b>Hotel Lock</b>	Hotel lock	Turn Hotel lock function on/off.
	Lock sources	Turn off the input sources.
	Default sources	Set default the source.
	Max volume	Set maximum the volume level.
	Default volume	Set default the volume level.
	Default channel	Set default channel when the default source is set to DTV.
	Export settings	Export all hotel lock settings to a USB drive.
	Import settings	Import all hotel lock settings from a USB drive.
<b>Lock Keypad</b>		Turn on/off the functionalities of the keypad on rear panel.

# Menus (Cont.)

## Option

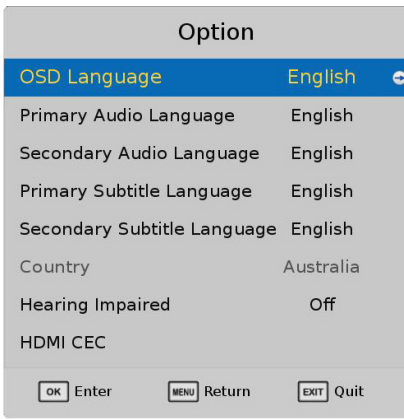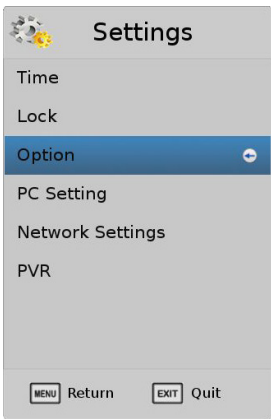


Item	Support Mode	Explanation
OSD Language	English, Spanish, French, Italian, Portuguese, German	Select the On Screen Display (OSD) language.
Primary Audio Language		Select the primary audio language (only available in DTV mode).
Secondary Audio Language		Select the secondary audio language (only available in DTV mode).
Primary Subtitle Language		Select the primary subtitle language (only available in DTV mode and must be supported by viewing program).
Secondary Subtitle Language		Select the primary subtitle language (only available in DTV mode and must be supported by viewing program).

# Menus (Cont.)

<b>Hearing Impaired</b>	On/Off	
<b>HDMI CEC</b>	HDMI CEC / Auto / Off ARC	
<b>Restore to Default</b>		Reset all settings to factory defaults.

## PC Setting

**NOTE:** The PC connectivity option is not available in ATVS65-815.

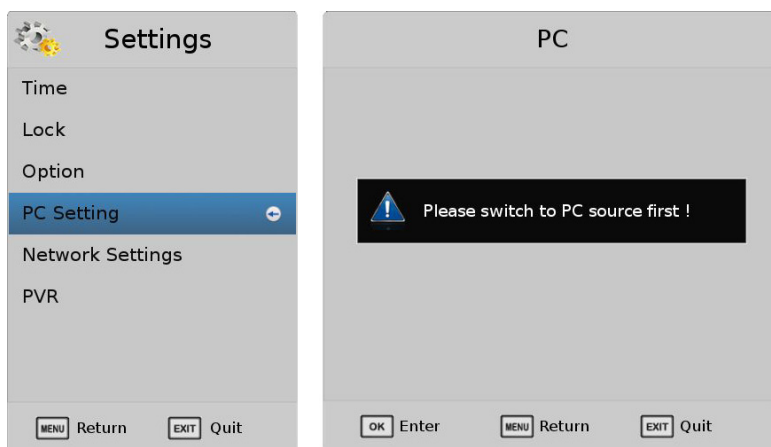

If you are not connected to a PC, the following settings will be inactive. Once you are connected to your PC, the following information above will appear:

Item	Support Mode
<b>Auto Adjust</b>	
<b>Horizontal Pos.</b>	0-100
<b>Vertical Pos.</b>	0-100
<b>Size</b>	0-100
<b>Phase</b>	0-100


# Menus (Cont.)

## Network Settings


For a stable internet connection, it is recommended that you use a wired connection or place the wireless router close to the TV.

### Wired

For a Wired network connection, make sure to connect the TV to your Internet router using an RJ45 Ethernet cable before starting the setup process.

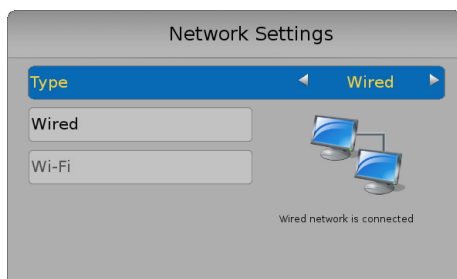

Press the ◀ / ▶ buttons and select “Wired” network type. Then press ▼ to highlight “Wired”, next press **OK** and the below screen will appear.

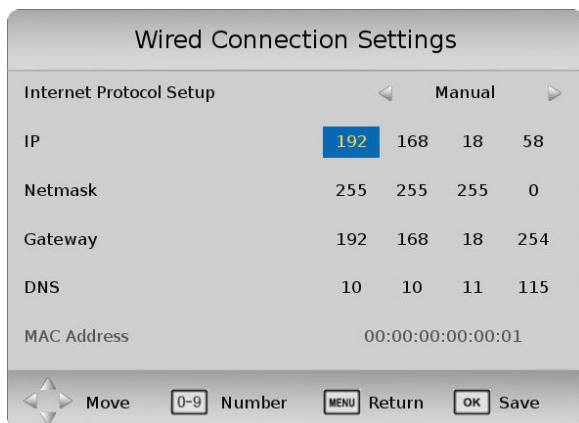

## Menus (Cont.)

Item	Support Mode	Explanation
<b>Internal Protocol Setup</b>	Manual / Auto	Manually set the IP information of the wireless network or automatically acquire IP information of wireless network.
<b>IP</b>	xxx.xxx.xxx.xxx	Under “Manual” setup enter the IP address using the numerical keypad.
<b>Netmask</b>	xxx.xxx.xxx.xxx	Under “Manual” setup, enter the Netmask address using the numerical Keypad.
<b>Gateway</b>	xxx.xxx.xxx.xxx	Under “Manual” setup enter the Gateway address using the numerical keypad.
<b>DNS</b>	xxx.xxx.xxx.xxx	Under “Manual” Setup enter the DNS address using the numerical keypad.
<b>MAC Address</b>	----	MAC address of the TV.


Press **OK** to save the settings. If the connection is successful, the ‘Wired network is connected’ message will appear. Press the **EXIT** button to exit the menu.

If the connection is unsuccessful, the ‘Wired network is not connected’ message will appear. Check the accuracy of information you have entered and try again.


# Menus (Cont.)

## Wi-Fi

For 'Wi-Fi Network Connection', make sure to place your Wi-Fi router close to the TV.

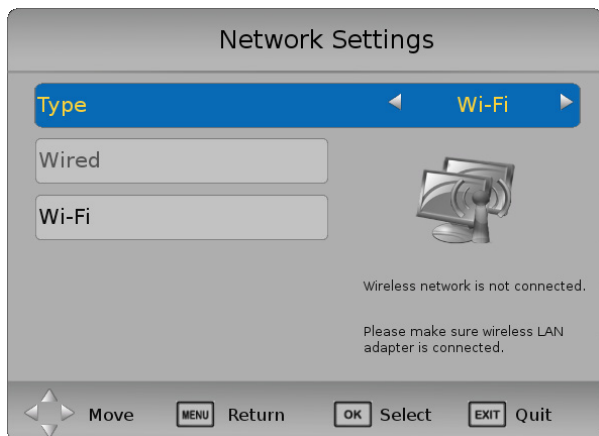


 

Press the ◀/▶ buttons and select 'Wi-Fi' network type. Then press ▼ to highlight 'Wi-Fi'. Press **OK** and below screen will appear.

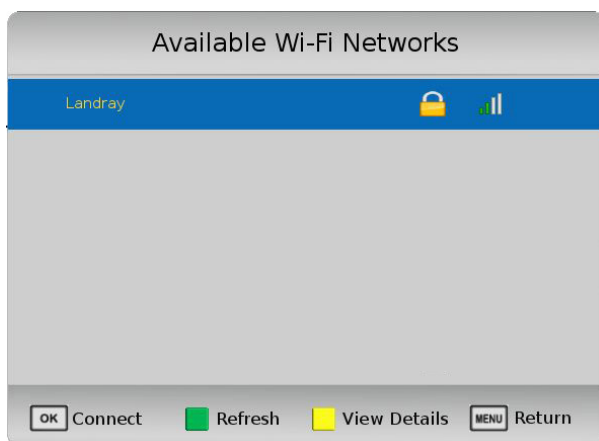





## Menus (Cont.)

The TV will automatically begin searching for nearby Wi-Fi Access Points (WAP). This may take up to 2 minutes. If your WAP doesn't appear, move your Wi-Fi router closer to the TV and press the  **GREEN** button to search again.

Select the WAP you wish to use by pressing the  buttons. To view detailed information, press the  **YELLOW** button.

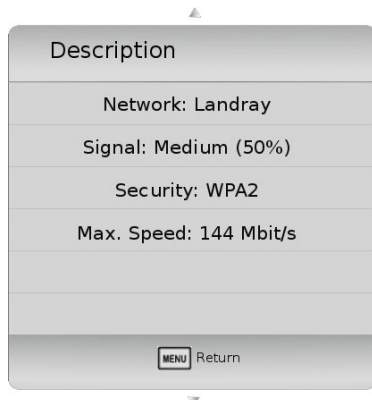


After selecting the WAP, press **OK**. If the WAP has a security password, enter the password using the on-screen keypad, and then press **CONNECT**.

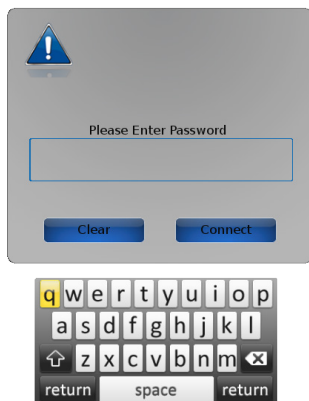


## Menus (Cont.)


If the connection is successful, the 'Connected to Internet!' message will appear. Press **OK** to exit.

If the connection is unsuccessful, click the security password of your WAP and its security protocol settings and try again.

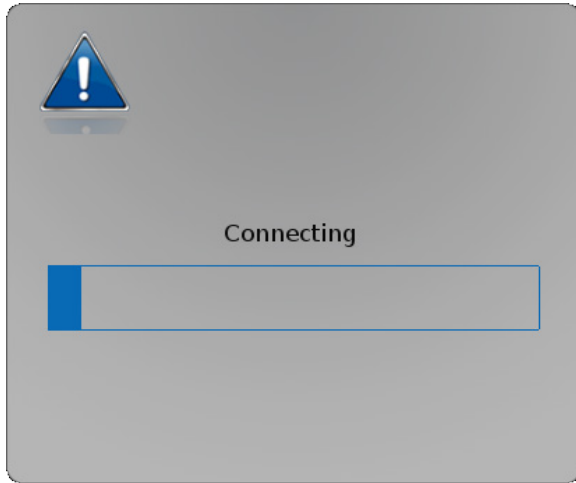

# Menus (Cont.)

For advanced ‘Wi-Fi Network’ settings, navigate to MENU > NETWORK SETTINGS > Wi-Fi > SELECT YOUR WAP (you must be successfully connected), and press the  BLUE button. The following screen will appear.

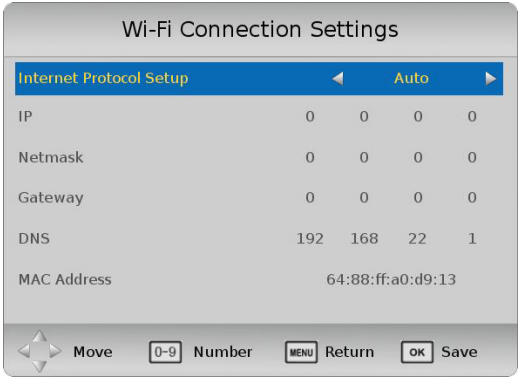


Item	Support Mode	Explanation
Internal Protocol Setup	Manual / Auto	Manually set the IP information of the wireless network or automatically acquire IP information of wireless network.
IP	xxx.xxx.xxx.xxx	Under “Manual” setup enter the IP address using the numerical keypad.
Netmask	xxx.xxx.xxx.xxx	Under “Manual” setup, enter the Netmask address using the numerical Keypad.
Getaway	xxx.xxx.xxx.xxx	Under “Manual” setup enter the Gateway address using the numerical keypad.
DNS	xxx.xxx.xxx.xxx	Under “Manual” Setup enter the DNS address using the numerical keypad.
MAC Address	----	MAC address of the TV.

- Press **OK** to save the settings. Enter the WAP password correctly using the on-screen keypad and press connect. Press **OK** to exit.

# Menus (Cont.)

## PVR Menu Settings

- **Recorded List:** Shows the list of recorded programs (you can also use the INDEX key on the remote to access this page).

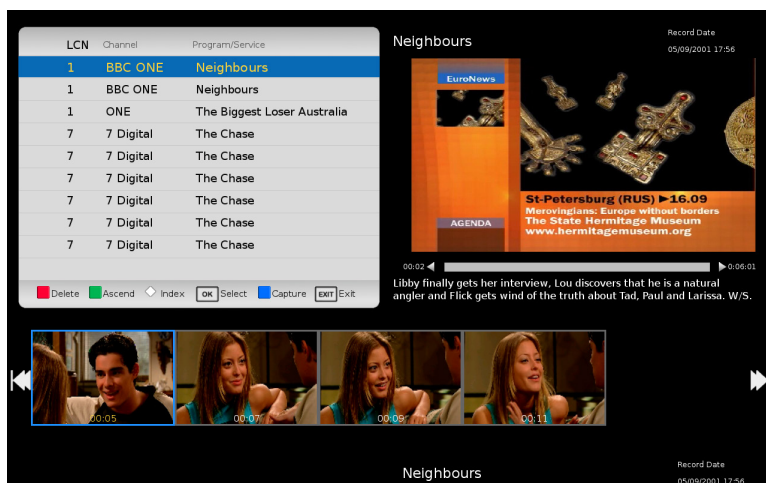

- **Record:** Schedule a program to be recorded.

### Recorder

Channel

1 BBC ONE

Repeat

Once

Start Time

Date	Time
5 - 09	18 : 1

End Time

Date	Time
5 - 09	18 : 0

OK
Cancel


Move
Return
OK Enter

# Menus (Cont.)


- **Reminder:** Schedule a reminder to watch your favourite programs.
- **Schedule List:** Shows the list of programs scheduled to be recorded.

Schedule List		17:58	05 09		
Mode	Time	Date	Programme Title	Channel Name	
📺	18:59	Wed. 05. 09. 2001		BBC ONE	
⬅️ Move		🔴 Delete	🟡 Return	EXIT Quit	

## • PVR File System

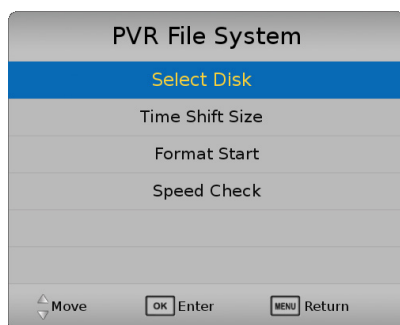

## Select Disk

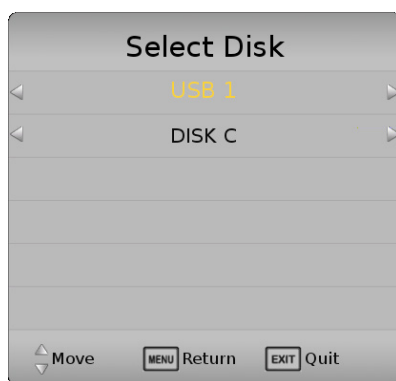

If you have multiple partitions on your disk, select the partition you wish to use.


# Menus (Cont.)

- **Time Shift Size**



Press the ◀/▶ buttons and change the size of the time-shift buffer.

- **Format Start**

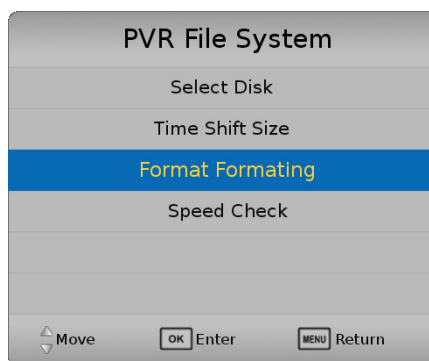

Press **OK** and confirm to format your USB drive.

- **Speed Check**

Press **OK** to check the speed of the USB drive.

# Menus (Cont.)


## Channel Menu Settings

To access the Channel menu, navigate to SMART HUB > CHANNEL. From this menu you can access the following options: Auto Tuning, DTV Channel Tuning, ATV Channel Tuning, TV Guide, Program Edit, Signal Information and Software Update (USB).



## Auto Tuning


Press **OK** to enter. Then select your Country, Tuner Type, Logical Channel Number (LCN default is on) and press **OK** to start scanning.

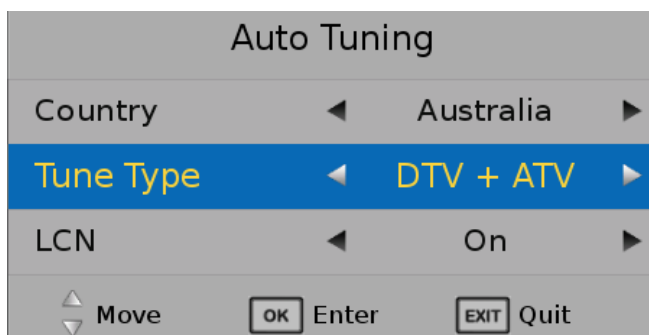

# Menus (Cont.)

## DTV Channel Tuning

Press **OK** to enter. Press the **◀/▶** buttons to select the channel. Press **OK** to start scanning.

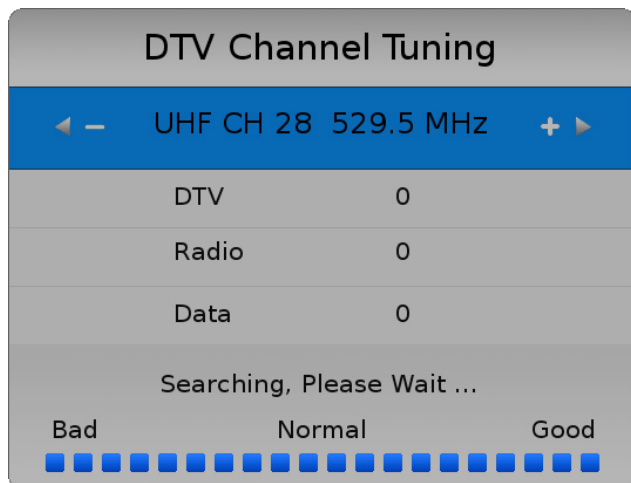




# Menus (Cont.)

## Program Edit

Press **OK** to enter.

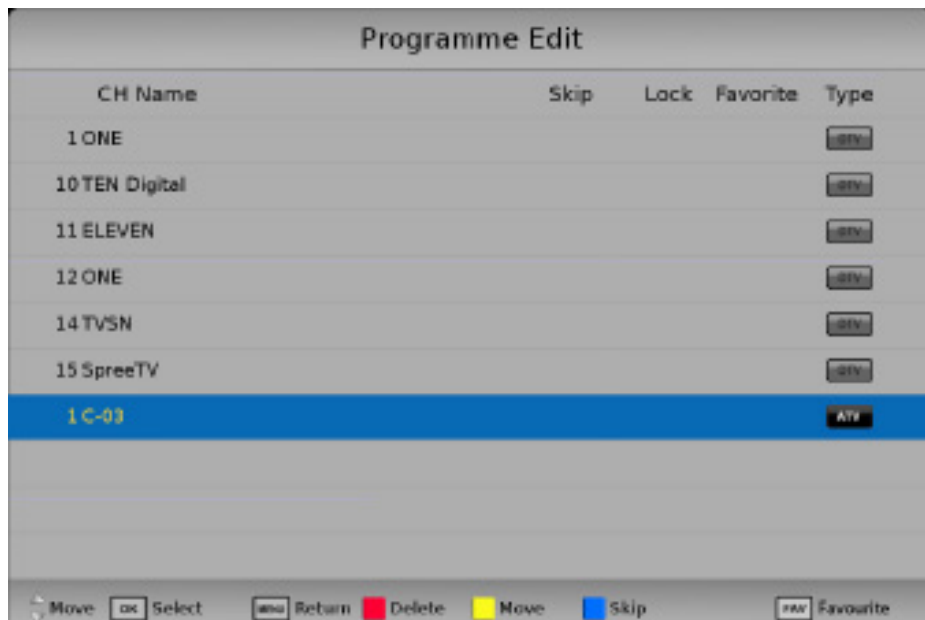

- Press the **RED** button to delete a channel from the channel list and EPG.
- Press the **BLUE** button to skip a channel when using **CH+/-** buttons.
- Press the **FAV** button to add a channel to your Favourites List; press the button again to remove from the Favourites List.

## HbbTV


- Turn ON/OFF HbbTV.

**Note:** If you do not wish to view Freeview Plus interactive applications, turn off HbbTV.

# Menus (Cont.)

## Signal Information

This item is used to display signal details such as Channel Number, Frequency, Quality and Strength.

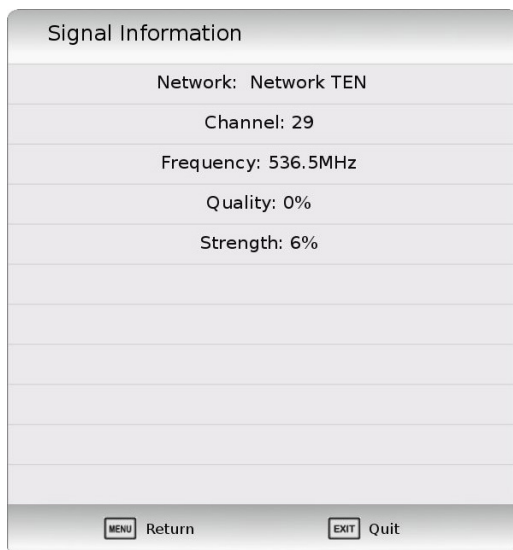

## Software Update (USB)

- This item is used to update software through a USB memory device.
- Visit the following web page to check for software updates that keep your TV up-to-date:


<http://www.tempoaustralia.com/sw/ATVS65-315/update.html>

# Menus (Cont.)

## Settings

### Picture Menu Settings

To access the Picture menu, navigate to SMART HUB > PICTURE.

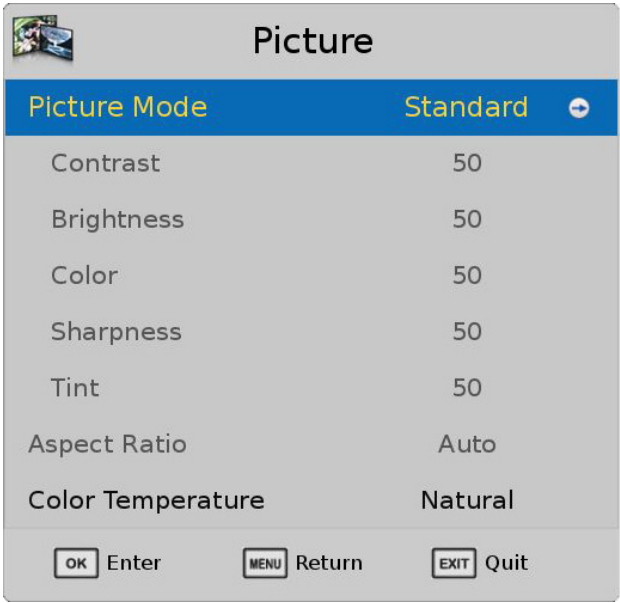


Item	Support Mode	Explanation
Picture Mode	Auto > 4:3 > 16:9 > Zoom 1 > Wide Zoom > Panorama	Picture mode selection. When “user setting” is selected, Contrast, Brightness, Colour and Sharpness settings can be adjusted.
Aspect Ratio	Natural > Warm > Cool	Colour Temperature selection.
Noise Reduction	Off > Low > Middle > High	Picture noise reduction settings.

# Menus (Cont.)

## Sound

To access the Sound menu, go to SMART HUB > SOUND.

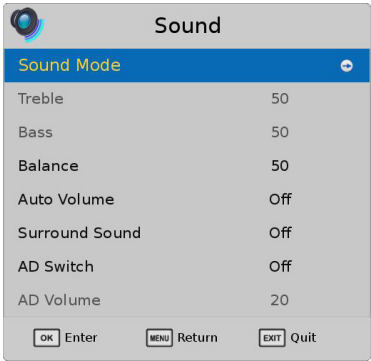

Item	Support Mode	Explanation
Sound Mode	Standard > Music > Movie > Sports > User	When “User” setting is selected, you can adjust the EQ settings as well as the Treble and Bass settings.
Balance	(-)50 - (+)50	Adjust the audio output between left and right speakers.
Auto Volume	On/Off	Auto volume On/Off.
Surround Sound	On/Off	Turn Surround Sound simulation On/ Off.
AD Switch (Audio Description)	On/Off	Audio Description for visual presentation works only with programs that contain related narration information (for people with vision impairments).
AD Volume	0-100	Only when AD switch is set ON, can it be adjusted.
S/PDIF Mode	PCM/Auto	Select the digital audio output type.
Audio Language		Displays the audio codec information for the current program.

# FAQs

If you experience any problems with your TV, check the list below and take any necessary steps before calling for service. If none of the solutions help you solve the problem, turn the power off and contact the after sales support line for advice.

## General Problems with the TV Set

Problem	Solution
No power.	Insert the power plug securely into the power outlet and ensure the power outlet is switched on.
No picture.	Ensure that the equipment is connected properly. <ul style="list-style-type: none"><li>•Adjust the antenna or use an external antenna.</li><li>•Relocate the unit near a window (if inside a building).</li><li>•Move the TV set away from any product that causes interference.</li><li>•Auto-tune the unit again.</li><li>•Try another channel.</li></ul>
No sound or distorted sound.	<ul style="list-style-type: none"><li>•Ensure that the equipment is connected properly.</li><li>•Ensure that the input setting for the TV is correct.</li><li>•Ensure the audio settings are properly set.</li><li>•Ensure the volume is not muted. If it is, press the MUTE button to restore the sound.</li><li>•If earphones are connected, unplug them.</li><li>•Adjust the volume to a suitable level by pressing the VOL+/VOL- button.</li></ul>
No operations can be performed with the remote control unit.	<ul style="list-style-type: none"><li>•Check the batteries are correctly installed.</li><li>•The batteries may be exhausted: replace them.</li><li>•Make sure to point the remote control at the remote control sensor and try it again.</li><li>•Make sure to use the remote control at a distance of no more than 6m from the sensor.</li><li>•Remove any obstacles between the remote control and remote control sensor.</li></ul>
No key operation (by the main unit and/or the remote control) is effective.	Disconnect the power plug and then reconnect it. (The unit may not be operating properly due to lightning, static electricity or some other factors.)

## FAQs (Cont.)

Noise or other interface	Electronic equipment near the unit is causing interface. Relocate the unit or move the equipment.
--------------------------	---

### Problems Relating to the USB Device

Problem	Solution
My TV does not recognise my USB device or my external hard disk.	<p>Please refer first to the instructions describing how to use USB devices with this unit.</p> <p>If the problem still occurs, your device may not be compatible. This machine has been tested with the majority of Flash memory-based devices and hard disks (Music/Movie players with HDD) on the market; however, it may not be compatible with certain devices, in particular external self-powered hard disks.</p>

# Specifications

<b>Screen Size</b>	65" (164cm) 4K Ultra High Definition LED LCD Smart TV	
<b>Resolution</b>	3840 x 2160	
<b>Panels Native Refresh Rate</b>	120Hz	
<b>Luminance</b>	270 cd/m2	
<b>Contrast Ratio</b>	4000:1	
<b>Viewing Angle</b>	H:176 / V:176	
<b>Aspect Ratio</b>	16:9	
<b>Audio Output Power</b>	2 × 10W	
<b>HDMI Version</b>	2.0	
<b>USB Multimedia Playback Format</b>	<b>Movie</b>	AVI, MPEG, MPEG-4, TS, MKV, RMVB
	<b>Music</b>	MP3, WAV, AAC
	<b>Photo</b>	JPG/JPEG
	<b>Text</b>	TXT
<b>USB Disk Size</b>	Maximum 1TB	
<b>USB File Format</b>	FAT32	
<b>Power Input</b>	AC 100-240V, 50/60Hz	
<b>Power Consumption</b>	<230W	
<b>Standby Power Consumption</b>	<0.5W	
<b>Dimensions</b>	With stand: 1459 × 310 × 894 mm (w x d x h)	
	Without stand: 1459 × 74 × 839 mm (w x d x h)	
<b>Weight</b>	With stand: 23.5 kg	
	Without stand: 23.07 kg	



## 65" 4K Ultra High Definition LED LCD Smart TV

# Repair and Refurbished Goods or Parts Notice

---

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. **We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

**Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.**

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 886 649 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252  
PO BOX 6056 Frenchs Forest, Sydney, Australia NSW 2086  
Tempo Help Desk: 1300 886 649 (Aust)  
(Operating Hours: Mon-Fri 08:30AM to 06:00PM EST)  
Email: [info@tempo.org](mailto:info@tempo.org)

---

#### AFTER SALES SUPPORT

1300 886 649

[www.tempo.org](http://www.tempo.org)

Model: ATVS65-815 Product Code: 51718 09/2015





This page has been left blank intentionally.

This page has been left blank intentionally.



## Software Updates

Visit the following web page to check for softwares updates to keep your TV up-to-date.

<http://www.tempoaustralia.com/sw/ATVS65-815/update.html>

## Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

## Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on 1300 886 649 before returning it to the store for a refund.