 


Stroller

Assembly Instructions

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE USE. YOUR CHILD'S SAFETY MAY BE AFFECTED IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.

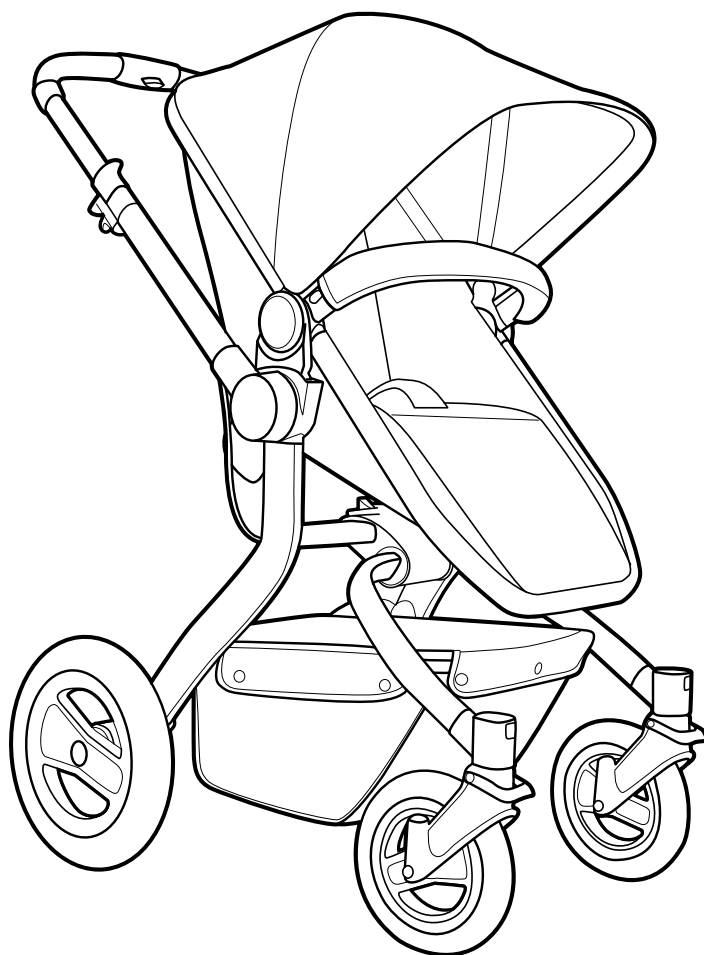

Service Phone: 02 4728 8090

For model(s)
WG101, WG102



WARNING

- This stroller is to be used for one child only.
- It is suitable for children from birth to approximately 36 months old (up to a weight of no more than 17kg).
- Do not leave the harness buckled when not fitted to a child in the stroller because the harness can form loops which could be a strangulation hazard.
- Regularly inspect, maintain and clean the stroller to ensure it stays in good condition. Eg check that the harness straps are not frayed, all buckle and locking devices work correctly, etc.
- Only use parts and accessories approved by the manufacturer.
- We do not recommend that this stroller is used on stairs or escalators. If it is used on stairs or escalators then we recommend that the child is removed and carried separately
- DO NOT use near an open fire, exposed flame or excessive heat source that may damage the stroller or injure the child.
- The brakes must always be applied when the stroller is not moving or being used.
- This stroller is not suitable for running or jogging with.
- Ensure all locking devices are engaged correctly before use.
- Do not overload the basket (max 4.5kg)
- Do not allow your child to climb unassisted into or stand on the stroller.
- This stroller is designed for use on flat or gently sloping surfaces and may be unstable or tip over on steep sloping and uneven surfaces.
- All folding mechanisms have a risk of finger traps. Please take care not to leave fingers or parts of the body between moving parts when folding and unfolding this stroller.
- Take care when carrying or lifting this stroller, do not carry it by the fold release handle.
- When not in use, store in a safe place where it will not be damaged by exposure to a wet/damp environment, excessive heat source, etc. Also do not store heavy items on top of the stroller that may damage it in any way.



WARNING

TO AVOID INJURY OR DEATH:

- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.
- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.



WARNING

Do not use as a carry cot.



WARNING

Stroller can not be used in position below.



WARNING

Use the tether wrist strap to prevent the stroller rolling away.

A tether wrist strap is provided on the handlebar. Slide your hand through the tether wrist strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.



Index

Parts List	2
Carton Contents	3
Assembly	
- Frame	4
- Wheels	4
- Seat Unit	5
- Hood	6
- Hood (Disassembly)	7
- Seat Attachment	7
- Handrail	7
- Harness	8
- Harness Detachment	8
Usage	
- Seat to Sleeping Cot Conversion	9
- Handrail Function	10
- Harness	11
- Wheel Function	12
- Brakes	13
- Handlebar Function	13
- Seat Reclining Adjustment	14
- Reversible Seat	14
- Folding	15
Optional Accessories	
- Rain Cover	17
- Mosquito Net	17
- Foot Cover	18
- Travel System	18
Care and Maintenance	19

❗ Drawings in this manual are for illustration purposes only; actual product may vary. The manufacturer reserves the right to change any specification or features without prior notice.

Parts List

(A) Adjustable Handle
Button

(B) Handle button

(C) Seat Height
Adjuster

(D) Handle Reversible
Adjustor

(E) Brake Controller

(F) Seat Supporting
Base

(G) 2nd Stroller
Folding Button

(H) Stroller-folding
Handle

(I) Rear Wheel

(J) Hood

(K) Front Handrail

(L) Front Handrail
Button

(M) Footrest Leg

(N) Front Wheel
Housing

(O) Front Wheel
Quick-Release
Button

(P) Front Wheel
Rotating Lever

(Q) Front Wheel

(R) Basket

(S) Stroller Strap

(T) Cot Adjuster Dial

(U) Cot Conversion Bar



Carton Contents



Rear wheels x 2



Front wheels x 2



 
Handrail x 1



Stroller Frame x 1



Seat Unit x 1

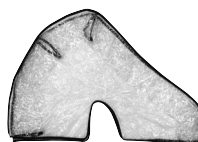

*Rain Cover x 1**



Basket x 1



*Foot Cover x 1**



 
*Mosquito Net x 1**
Optional Accessory

Please check all parts are included in the carton; if there are any missing parts, please contact the **InfSecure Service Department** on 02 4728 8090.

** supplied with some models*


Assembly

Frame

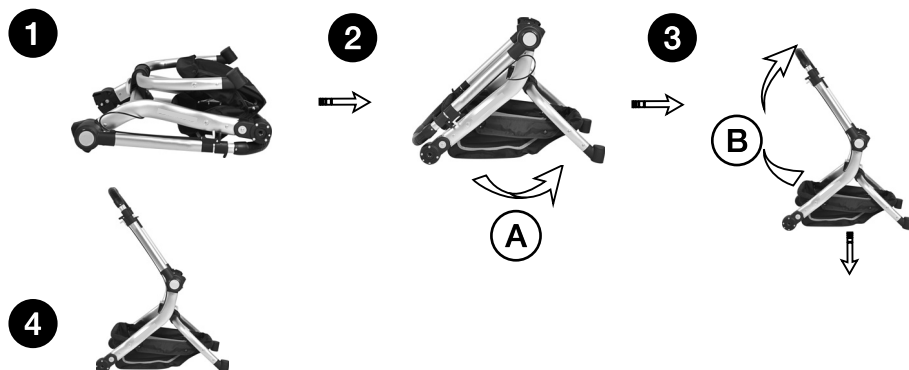

Open the front legs in the direction of the arrow **(A)**. The frame is fully opened when you hear a “click”. Lift up the handle as indicated **(B)**.

Wheels

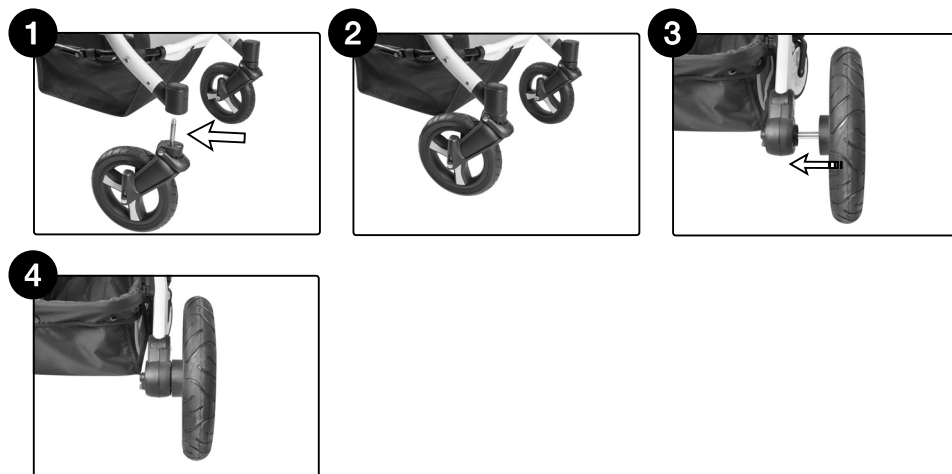


Step 1. Assemble the front wheels then fix the wheel axles into leg housings as shown in ❶ and ❷. It is fixed when you hear a “click”.

Step 2. Assemble rear wheels and fix the rear wheel axles into the rear wheel housings as shown in ❸ and ❹, it is fixed when you hear a “click”.

❶ **Try to move and rotate all the wheels by hand to ensure all the wheels are firmly fixed on wheel housing before use.**

Seat Unit

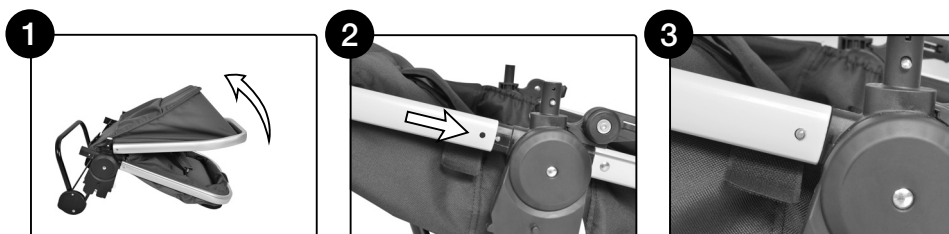

Footrest Assembly


Step 1. Unfold the seat unit as indicated ❶. Plug the footrest leg into the base ❷. It is fixed when you hear a “click” ❸.



Seat Bottom Assembly

Fasten the hook-and-loop strips over the tube as shown ❹, then attach the harness anchors to the tube under the seat ❺, ❻. The seat unit is now completely assembled.

Hood

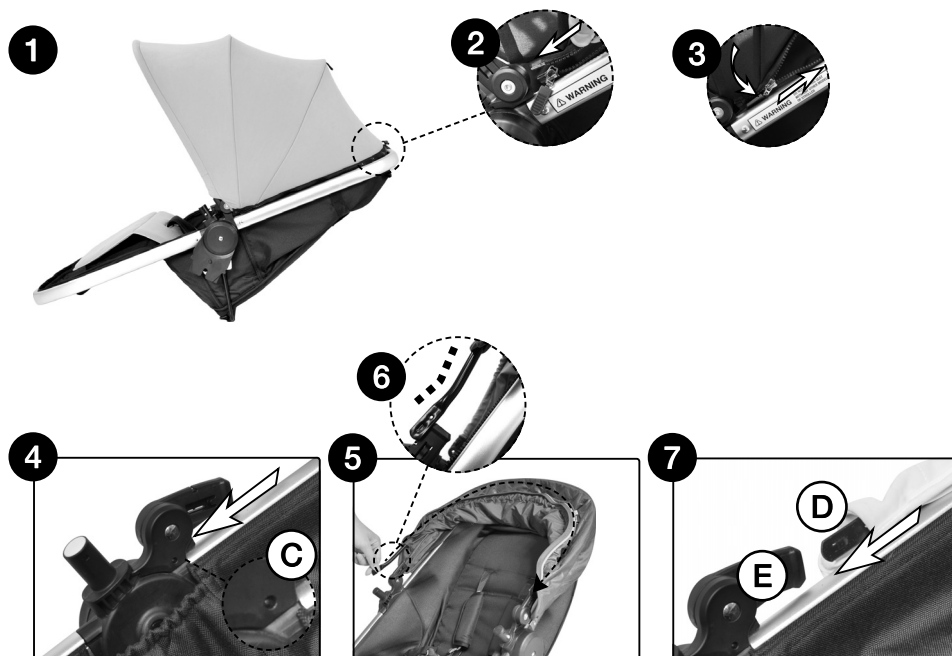


Hood Assembly

Step 1. Connect the two zipper sections together.

Step 2. Pull zip to fix hood onto seat unit.

Step 3. Insert hood frame into the opening of the hood and pull through ⑤, ensuring the small bend on the frame near the attachment point ⑥ is angled away from the seat unit. Then attach the frame at point ⑦ to slot ⑧. The hood is now securely assembled.

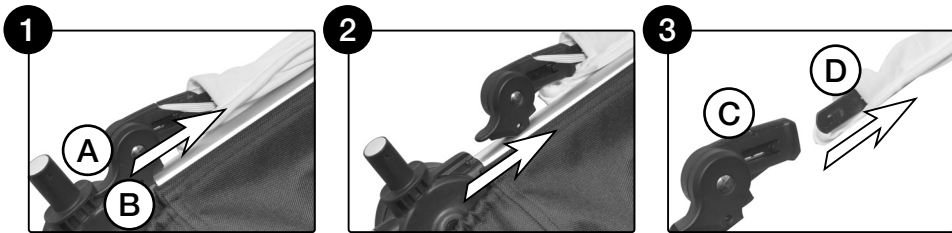


Hood Disassembly

Step 1. Push on the plastic at point (A) in the direction of the arrow to unclip and detach from slot (B), 1 2.

Step 2. Pull on the hood connector 2 and it will easily slide free.

Step 3. Unlatch the elastic band from the connector (C), and detach the metal bar (D); the canopy can now be completely removed 3.


Seat Attachment

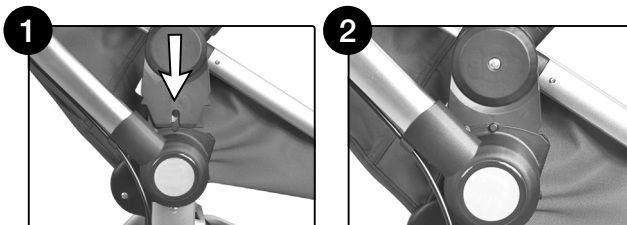

Slot the seat's connector to the attachment point on the frame until you hear a "click" for both sides. The seat is now fixed in the stroller 1, 2.


❗ Pull up on each side of the seat unit to ensure it is firmly fixed.

Handrail

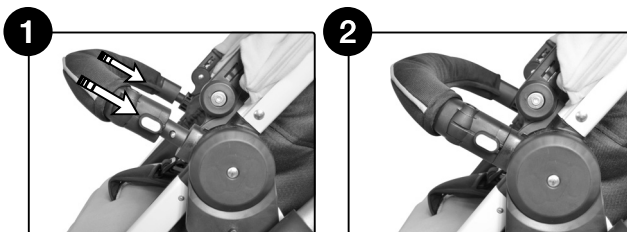

Press the buttons on both sides of the hand rail and pull to release 1, 2.

Harness

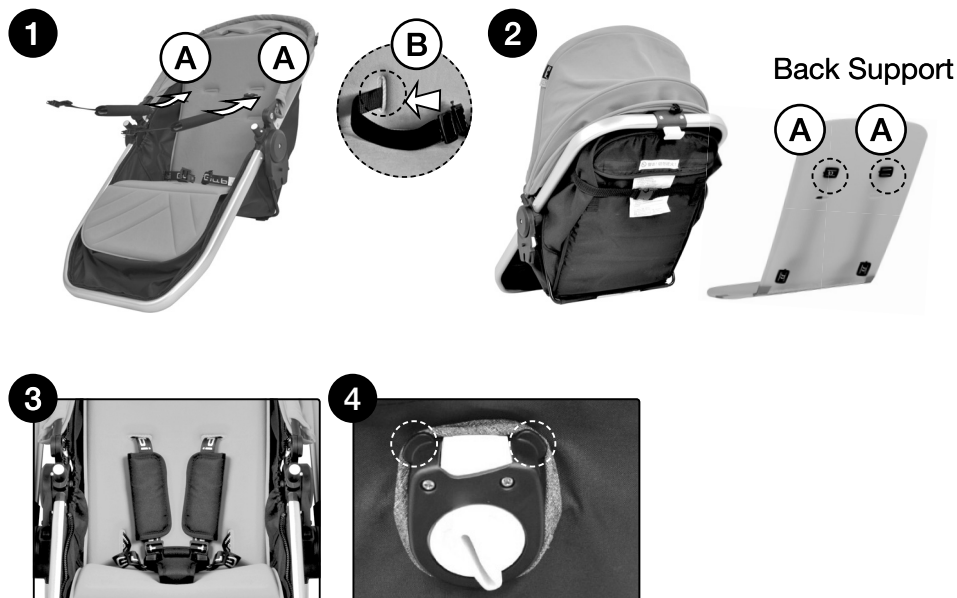

Harness Attachment


Step 1. Pass the shoulder harness anchor (A) through the slots located on the seat pad back support inside the seat back cover. Always make sure they are firmly attached before using 1, 2.

For WG102 models, the back cover can pull away from the backrest adjuster 4 this allows easy access to the shoulder slots when fitting the harness (and for adjusting shoulder height positions).

NOTE: The crotch strap and waist straps can not be removed 3.


Usage

Seat-To-Sleeping Cot Conversion (method 1)

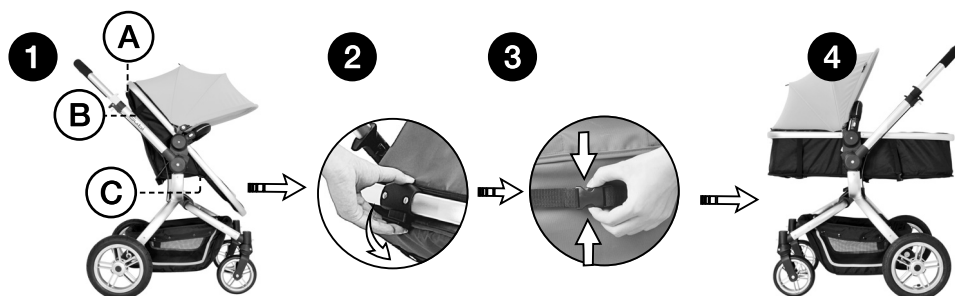


Press the adjust button (A), then adjust the seat into the horizontal position ① ②. Unlock the belt buckles (B) & (C), ③. The seat is now in the bassinet mode ④.

Seat-To-Sleeping Cot Conversion (method 2)

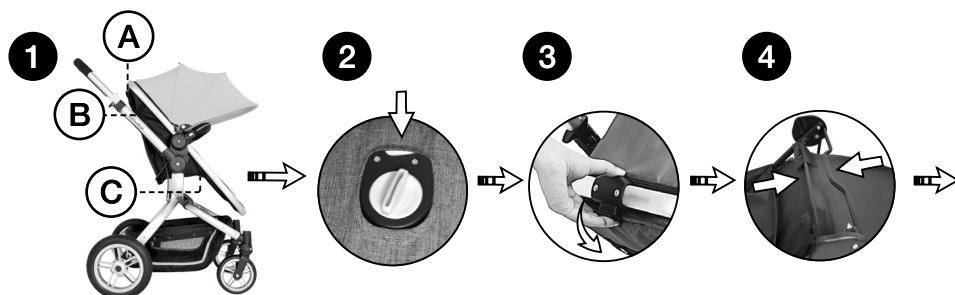

Press the button on Cot Adjustment Dial (A) to release ②, then adjust the seat into the horizontal position ③. Squeeze the two bars together ④ to release footrest.


❗ Ensure the Cot Adjustment Dial is fully turned before Cot conversion.

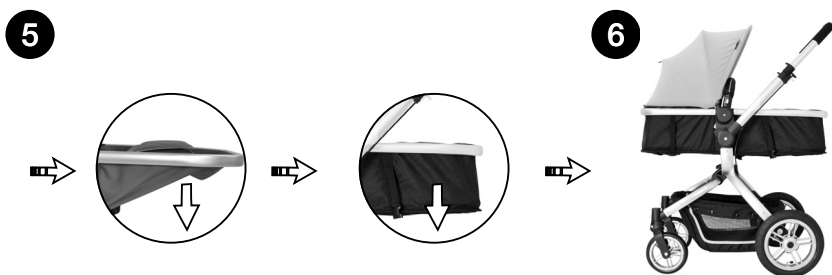

the footrest will drop **5**. The seat is now in the bassinet mode **6**.

❗ To ensure your baby's safety, we recommend that you keep the bassinet faced towards you when in use.

Handrail Function

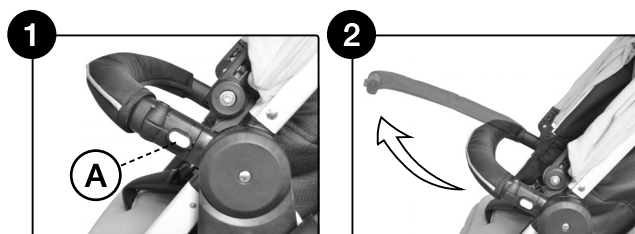

Easy Access

Press one of the handrail buttons **(A)** to release it and flip the handrail out to one side **2**. This will allow easy access to the seat.

Press the button **(A)** on the opposite side and the handrail can either be removed or will swivel down out of the way for easy access.




WARNING

DO NOT USE THIS BASSINET ONCE THE CHILD CAN SIT UP UNAIDED. Maximum weight of child; 9kgs. For use with models: WG101 & WG102.

DO NOT USE THIS SEAT WITH ANY OTHER MODELS OF PRAMS/ STROLLER. Maximum weight of child; 17kgs. For use with models: WG101 & WG102.

Harness

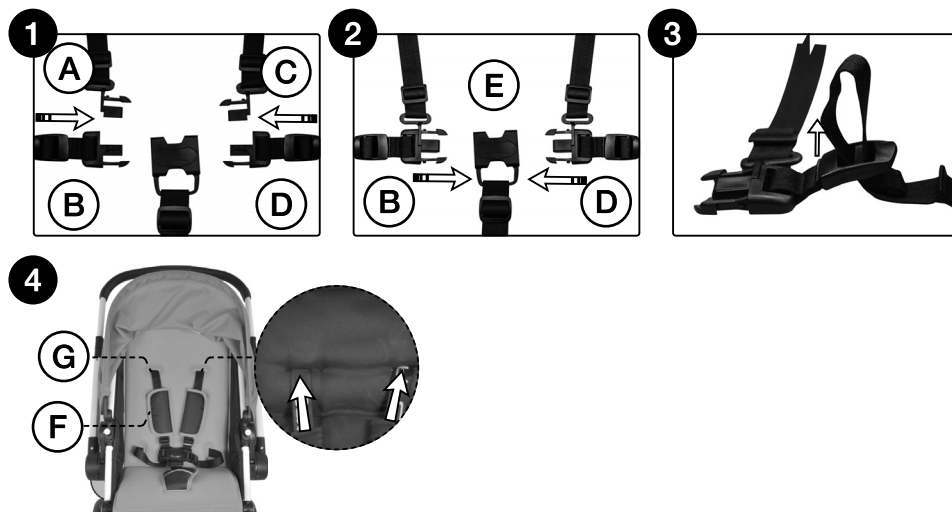

Attaching the Buckles

Attach the buckles onto the shoulder straps ❶, then onto the buckles of the waist straps (A to B) and (C to D) then attach these to the central buckle (E) until you hear a “click” ❷.

Releasing the Buckles

Press down on the central button to release the straps.


Adjusting the Harness

Adjust the shoulder and waist straps for a firm and comfortable fit by using the adjuster ❸.

The height of the shoulder straps are adjustable to two positions ❹. The lowest position (F) is for under 6 months, and position (G) is for between 6 months and 36 months. Adjust the height by pulling the buckles out of the seat and attaching them to the other position.

❗ Always use the safety harness when the child is in the stroller.

Wheel Function

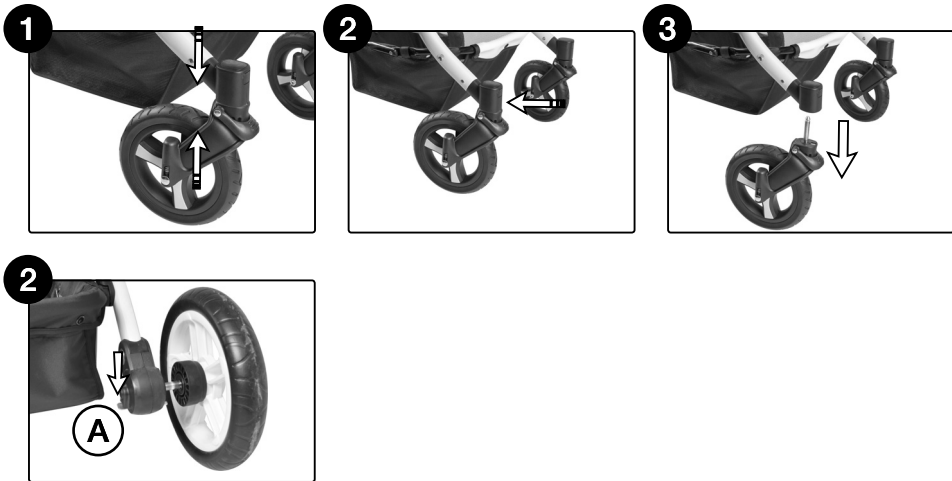

Front Wheel Lock

Pull the front wheel locking lever upward **1** until you hear a “click”.


Front Wheel Removal

Press down the front wheel quick-release button and the wheel will release **2**, **3**.

Rear Wheels Removal

Press the quick release button **(A)**, then pull out the wheels.

Brakes

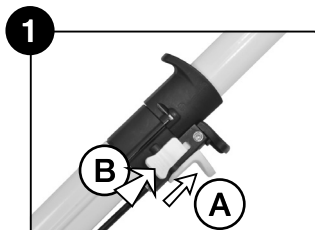




Apply the Rear Wheel Brake

Pull up on the red brake lever (A) to apply the brakes.

Release the Rear Wheel Brake

Press down the second lock (B) to release the brakes.

Handle Bar Function

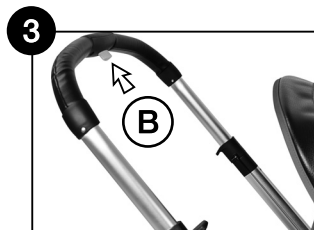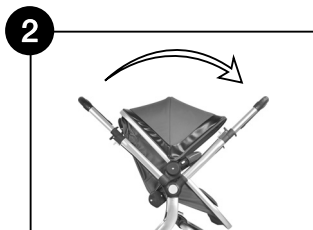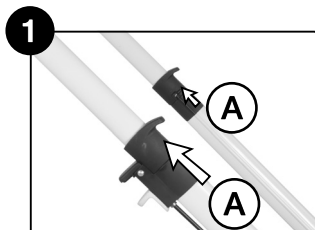


Reversing The Handle

Pull up on the two reversing levers (A) while pushing the handle bar to the opposite side. Listen for a “click” as the handle bar securely locks into place.

Height Adjustment

Press the one-handed button on the handle bar (B) and pull up or push down on the handle bar to quickly adjust its height. The handle will click into the height slots.


Seat Reclining Adjustment

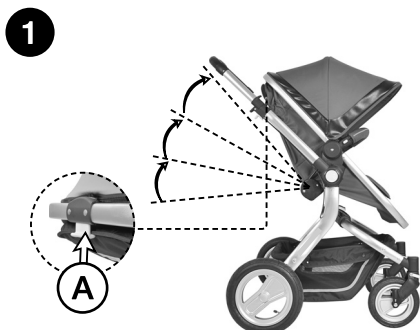

Press the recline adjustment button (A) and push down or pull up on the seat to adjust to the desired position 1.

❗ Ensure that the seat has locked into position correctly before putting your child into the seat.


Reversible Seat

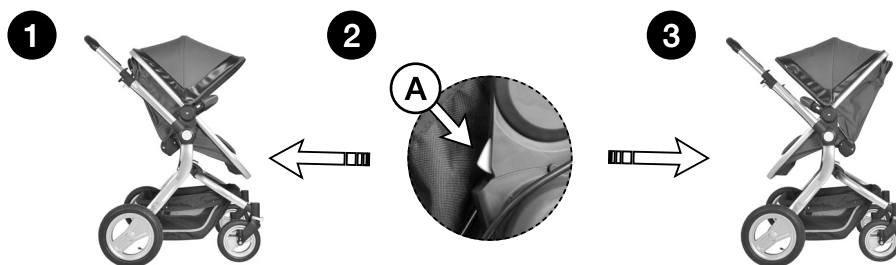

Simultaneously press the safety release buttons (A) on either sides of the seat to lift it off the frame. Attach it again to the frame in the desired direction 1, 3.

❗ Ensure that the seat is securely attached by lifting it up and ensuring it does not come loose.

Folding The Stroller

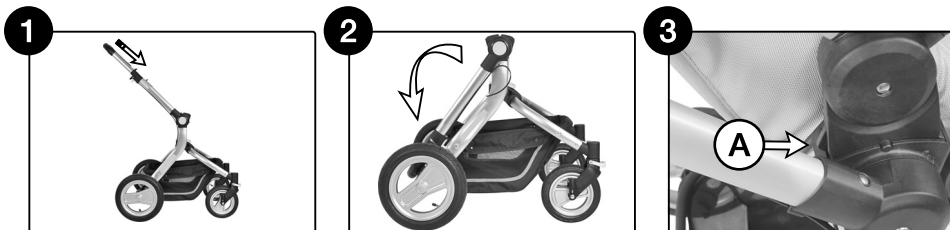


Folding The Handle

Press the height adjustment button on the handle to lower the handle to lowest position ❶, then pull up on both the handle reversing adjusters to fold down the handle ❷.

Removing The Seat


Simultaneously press the safety release button (A) on both sides of seat unit and lift up the seat ❸.

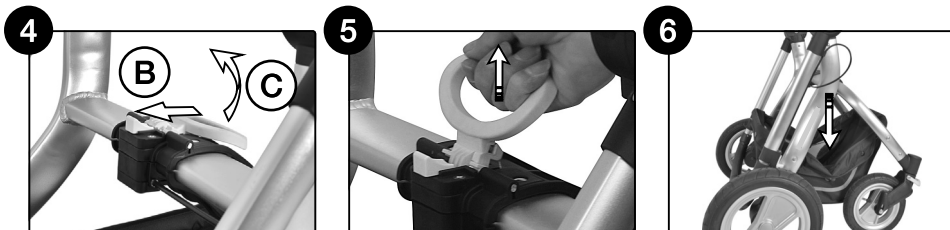

Fold the Frame

Simultaneously slide the stroller folding safety lock (B), ❹ and pull the stroller folding handle (C) up ❺. Then push down on the center of the basket ❻ and the frame will fold inwards ❼.

Folding The Stroller (Cont.)

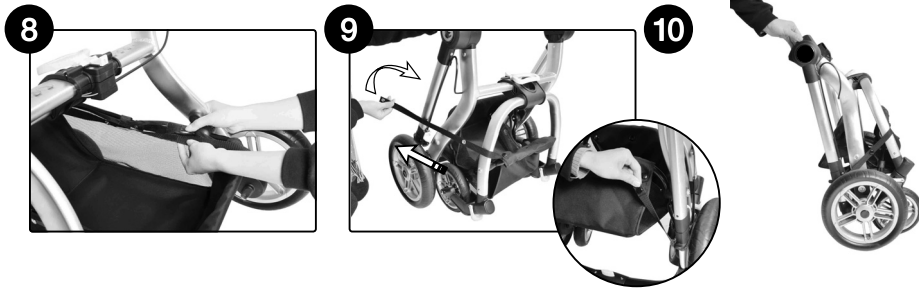


Using the Storage Strap

With the stroller folded, detach the storage strap from the hook-and-loop on the side of the basket ⑧. Undo the the strap's fastener and loop it around the nearest leg and handle ⑨. Fasten the strap and ensure it is secure ⑩.

⚠ When unfolding the stroller, ensure that the storage strap is secured to the hook-and-loop in the basket so it does not get damaged.

Optional Accessories

Rain Cover (supplied with some models)

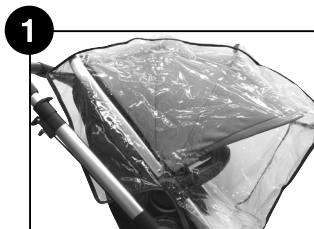

Using the Rain Cover

Simply place the Rain Cover over the Seat Unit, ensuring it comfortably and securely protects the child **1**.


Mosquito Net (supplied with some models)



Using the Mosquito Net

Simply place the Mosquito Net over the open portion, ensuring it comfortably and securely protects the child **1**.

Foot Cover (supplied with some models)

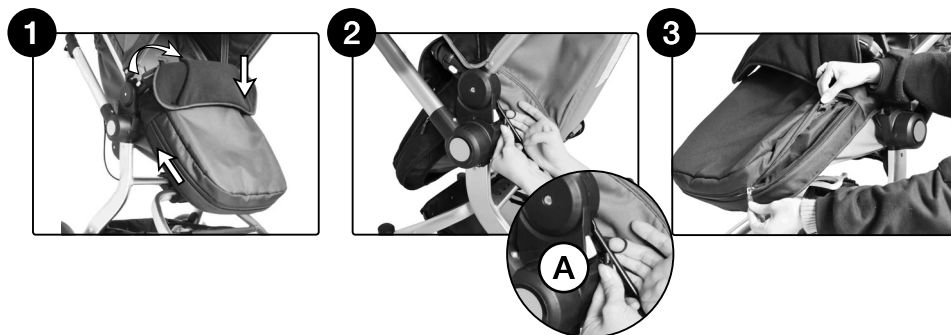


Using the Foot Cover

Place the foot cover over the lower section of the seat unit. Ensure the fleece flap is under the handrail, then fold down over the handrail and fasten the press studs ❶. On either side of the foot cover, locate the elastic loops and secure to the seat unit support bar (A) ❷. Use the zipper on the foot cover for additional leg room ❸.

Travel System (not supplied)

❗ Travel System accessories sold separately.

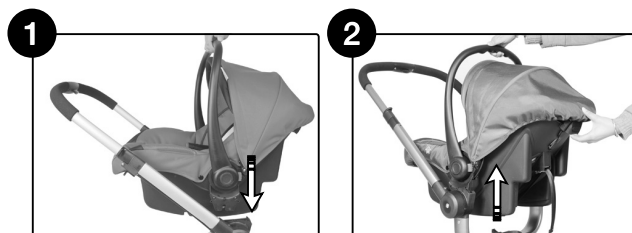

Attaching the Car Seat

Attach the car seat to the frame by lining up the adaptors with the two connector slots in the stroller frame and pushing down on the car seat until you hear a “click” on each side ❶.

Removing the Car Seat

Simultaneously press the safety lock buttons on both sides of the adaptors on the car seat and lift to release the car seat from the stroller ❷.

Care and Maintenance

This stroller requires regular maintenance by the user.

- Never force mechanisms or moving parts. If in doubt, please refer to the instructions.
- Clean plastic and metal parts with a damp cloth or a light detergent.
- Do not use abrasive solvents such as ammonia, bleach or any spirit based cleaners.
- Keep the stroller in a dry place. If wet, dry the metal parts to prevent rust.
- Excessive and prolonged exposure to sunlight and or rain may cause the fabric or plastic to fade or change colour.
- If the stroller has been used on the beach, clean it to remove sand or salt from the mechanisms and wheels. Allow the stroller to dry completely before using or storing.
- Follow upholstery washing instructions as shown on the labels.
- Pushchairs should be serviced after an extended period of no use, if in doubt, contact your dealer or manufacturer.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



INFASURE PTY LTD

Phone: 02 4728 8080

Fax: 02 4728 8040

Customer Service Phone: 02 4728 8090

ABN: 52 149 173 660

Head Office And Registered Address:

110-114 Old Bathurst Rd, Emu Plains, NSW, 2750
P.O Box 487, Emu Plains, NSW, 2750

www.infasure.com.au

ISSUE B_2