

Uniden®

UH076SX-NB

Handheld UHF-CB Transceiver

For more exciting new products please visit our website:

Australia: www.uniden.com.au

New Zealand: www.uniden.co.nz

OWNER'S **MANUAL**

Warning

WATERPROOF: JIS7

Uniden's UH076SX-NB radio is designed to meet the water proofing standard of JIS7.

This Means:

Being defined as having no ingress of water when immersed at 1 metre for 30 minutes.

The UH076SX-NB will only meet this rating if fully assembled and all rubber seals and bungs are well maintained and correctly fitted. This means that the speaker microphone bung is inserted, and the battery pack and antenna are attached and securely fastened.

LITHIUM ION BATTERY PACK WARNING

- This equipment contains a Lithium Ion Battery Pack.
- The Lithium Ion Battery Pack contained in this equipment may explode if disposed of in a fire.
- Do not short-circuit the Battery Pack.
- Do not charge the Lithium Ion Battery Pack used in this equipment in any charger other than the one designed to charge this Battery Pack. Using another charger may damage the Battery Pack or cause the Battery Pack to explode.
- Lithium Ion batteries must be disposed of properly.



NOTE

USER LICENSE INFORMATION

The citizen band radio service is licenced in Australia by ACMA Radio-communications (Citizen Band Radio Stations) Class Licence and in New Zealand by MED General User Licence for Citizen Band Radio and operation is subject to conditions contained in those licenses.

Contents

Introduction	
Features	4
Included in your Package	5
Optional Accessories	5
Controls and Indicators	6
Getting Started	
Mounting the Drop-in Charger	7
Attaching the Antenna	7
Attaching the Battery Pack	8
Attaching the Beltclip	8
Charging the Battery Pack	9
Battery Level Display	10
SPKR/MIC Jack Cap	10
Connecting the SPKR/MIC	10
Operation	
Power On/Off	11
Volume	11
Adjusting the Key Beeps	11
Roger Beep	12
Selecting Channel	12
Squelch	13
To Transmit and Receive	14
Using a Repeater Channel	15
To Operate UH076SX-NB in Duplex Mode	16
Scanning	16
Open Scan (OS) Mode	16
Group Scan (GS) Mode	17
Programming Scan Channels	18
Priority Channel	18
Choosing a Priority Channel	18
Drop-Out Delay	18
Advanced Features	19
CTCSS	19
VOX	19
Power Save	20
Back Lighting	20
Keypad Lock	21
Busy Channel Lock-out (BCL)	21
Monitor	21
CTCSS Codes and Frequencies	22
UHF-CB Channel Guidelines	23
UHF-CB Channels and Frequencies	24
Warranty	26

Introduction

The UH076SX-NB is a JIS7 Waterproof, portable two-way UHF-CB radio. It is compact, rugged and fits easily in your hand. This hand held UHF-CB radio will give you consistent, outstanding performance in virtually all conditions and situations. To ensure that you get the most from the UH076SX-NB features, please read this operating guide carefully before using the unit.

FEATURES

- Narrow Band (NB) Radio
- Communicate with up to 77 Channels in the UHF-CB Band¹
- 5W Max TX Power
- 1W/5W Switchable TX Power
- Built-in AVS Circuitry²
- Waterproof (meets JIS7 waterproof specifications)³
- Rubber Grips/Seal
- 38 Built-in CTCSS codes
- Backlit Keypad & LCD Display
- Duplex Mode¹
- Open and Group Scan
- Busy Channel Lockout Function
- VOX Function
- Headset Jack
- Keypad Lock
- Battery Type: Lithium-Ion Rechargeable
- Low Battery Alert
- Battery strength Indicator
- Auto Battery Save
- Battery Cover with charge contacts
- Roger Beep

¹ Refer to p.23 - p.25 for channel information

² AVS - Automatic Volume Stabilizer detects and manages incoming audio to comparable levels.

³ The UH076SX-NB radio meets waterproof (JIS7) specifications only when the battery, the antenna and speaker MIC jack cap are correctly installed. The UH076SX-NB will retain its JIS7 rating when the accessory Speaker MIC is connected correctly but the Speaker MIC itself is not splash or waterproof.

Included in your Package




UH076SX-NB




AC Adapter
(AAD-075S(M))



Antenna



Drop-in Charger
(DT075A)




Lithium Battery
(BP075)




Beltclip



Owner's Manual

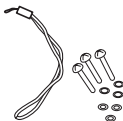

Wrist Strap and
Mounting Screws



Speaker Mic
(SM078)




If any of these items are missing from the box, contact your place of purchase, immediately.


Optional Accessories

- VOX Headset
- Heavy Duty Speaker Mic

Controls and Indicators

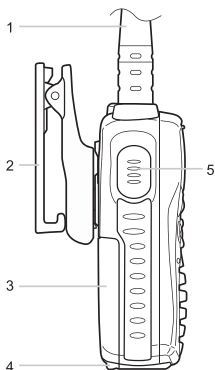

- 1 Antenna
- 2 Beltclip
- 3 Battery
- 4 Battery Release Clip
- 5 PTT (Push to Talk) Key
- 6 Memory Key (mem)
- 7 Scan Button (scan)/
Busy Channel Lock-Out
Mode (bcl)
- 8 TX Power/Lock Button
- 9 Microphone
- 10 Speaker MIC Jack
- 11 ON/OFF VOL Knob
- 12 Squelch Knob (SQ)
- 13 LCD Display
- 14 Monitor Button (mon)
- 15 Open Scan/Group Scan
(os/gS)/VOX
- 16 Channel Up Button (▲)
- 17 Duplex Key (dup)/
CTCSS Key (ctcss)
- 18 Channel Down Button (▼)
- 19 Speaker

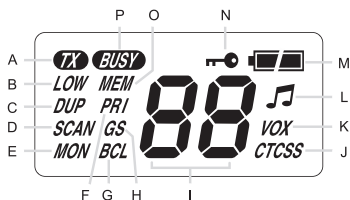

- A Transmit
- B 1W Power
- C Duplex Transmit
- D Scanning
- E Monitor
- F Priority
- G Busy Channel Lock Out
- H Group Scanning
- I Channel Numbers
- J CTCSS
- K VOX
- L Roger Beep
- M Battery Level Indicator
- N Key Lock
- O Memory
- P Receive

Getting Started

Mounting the Drop-in Charger

1. Mount the drop-in charger to either a table or wall.




Table:

Attach the drop-in charger using the mounting screws and washers.

Wall:


Insert the two mounting screws into the wall keeping the same space as the holes on the charger.

Place the charger with the screws through the larger holes then turn the charger.



2. Plug one end of the AC adapter into the wall outlet and the other end into the drop-in charger.

When you mount the drop-in charger in a mobile vehicle, use the optional cigarette lead instead.

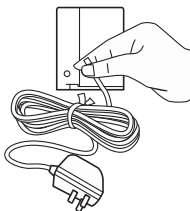

Attaching the Antenna


Attach the antenna to the UH076SX-NB. Be sure the antenna is firmly seated.



Getting Started

Attaching the Battery Pack

1. Place the battery pack onto the back of the radio. It will only fit in one way.
2. Snap the battery release clip until it clicks. Be sure the battery pack fits tightly against the UH076SX-NB body.

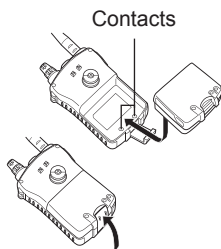

CAUTION

Avoid exposing the Lithium Ion battery, attached or unattached to the radio, in direct sunshine, heated cars, or in areas with temperatures below -20°C (-4°F) or above $+60^{\circ}\text{C}$ ($+140^{\circ}\text{F}$).


Exposing the chemicals contained within the battery pack to temperatures above $+60^{\circ}\text{C}$ ($+140^{\circ}\text{F}$) may cause the battery to rupture, fail or reduce performance.

In case of exposure to cell contents, wash the affected area thoroughly, and seek medical attention.

Additional battery cautions should be applied as described on p.2.


Attaching the Beltclip

1. Hold the beltclip in the direction.
2. Apply it to the hanger piece on the back of the radio. Then slide it up.
3. You will hear a click. The beltclip is firmly attached.

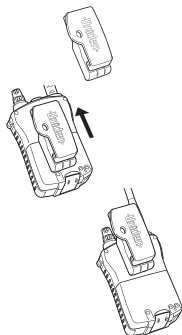

Getting Started

4. To take the beltclip off the radio, turn it and slid it up.

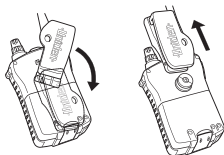

Charging the Battery Pack

Your radio is powered by a specially designed Lithium Ion battery pack.

- Before operating the UH076SX-NB, charge the Lithium Ion battery pack for 5 hours without interruption in the drop-in charger.

1. Place the UH076SX-NB in the drop-in charger.



2. The red LED illuminates and stays ON, until fully charged.

- The charger won't overcharge the battery pack. When charging is completed, the charge LED is no longer illuminated.
- **Do not transmit when the UH076SX-NB is in the drop-in charger!**
- You can monitor incoming calls while the UH076SX-NB is in the drop-in charger.



Getting Started

Battery Level Display

The BATTERY icon in the top right hand corner of the screen indicates the UH076SX-NB current battery voltage level at all times. The battery level is displayed in 4 levels.

LEVEL 4

Battery 100% full




LEVEL 3

Battery approx.
40% capacity




LEVEL 2

Low Battery



LEVEL 1

(flashing)
Empty Battery



When **PTT** is pressed at Level Empty, battery icon and channel number will flash, transmission is disabled.



Recharge the battery at any time. From empty the battery will take up to 5 hours to fully charge.

Battery Life : 12 Hours (Typical)

This is based on the following Duty Cycle:

Transmit (Low Power)	5%
Receive	5%
Stand-by	90%

SPKR/MIC Jack Cap

Make sure the SPKR/MIC jack cap is firmly pushed in to maintain submersible rating.

Connecting the SPKR/MIC


Release the SPKR/MIC jack cap to plug in the SPKR/MIC. Secure the SPKR/MIC plug by tightening the plug collar clockwise.

Operation

- See the Controls and Indicators page at the back of this operating guide for button and key operations.

Power On/Off

To turn the unit **ON**, rotate the **[ON/OFF VOL]** clockwise. A channel number and battery level should appear on the display.

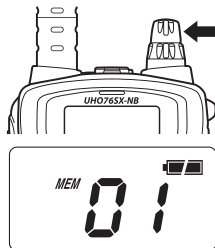

To turn the unit **OFF**, rotate the **[ON/OFF VOL]** knob counter-clockwise. The display will disappear.

Volume

Rotate the **[ON/OFF VOL]** knob clockwise or counter-clockwise to adjust speaker volume to desired listening level.

Adjusting the Key Beeps


Your radio emits a beep each time one of the keys (except for the PTT or mon) are pressed.


To turn OFF this beep: Press and hold **dup** while turning on the radio.
To turn ON this beep: Press and hold **dup** while turning on the radio.

Operation

Roger Beep

Roger Beep is a BEEP that is sent to notify the end of transmission (both PTT and VOX transmission.) Roger Beep can be heard through the speaker when Key Beep is on. Roger Beep is transmitted even if key beep is turned off. However Roger Beep will not be heard from the speaker.

To turn ON Roger Beep: Press and hold  while turning on the radio.

To turn OFF Roger Beep: Press and hold  while turning on the radio.

Selecting Channel

Press  or  to select the desired channel.



NOTE

If you press and hold the  or , channel number will scroll rapidly.



NOTE

For your reference a list of the available channels, corresponding frequencies and guidelines for their use and selection is printed on page 23. For Australia, Channels 05 and 35 are reserved for Emergency Calls.

Operation


Squelch

The squelch is used to eliminate any annoying background noise when there are no signals present.




Make sure to first select a channel not in use before setting the squelch in your UH076SX-NB UHF-CB radio.

Think of squelch as a gate. Turn **[SQ]** fully clockwise. This raises the “Squelch Gate” so high that only the very strong signals can get through.

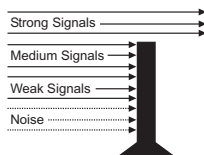

Turn **[SQ]** fully counter clockwise until you hear a hiss. This opens the “Squelch Gate” so that everything gets through noise, weak signal, and strong signals.

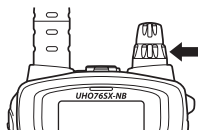

To set the “Squelch Gate” to the desired level, turn **[SQ]** counter-clockwise until you hear noise. Then turn the **[SQ]** clockwise just until the noise stopped. Now only the desired signal can get through.



If an incoming signal is very weak there is a possibility that you will have a choppy or broken reception, due to the sensitivity of the squelch. In this case, simply rotate the **[SQ]** clockwise until the weak signal is heard clearly.

Operation

To Transmit and Receive

The UH076SX-NB uses the UHF-CB Channels. For your reference a list of the available channels and corresponding frequencies is printed on p.24 - p.25.

1. The maximum RF transmit power of UH076SX-NB is 5 Watts.

To switch to low power, press **(1/5w)**. **LOW** appears on the LCD.



To switch back to higher power, press **(1/5w)** again. **LOW** indicator disappears from the LCD.

2. Before you transmit, listen for activity on the selected channel.
3. When the channel is clear, press and hold the **(PTT)** to transmit. **TX** appears on the LCD.



Hold the radio with microphone approximately five cms in front of your mouth with the antenna at approximately 45° angle away from your head. Speak in a clear, normal conversational voice.

4. When you have finished speaking, release the **(PTT)** and listen for a response. **TX** indicator then disappears on the LCD.



The display shows **BUSY** when a transmission is being received by your radio.

Operation

Using a Repeater Channel


UHF-CB Repeaters are used to retransmit or relay your signal. Repeaters will extend the range of your radio and overcome the shielding effect caused by solid obstructions.

In normal Simplex operation, your radio transmits on one particular frequency and receives on that same frequency. If there is a barrier (i.e. a Tall Building) that partially blocks your transmitted signal, the possibility of the other radio receiving the signal is very slim. Valleys, metallic structures, etc., tend to act as a screen between radios.

Standard Operation without the aid of a Repeater Station



Operation with the aid of a Repeater

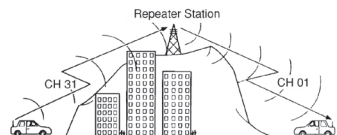

With Duplex operation, the signal coming from your radio is received by the Repeater station and then re-transmitted at the same time on another channel.

Your UH076SX-NB is designed with duplex capability on Channels 1 to 8 and Channels 41 to 48. When any of these channels are set to operate in duplex mode during transmission, the UH076SX-NB automatically sends the signal at a frequency 30 channels above the original in order to access the repeater station. After transmitting, the radio reverts back to its original operating frequency.

For example:

1. CH01 is on Duplex Mode - will receive on CH01 but Transmit on CH31
2. CH41 is on Duplex Mode - will receive on CH41 but Transmit on CH71, etc... Refer to UHF-CB Channel & Frequencies table on p.24 - p.25.

Operation

To Operate UH076SX-NB in Duplex Mode

Only channels 01 - 08 and 41 - 48 are available for Duplex.

Eg. CH01 is being used in your area for repeater use.

Press **(dup)** momentarily. The **DUP** icon appears.

Press **(dup)** again to deactivate the duplex operation.
UH076SX-NB will return to simplex operation.



Check with your local retailer for available repeaters.

Scanning

The UH076SX-NB has two types of scanning; Open Scanning (OS) and Group Scanning (GS). Scanning allows you to search for active channels programmed in the OS or GS memory.

To initiate scanning;

Press **(scan)** and scanning starts. **SCAN** icon flashes during scanning.

Open Scan (OS) Mode

The absence of GS icon indicates that the unit is in OS mode. Allows continuous scanning of channels stored in the Open Scan (OS) memory. If an active channel is found, scanning will stop on that channel.



The factory has preprogrammed all the UHF-CB channels into the Open Scan channel memory. However, you can change or customize the channels by following the steps on programming Scan Channels on page 18.

Example: CH80 becomes active

If the received signal ceases, the unit will wait for at least 3 seconds for the signal to return, otherwise scanning resumes.

To skip the active channel, press **(mem)** momentarily. Scanning resumes.

To deactivate SCAN, press **(scan)** or **(PTT)**.

Operation



NOTE

If SCAN is deactivated while in an active channel, the UH076SX-NB will stay on that active channel. If no other channels are active, the UH076SX-NB will reinstate the starting channel.

Group Scan (GS) Mode

Allows you to monitor a Priority Channel while scanning.

To use GS Mode Scanning, press the **os/gS** key. **GS** icon appears on the display.

GS Scanning checks the Priority channel activity regularly.



NOTE

If GS Scanning is initiated when there are no channels programmed in GS memory, an error tone will be heard and scanning will not start.

If the Priority channel becomes active the radio will stay on that channel for as long as the signal is present. If the received signal ceases, Priority scanning continues after 3 seconds.



NOTE

If scanning stops on a channel which is not a Priority Channel the UH076SX-NB will continue monitoring the Priority Channel for activity while listening to the active one.

To deactivate SCAN, press **scan** or **PTT**.



NOTE

If SCAN is deactivated while it is turned to an active channel, the UH076SX-NB will stay on that active channel. If none of the channels are active, the UH076SX-NB will reinstate the Priority channel.

Operation

Programming Scan Channels

1. Select which Scanning Mode you wish to use OS or GS Mode.



OS is indicated by the absence of the GS icon.

2. Select the channel you want to store by pressing or .
3. Press and hold for 1.5 secs. to store. **MEM** icon appears and two short tone beeps are heard.
4. To remove the channels from Memory, press and hold for 1.5 secs. once more. Two short tone beeps are heard and the **MEM** icon disappears.

Priority Channel

The Priority Channel feature allows the user to monitor one channel in the UH076SX-NB, monitoring it every 1.5 secs. during Group Scanning.

Choosing a Priority Channel

The starting channel, when Group Scanning is initiated, is always the Priority Channel. To change the priority channel setting while scanning, (eg. PRI Channel is CH17 (476.825 MHz));

- a. press , to select a higher channel (scanning pauses).

or

- b. press , to select a lower channel (scanning pauses).



Drop-out Delay

While scanning, the UH076SX-NB stops at a busy channel and receives a signal. When the received signal is over, the unit will wait for 3 seconds for the return of the signal, otherwise, the radio resumes scanning.

Operation

Advanced Features

CTCSS (Continuous Tone Coded Squelch System)

CTCSS is a feature that allows a group to talk to each other without hearing other users on the same channel.

Programming CTCSS Code

1. Select a desired channel to be used with CTCSS.
2. Press and hold **(ctcss)** for 1.5 secs. **CTCSS** icon blinks.
3. Press **(▲)** or **(▼)** to select the desired CTCSS code.
4. Press **(ctcss)** to save the selected code. **CTCSS** icon stops blinking.



NOTE

The UH076SX-NB will return to standby mode after 10 secs. of no activity. CTCSS code can be programmed on every channel. There are 38 available CTCSS tone per channel.

CTCSS Scan Operation

1. Press **(scan)** to start scanning (GS or OS) mode.
2. Press and hold **(ctcss)** to change to CTCSS scan mode.
3. When a signal is sensed on a CTCSS CH, the UH076SX-NB stops for about 400 msecs (decode time) to decode the CTCSS code. If there is no code or the receive code does not match the one programmed on the unit, the unit resumes scanning.



NOTE

Channels 5 and 35 are used for emergency channels. CTCSS will not operate on these channels.

VOX

- **Built-in Voice Activated Circuit (VOX)** feature enables the user to transmit automatically by speaking on the microphone of the VOX headset (not supplied) without pressing the PTT switch.

Operation



VOX feature will not work without the VOX Headset Microphone. The built in mic of UH076SX-NB is temporarily disabled when VOX feature is working, however accidental pressing of **PTT** will cause the unit to transmit briefly.

To activate VOX

1. Press and hold **VOX** for 1.5 secs. **VOX** icon blinks.
2. Press either **▲** or **▼** within 10 secs to select the desired VOX sensitivity level (9 with the lowest sensitivity to 1 with the highest sensitivity).
3. Press **VOX** to save the selected level. VOX icon stops blinking.
4. Install VOX Headset (not supplied) to UH076SX-NB.

To De-activate VOX

1. Remove VOX Headset from UH076SX-NB.
2. Press and hold **VOX** for 1.5 secs. until VOX blinks.
3. Press **▼** repeatedly and until **oF** is displayed.
4. Press **VOX** to save the setting. **VOX** icon disappears.



Changing the VOX sensitivity setting to oF without removing the microphone will cause the unit to transmit continuously.

Power Save

Battery Save feature extends the battery life by switching the receiver circuit power ON and OFF. This feature automatically activates during standby mode (RX mode without signal).

Back Lighting


The Liquid Crystal Display (LCD) and function keys are backlit for easy viewing at night or in low light situations. The back lighting automatically switches ON every time a key (except PTT) is pressed. It turns OFF 5


Operation

secs after the last key is pressed.

Keypad Lock

To prevent accidental entries, you can lock the keypad.

Press and hold the **lock** button until it beeps to activate Key Lock.  icon appears.

To unlock the keypad, press and hold the **lock** button again.  icon disappears.



When the Key Lock is active, a warning beep will be heard if you attempt to press keys. (except for the PTT button).

Busy Channel Lock-out (BCL)

This feature prevents accidental transmission on a busy channel. This is recommended on channels where CTCSS is being used. If you hear sound from the speaker (unless it's in Monitor Mode -- see below), the BCL feature will prevent you from transmitting.

To activate BCL

Press and hold **bcl** for 1.5 secs. until **BCL** appears on display.

To De-activate BCL

Press and hold **bcl** for 1.5 secs. until **BCL** disappears from the display.

Monitor

This feature enables users to listen in for weak signals on the current channel at the press of a button.

To use monitor

- For brief listening, press **mon**.
- For continuous listening. Press and hold **mon** for 2 sec. A two tone beep will be heard and the receiver circuit will stay open letting in both the noise & weak signals.
- Display shows **MON** and **BUSY** icons.
- To return to normal receive mode press **mon**.

CTCSS Codes and Frequencies

Code No.	Frequency (Hz)	Code No.	Frequency (Hz)
"oF"	OFF	20	131.8
1	67.0	21	136.5
2	71.9	22	141.3
3	74.4	23	146.2
4	77.0	24	151.4
5	79.7	25	156.7
6	82.5	26	162.2
7	85.4	27	167.9
8	88.5	28	173.8
9	91.5	29	179.9
10	94.8	30	186.2
11	97.4	31	192.8
12	100.0	32	203.5
13	103.5	33	210.7
14	107.2	34	218.1
15	110.9	35	225.7
16	114.8	36	223.6
17	118.8	37	241.8
18	123.0	38	250.3
19	127.3		

UHF-CB Channel Guidelines



NOTE

Always listen on a channel (or observe the receive signal level meter) to ensure it is not already being used before transmitting.

Channels 5 and 35 are used for emergency channels.

CTCSS will not operate on these channels.

Please follow these guidelines for channel use in Australia:

- Channels 05 and 35 are Emergency Channels.
- Channel 11 is a Calling Channel.
- Channels 22 and 23 are for telemetry and telecommand applications and TX is inhibited on these channels.

General communication is accepted on all other channels with these guidelines:

- Channel 40 - road channel (Australia).
- Channels 01-08 (and 31-38), and Channels 41-48 (and 71-78) are repeater channels.

Important information - 80 Channel UHF-CB channel expansion

To provide all users additional channel capacity within the UHF-CB Band. The ACMA will change the majority of the current wideband 40 channel use to narrowband channel use. This allows for additional channels to be added, up to 80 (77 usable) Channels.

This simply means that the new narrowband radio you have purchased will have more channels than older radios. Please refer to the guidelines above and the channel chart for further channel information.

A list of currently authorised channels can also be obtained from the ACMA website in Australia and the MED website in New Zealand.



NOTE

Interference / Poor Audio

When a new narrowband radio receives a signal from an older wideband radio the speech may sound loud - however the UH076SX-NB's built-in AVS (Automatic Volume Stabilizer) circuitry will detect and manage incoming audio to comparable levels.

Narrowband radios operating on CH41 - CH80 may encounter interference from a nearby wideband radios transmitting on high power on an adjacent channel (frequency).

When an older wideband radio receives a signal from a new narrowband radio the speech may sound quiet - the wideband radio user simply adjusts their radio volume for best performance.

The above situations are not a fault of the radio but a symptom of mixed wideband and narrowband radios in current use. It is expected that as older wideband radios are phased out this issue will be eliminated.

UHF-CB Channels and Frequencies

CH No.	Simplex Mode Transmit / Receive Frequency (MHz)	Duplex Mode Transmit Frequency (MHz)	CH No.	Simplex Mode Transmit / Receive Frequency (MHz)
1	476.425	477.175 (CH31)	21	476.925
2	476.450	477.200 (CH32)	22	476.950 (RX only)
3	476.475	477.225 (CH33)	23	476.975 (RX only)
4	476.500	477.250 (CH34)	24	477.000
5	476.525	477.275 (CH35)	25	477.025
6	476.550	477.300 (CH36)	26	477.050
7	476.575	477.325 (CH37)	27	477.075
8	476.600	477.350 (CH38)	28	477.100
9	476.625		29	477.125
10	476.650		30	477.150
11	476.675		31	477.175
12	476.700		32	477.200
13	476.725		33	477.225
14	476.750		34	477.250
15	476.775		35	477.275
16	476.800		36	477.300
17	476.825		37	477.325
18	476.850		38	477.350
19	476.875		39	477.375
20	476.900		40	477.400

UHF-CB Channels and Frequencies

CH No.	Simplex Mode Transmit / Receive Frequency (MHz)	Duplex Mode Transmit Frequency (MHz)	CH No.	Simplex Mode Transmit / Receive Frequency (MHz)
41	476.4375	477.1875 (CH 71)	61	N/A (guard CH)
42	476.4625	477.2125 (CH 72)	62	N/A (guard CH)
43	476.4875	477.2375 (CH 73)	63	N/A (guard CH)
44	476.5125	477.2625 (CH 74)	64	477.0125
45	476.5375	477.2875 (CH 75)	65	477.0375
46	476.5625	477.3125 (CH 76)	66	477.0625
47	476.5875	477.3375 (CH 77)	67	477.0875
48	476.6125	477.3625 (CH 78)	68	477.1125
49	476.6375		69	477.1375
50	476.6625		70	477.1625
51	476.6875		71	477.1875
52	476.7125		72	477.2125
53	476.7375		73	477.2375
54	476.7625		74	477.2625
55	476.7875		75	477.2875
56	476.8125		76	477.3125
57	476.8375		77	477.3375
58	476.8625		78	477.3625
59	476.8875		79	477.3875
60	476.9125		80	477.4125

Warranty

UNIDEN UH076SX-NB UHF CB Transceiver

IMPORTANT: Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor: The warrantor is either Uniden Australia Pty Limited ABN 58 001 865 498 ("Uniden Aust") or Uniden New Zealand Limited ("Uniden NZ") as the case may be.

Terms of Warranty: Uniden Aust/NZ warrants to the original retail purchaser only that the UH076SX-NB ("the Product"), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty period: This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire three (3) years from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner's Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust or Uniden NZ;
- (C) Improperly installed contrary to instructions contained in the relevant Owner's Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered: This warranty covers the Product and included accessories.

User-generated Data: This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Warranty

Statement of Remedy: If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for obtaining warranty service: Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Phone: 1300 366 895
Email: custservice@uniden.com.au

UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki
Auckland 2013
Phone: (09) 273 8377
Email: service@uniden.co.nz

THANK YOU FOR BUYING A UNIDEN PRODUCT.

Uniden®

© 2011 Uniden Australia Pty Limited. Uniden New Zealand Ltd. Printed in China.
UTZZ01913BA(0)